

**1** Read Me First!


# Quick start guide

- A** Connect/Setup
- B** Enjoy




# PHILIPS


# What's in the box

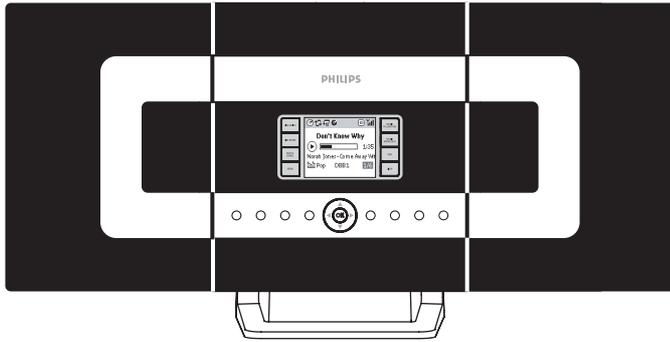


Wireless music center

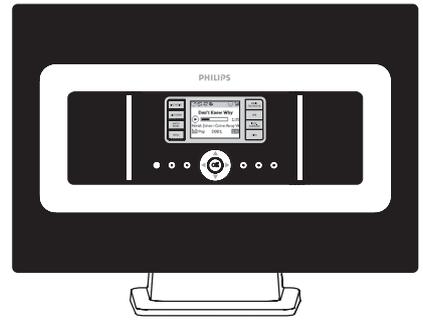

Wireless music station

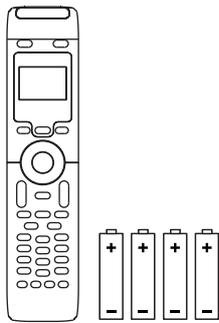

Center's remote control  
4xAAA batteries

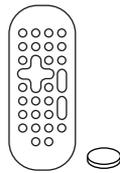

Station's remote control  
1xCR2025 batteries



Quick start guide




User manual




Connect to your PC




PC installer

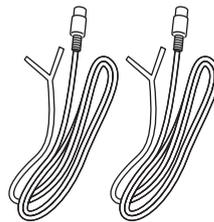

2 x FM wire antenna

 

1 x Ethernet cable

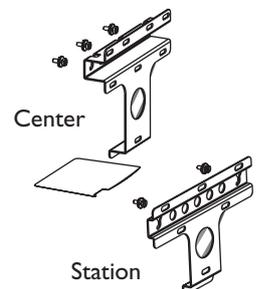

2 x Mounting kit  
for center & station

# A


# Connect/Setup

## Set up Wi-Fi connection between Center and Station

After you power up WACS700, the Wi-Fi connection will start automatically between WAC700 Center and WAS700 Station.

1


The first time you set up the Wi-Fi connection, place WAC700 **Center** and WAS700 **Station** side by side on a flat and firm surface.

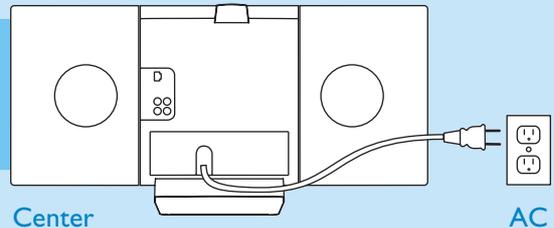

2

Connect WACS700 to power supply, **first** the Center and then the Station

- Center/Station:
- The screen lights up. Auto installation/connection starts.
  - You will enter **HD** (Harddisk) mode when the installation/connection is finished.

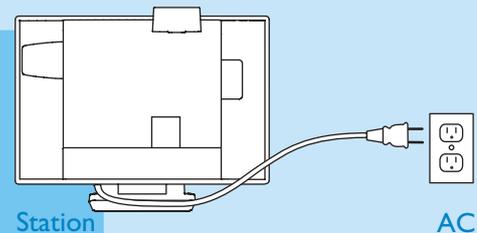

3

Relocate Center and Station as desired: **plug and stream**

- Simply unplug your Center or Station and power them up in different rooms.
- You will be able to move the harddisk music between Center and Station.

### IMPORTANT!

- Avoid thick walls. Your Center and Station should never be blocked by 2 or more walls.
- Keep your Center and Station away from the source of interference, for example: plasma TVs, microwave ovens, DECT phones, bluetooth devices, cordless phones, other Wi-Fi products.
- Adjust the location of your Center and Station according to the reception status of Wi-Fi signals  
📶 : indicates maximum reception; 📶 : indicates minimum reception
- For wall mounting, you need to ask for help from the qualified person. For details, see **User Manual, Appendix: How to mount your Center and Station onto walls.**

### Plug & stream

- Make sure you have powered up Center before powering up Station.

# B


# Enjoy

## Play Harddisk (HD)

On WAC700 Center's 40GB\* hard disk, you can centrally store up to 750 audio CDs. On a connected WAS700 Station, you can play all the music stored on the hard disk.

1

Press **STANDBY ON** to switch on the **Center** or **Station**

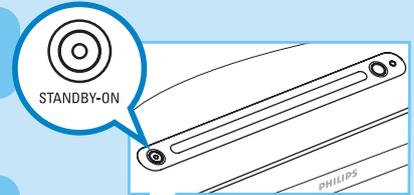


2

Press **SOURCE** once or more to select **HD** source on the **Center** or **Station**

- You will enter HD (Harddisk) mode.


3

Use the navigation controls ▲ ▼ ◀ ▶ to select your playback options

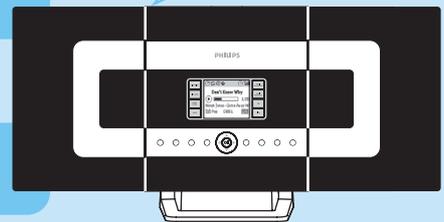

4

Press **OK** or ▶ to start playback

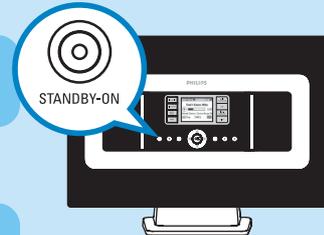


5

To change your playback options,

- press ◀ once or more to enter previous option lists
- Use the navigation controls ▲ ▼ ◀ ▶ to select
- Press **OK** or ▶ to confirm

6

To stop playback, press **STOP** / ■

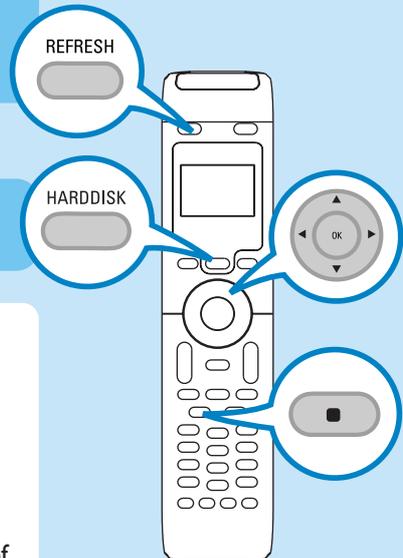

### Tips:

- Demo tracks are stored under **Playlists**.

### IMPORTANT!

- Remove the protective plastic tab before using the Station's remote control.
- By default, Center's remote control works with Center only. **To operate Station using Center's remote control,**
  - Press and hold **REFRESH** until the select screen appears on the display of Center's remote control.
  - Press the navigation controls ▲ or ▼ and ▶ to select **Station**



\* Actual free space is 35GB or less, due to the firmware, music CD database and demo tracks stored.

# B

## Move between Center and Station

Up to 5 WAS700 Stations can be connected to WAC700 Center. Via Wi-Fi, music can move between Center and Stations. Even in different places of your house, you and your family will enjoy and share music with ease.

### MUSIC FOLLOWS ME

As you move around at home, let music move around you, from **Center** to **Station** or from **Station** to **Center**.

1

**On the first unit (Center or Station), where music will leave**

During HD playback, press **MUSIC FOLLOWS ME** to activate

- The  icon appears.

2


**On the second unit (Center or Station), where music will continue**

Within 5 minutes, press **MUSIC FOLLOWS ME**

- Selected music stops on the first unit and continues on the second unit. The  icon disappears.

3

To stop **MUSIC FOLLOWS ME**, press **STOP / ■** on the second unit

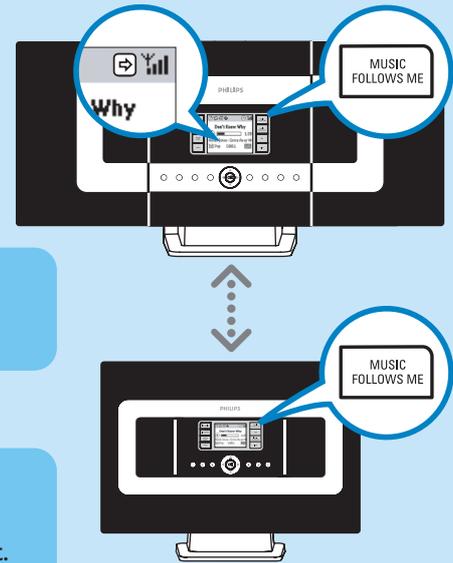

#### Tips:

- Check you have selected HD, CD or AUX source on the second unit or have switched the unit to Standby mode.
- You must press **MUSIC FOLLOWS ME** on the first unit before pressing **MUSIC FOLLOWS ME** on the second unit.

### MUSIC BROADCAST

**MUSIC BROADCAST** allows you to broadcast music from **Center** to **Station(s)**.

1

**On Center**

During HD playback, press **MUSIC BROADCAST** to activate

- The  icon appears on Center and Station. 5-second countdown starts.


2

**On Center and Station**

- Selected music plays simultaneously after 5-second countdown.

#### Tips:

- Check you have selected HD or AUX source on the Station(s) or have switched the Station(s) to standby mode.
- **To broadcast again**  
Before you press **MUSIC BROADCAST**, check if you need to deactivate any earlier broadcasting. If the icon is still active in Center or Station's display. Press **STOP / ■** on **Center**. Then, follow the above steps 1-2.
- **During broadcasting, there may be slight playback delay between Center and Station if you power them up for the first time.**

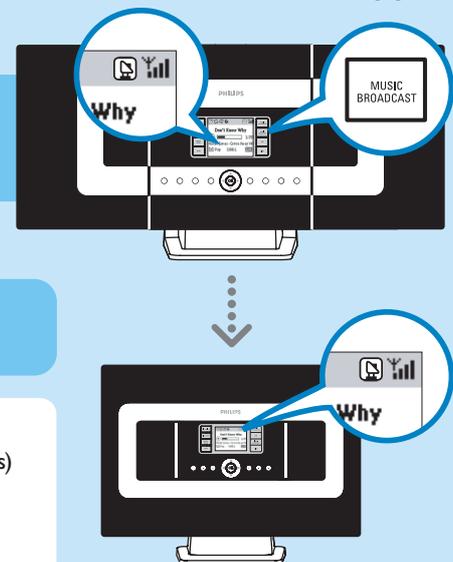

# Build music library on Center

You can store up to 750 audio CDs on **Center's** 40GB harddisk by **ripping CDs, Importing from** or **PC Recording from Radio or External source**


## Ripping CDs

1

Insert a CD into **Center's** CD loader, CD graphic printed side facing you.

- **Reading CD** appears.
- **Audio CD:** List of tracks appears
- **MP3/WMA:** List of file folders appears
- To enter a track list, press **▶** on a highlighted file folder


CD(RW)

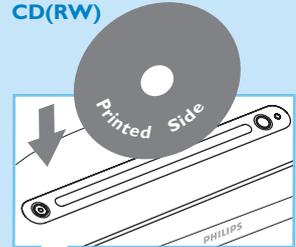

2

In the screen of track list, press **RECORD**

- Display shows ripping status of the CD
- List of track checkboxes appears.

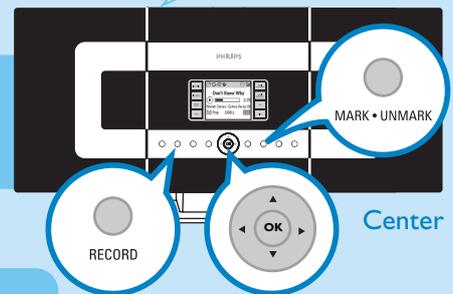

3

Press **MARK • UNMARK** once or more to select or deselect the tracks to be recorded

- To select/deselect all tracks, press and hold **MARK • UNMARK**



4

To select **Rec speed** (1x, 4x) and **Rec quality**,

- Press **MENU**.
- Use the navigation controls **▲ ▼ ◀ ▶** to enter **Settings** menu
- In **Settings** menu, use the navigation controls **▲ ▼ ◀ ▶** to select

5


To start recording, press **RECORD** or **OK**

- **CD-Rec** appears. Display shows the album name of the track being recorded.



6

To stop recording, press **STOP** / ■

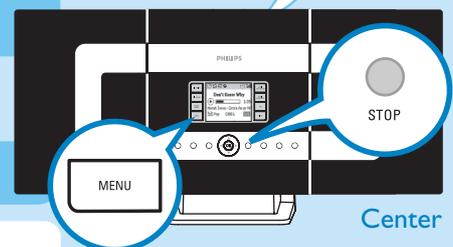

### IMPORTANT!

- It takes some time to convert the ripped tracks into MP3 files. During the conversion, the **ACTIVE** indicator lights up green. Do not remove Center's power plug from the wall outlet while the **ACTIVE** indicator is on and within 15 minutes after the indicator is off.

## To find your ripped tracks

After MP3 conversion is completed (the **ACTIVE** indicator is off), you can find and playback all the ripped tracks in **Albums**.

1

Select HD source

2


In **Albums**, use the navigation controls ▲ ▼ ◀ ▶ to find the album of recorded tracks.

Importing from your PC

See the manual **Connect to your PC**

Recording from Radio or External source

A maximum of 3-hour recording can be made from the radio or external source. See **User manual, Build music library on Center**

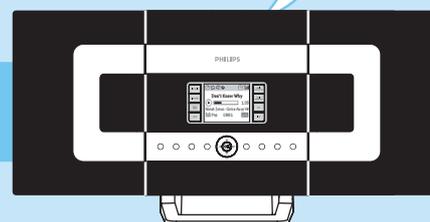

## Play CDs (on Center only)

For playback on the Center you can use:

- All pre-recorded audio CDs
- All finalized audio CDR and CDRW discs
- WMA & MP3-CDs (CD-R/CD-RW with MP3/ WMA files)

1

Insert a CD into **Center's** CD loader, CD graphic printed side facing you.

2

Use the navigation controls ▲ ▼ ◀ ▶ to select a track or album.

3



To start playback, press ▶ or **OK**

4

To stop playback, press **STOP** / ■

5

To remove the CD, press **EJECT**

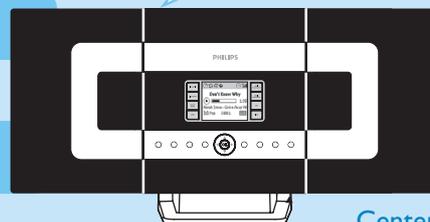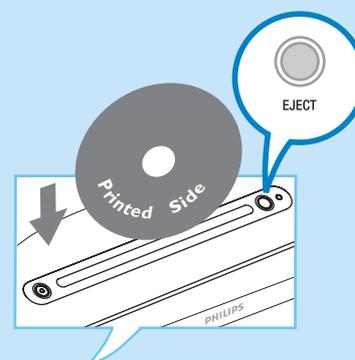

Center

# Listen to FM Radio

1

Check you have connected the supplied FM wire antenna to your Center and Station (see **User manual, Installation**)

2

Press **SOURCE** once or more to select **TUNER** source on the **Center** or **Station** (on the remote control, press **TUNER/AUX** once or more)

3

To select **Autostore radio**

- press **MENU**
- Use the navigation controls ▲ or ▼ and ► to select
  - Display shows: **Autostore Please wait...**
  - You can store up to 40 preset radio stations in the memory (including a maximum of 10 RDS stations). After all stations are stored, the first autostore preset station will then automatically play

4


Press ◀ to enter the list of presets

5

Use the navigation controls ▲ or ▼ and ► to select your desired station

To enjoy all the product features, read the manuals:

- **User manual:** find out details on how to use Center and Station.
- **Connect to your PC:** find out how to connect to a PC, configure networks, and how to transfer and manage your music collection using **Philips Digital Media Manager (DMM)**.

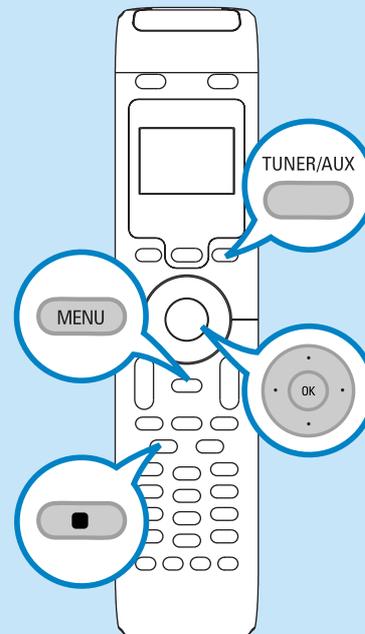

Need help?

[www.philips.com/support](http://www.philips.com/support)

2005 © Koninklijke Philips Electronics N.V.  
All rights reserved.

[www.philips.com](http://www.philips.com)



Be responsible  
Respect copyrights

3141 075 20761①