


# Quick Start Guide

## 1 Charge the built-in battery

- 1 Switch the **ON/OFF** slide selector to the **OFF** position.
- 2 Connect the supplied AC adaptor to the **DC IN 12V** socket on the DVD Player and to the AC outlet.

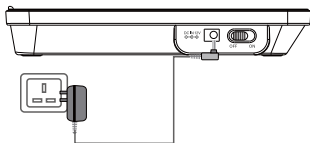


- ✓ The red charge indicator turns on. It takes about 4 hours to fully charge the battery.
- ✓ When the battery is fully charged, the red charge indicator turns off.

### Tip

- You can only charge the battery when the temperature is between 0°C and 35°C.
- When headphones are connected to the DVD Player, the fully charged battery lasts about 2.5 hours.

## 2 Install remote control battery

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

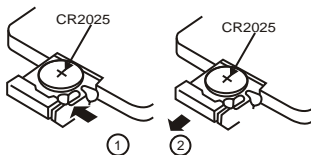

## 3 Play discs

- 1 Lift the display panel.
  - 2 Switch the **OPEN** slide selector to the right to open the disc compartment.
    - (For the first time) Remove the protective card.
  - 3 Insert a disc with the printed side facing up.
  - 4 Push the lid down to close the disc compartment.
- ✓ Disc starts to play automatically. If not, press **OK** or **▶||**.
  - ✓ If a menu appears, select an item and then press **OK** to start play.

## 4 Connect a TV

On the DVD Player;

- 1 Connect the black end of the supplied AV cable to the **AV OUT** socket.

On the TV,

- 1 Connect the white end to the left audio input socket and the red end to the right audio input socket.
- 2 Connect the yellow end to the video input socket.

