



Philips  
CD Soundmachine

USB

AZ1048

## Enjoy music wherever you go

Handy and compact design, enjoy music from different source : USB direct, MP3-CD, radio

### Enjoy your music from different sources

- USB Direct for MP3/WMA music playback
- Play MP3/WMA-CD, CD and CD-RW
- FM/MW (AM) stereo tuner

### Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalized music enjoyment
- Stereo headphone socket

### Enhanced bass performance

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Highlights

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

## CD Shuffle/Repeat



The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play
- Programmable Tracks: 20
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

## Tuner/Reception/Transmission

- Tuner Bands: FM, MW (AM)
- Antenna: FM Antenna

## Sound

- Output power (RMS): 2 X 1W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3.5"
- Volume Control: rotary

## Convenience

- Display Type: LCD

## Connectivity

- USB: USB host
- Headphone: 3.5 mm

## Power

- Battery type: LR14
- Battery voltage: 1.5 V
- Mains power: 220 - 240V and 110 - 127V, 50/60Hz AC voltage selectable
- Number of batteries: 6

## Accessories

- Included accessories: AC Power Cord, \*Flat pin adaptor, User Manual, Warranty Leaflet

## Dimensions

- Packaging dimensions (W x H x D): 320 x 275 x 175 mm
- Product dimensions (W x H x D): 291 x 146 x 243 mm
- Weight: 1.5 kg
- Weight incl. Packaging: 2 kg



Issue date 2014-02-13

Version: 2.0.3

12 NC: 8670 000 67477  
EAN: 87 12581 56206 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.  
\* Music with Digital Right Management not supported.  
\* Adaptor supplied is needed for all Latin American countries, except in Brazil.