Always there to help you

Register your product and get support at www.philips.com/welcome










Short User Manual

Augus flore to May plants and pla

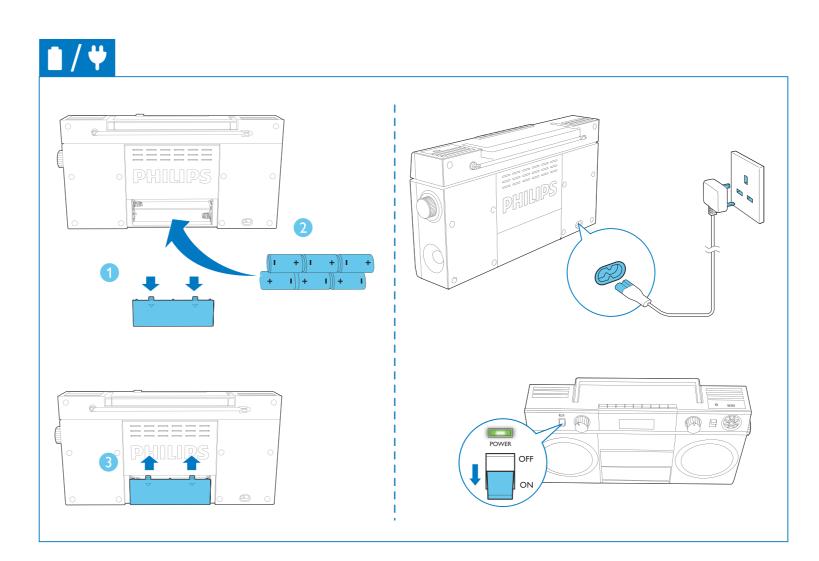

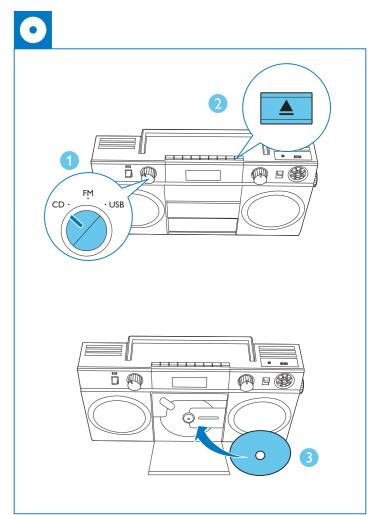

PHILIPS

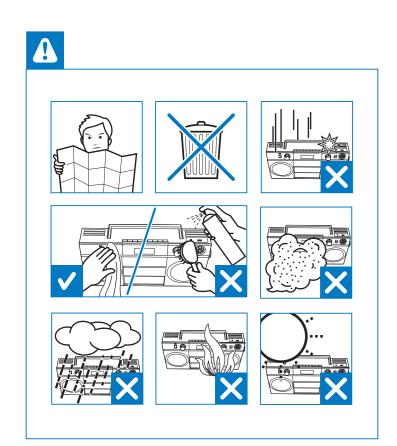





All registered and unregistered trademarks are property of their respective owners.


© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

OS685_05_Short User Manual_V1.0




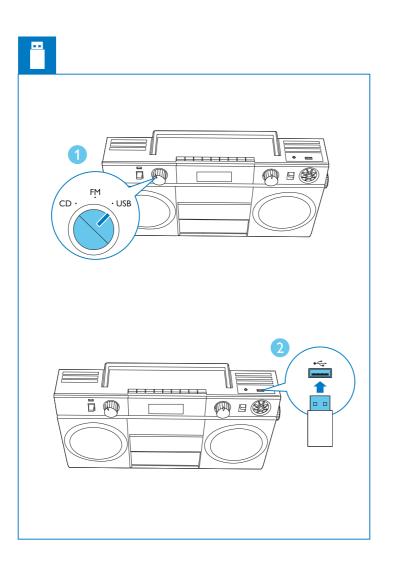

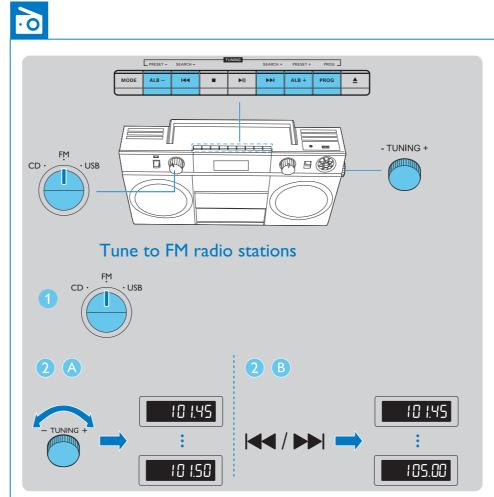

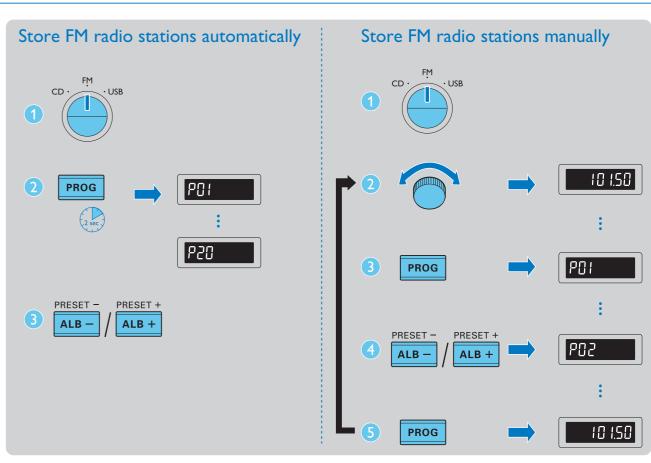



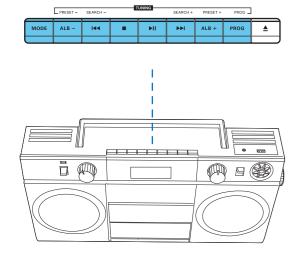



Control play


44/▶▶	Select an audio file; Press and hold to fast-forward or fast-reverse the track during playback, then release to resume play.
ALB- / ALB+	Skip to the previous or next MP3/WMA album.
≻ II	Start or pause play.
•	Stop play.
MODE	(**\text{\$\text{\$\chi}\$}]: Play the current track repeatedly. (*\text{\$\text{\$\chi}\$} \) Enay the current album repeatedly. (*\text{\$\chi}\$ \) Enay all tracks repeatedly. *\text{\$\chi}\$]: Play tracks randomly. To return to normal play, press MODE repeatedly until the repeat or shuffle icons disappear:


Program tracks

- 1 In CD or USB mode, press to stop playback.
- 2 Press PROG to activate the programming mode.
- 3 For MP3/WMA tracks, press ALB -/ALB + to select an album.
- 4 Press ◄ / ▶ to select a track number, then press PROG to confirm.
- 5 Repeat steps 3 to 4 to program more tracks.
- 6 Press ►II to play the programmed tracks.
- To erase the program, press \blacksquare twice.

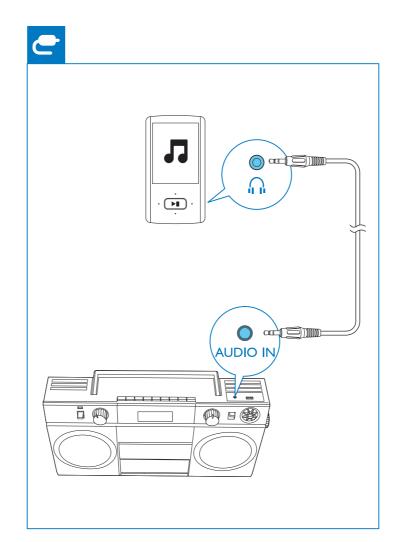

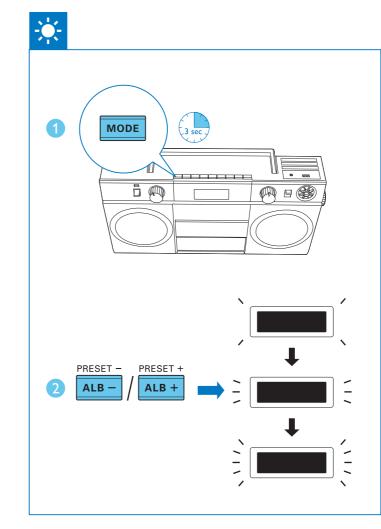

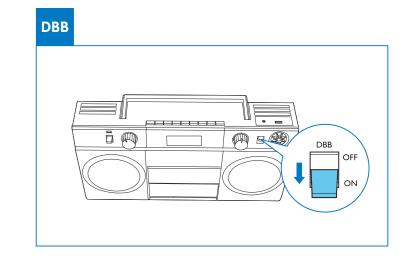

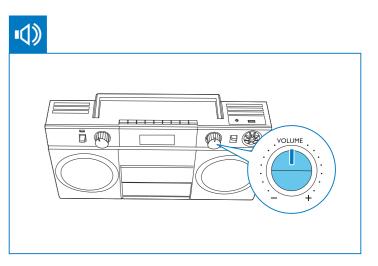

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.





F

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.




The type plate is located on the bottom of the apparatus.

Important

- Read these instructions.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Only use attachments or accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- · Remove batteries when the unit is not used for a long time.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Tropical condition has been considered and complied.
- The unit shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



- Never remove the casing of this unit.
 Never place this unit on other electrical equipment.
 Never look into the laser beam inside this unit.
- Caution
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

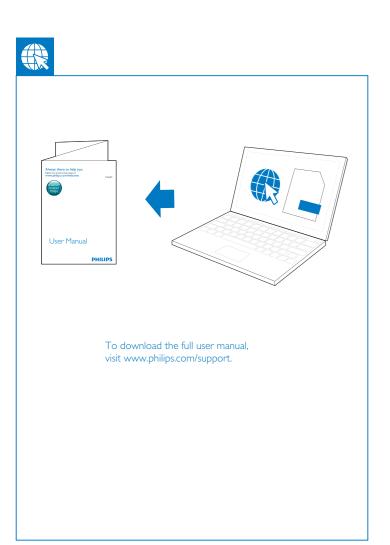

Max Output Power Total 7 W 125 -16000 Hz, -3dB Frequency Response Signal to Noise Ratio >55 dBA Total Harmonic Distortion <1 % Audio-in Input 650 mV RMS Laser Type Semiconductor 12cm/8cm Disc Diameter CD-DA. CD-R. CD-RW. MP3-CD. Support Disc WMA-CD 24Bits / 44.1kHz Audio DAC Tuning Range 87.5 - 108MHz 50 kHz Tuning grid Sensitivity <22 dBf - Mono, 26dB S/N Ratio <51.5 dBf - Stereo, 46dB S/N Ratio Total Harmonic Distortion <3% Signal to Noise Ratio >50 dBA Power Supply 220-240 V~, 50/60 Hz; - AC Power 6 x 1.5 V R14/UM2/C CELL - Battery Operation Power Consumption 15 W Standby Power Consumption < 0.5 W Max. Loading (USB) 5 V == 500 mA Dimensions - Main Unit (W x H x D) 447 x 230 x 116 mm Weight (Main Unit) 2.3 kg

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

electronic products.

Mains fuse

power cord.

· the ratings shown on the plug,

Notice

components, which can be recycled and reused.

 a BS 1362 approval, and the ASTA approval mark.

This information applies only to products with a UK mains plug.

Contact your dealer if you are not sure about what type of fuse to use.

This product is fitted with an approved molded plug. If you replace the fuse, use one with:

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the

This product complies with the radio interference requirements of the European

Any changes or modifications made to this device that are not expressly approved by Philips

Please inform yourself about the local separate collection system for electrical and

Please act according to your local rules and do not dispose of your old products with your

normal household waste. Correct disposal of your old product helps to prevent potential

Consumer Lifestyle may void the user's authority to operate the equipment.

Your product is designed and manufactured with high quality materials and

the product is covered by the European Directive 2002/96/EC.

negative consequences for the environment and human health.

When this crossed-out wheeled bin symbol is attached to a product it means that

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags,

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.