

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

PET727/58



---

EN User manual

---

RU Руководство пользователя

---

UK Посібник користувача

---

**PHILIPS**

# Contents

---

<b>1</b>	<b>Important</b>	4
	Important safety instructions	4
	Notice	7

---

<b>2</b>	<b>Your portable DVD player</b>	9
	Introduction	9
	What's in the box	10
	Overview of the main unit	11
	Overview of the remote control	13

---

<b>3</b>	<b>Get started</b>	15
	Charge the built-in battery	15
	Install remote control battery	16
	Connect additional equipment	17
	Install the DVD player in a car	19
	Turn on	19
	Select an OSD language	19

---

<b>4</b>	<b>Use your player</b>	20
	Play discs	20
	Play options	21

---

<b>5</b>	<b>Adjust settings</b>	24
	Select language options	24
	Get the DivX <sup>®</sup> registration code	24
	Select video options	25
	Select audio options	27
	Select play preferences	27
	Select JPEG play options	30

---

<b>6</b>	<b>Product information</b>	30
----------	----------------------------	----

---

<b>7</b>	<b>Troubleshooting</b>	31
----------	------------------------	----

---

<b>8</b>	<b>Glossary</b>	32
----------	-----------------	----

# 1 Important

---

## Important safety instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.

- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑯ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).



### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

---

## Hearing safety

### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To

guard against this, set your volume to a safe level before your hearing adapts and leave it there.

### **To establish a safe volume level:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### **Listen for reasonable periods of time:**

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### **Be sure to observe the following guidelines when using your headphones.**

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



#### **Caution**

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## **Notice**

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

---

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

 
Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Always bring your product to a professional to remove/replace the battery.

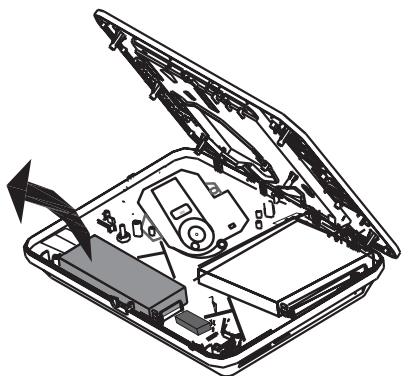

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



Manufactured under license from Dolby Laboratories. 'Dolby' and the double D symbol  are trademarks of Dolby Laboratories.



"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

**This apparatus includes this label:**



## 2 Your portable DVD player








Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Introduction

Your Portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you can play movies with cinema-like picture and stereo (depending on the disc and your playback set-up).

You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can set parental control to prevent your children to see certain discs.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R, DVD±RW, and DivX):

	DVD-Video
	Video CD
	Super video CD
	Audio CD
	DivX <sup>®</sup> CD
	MP3 CD
 JPEG	Discs with JPEG files



---

 
# What's in the box

Check and identify the contents of your package:

- Portable DVD Player
- Remote control
- Battery for remote control
- AC power adaptor (ADS-18C-12N 12012GPG)
- Car adaptor
- AV cable
- Car pouch
- User Manual
- Quick Start Guide


---

# Overview of the main unit

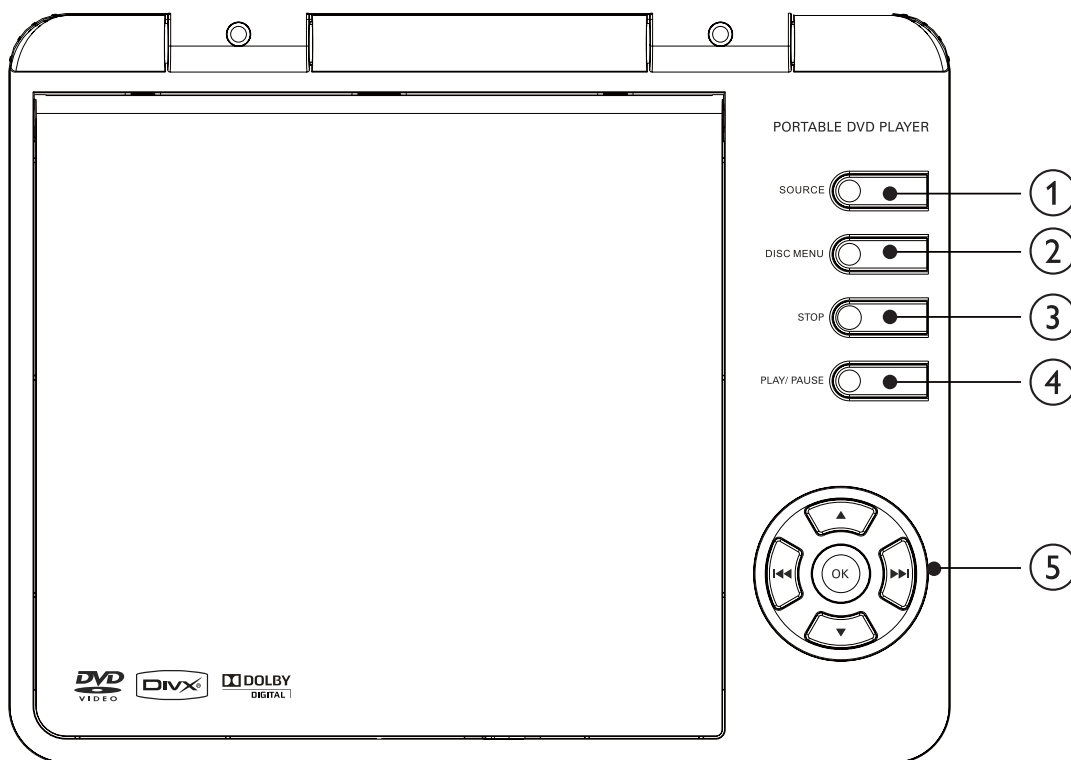


- ① **SOURCE**
  - Switch between DISC and USB.
- ② **DISC MENU**
  - For DVD, access or exit the root menu
  - For VCD and SVCD, turn PBC (playback control) on or off in PBC mode

 - ③ **STOP**
- Stop disc play
- ④ **PLAY/PAUSE**
- Start, pause or resume disc play
- ⑤ **Navigation keys**
- ▲ / ▼ / ◀◀ / ▶▶
- Select the up/down/left/right item
- ◀◀ / ▶▶
- Press to skip to the previous or next title/chapter/track
  - Press and hold for fast-backward or fast-forward search
- OK**
- Confirm an entry or selection

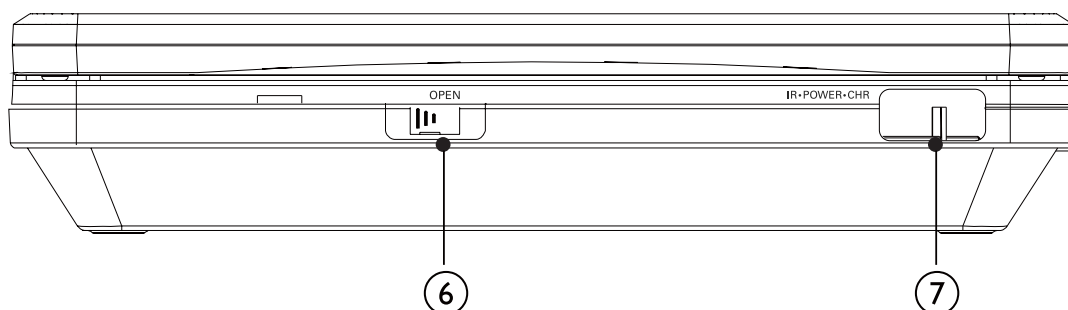

 
- ⑥ **OPEN**
- Open the disc compartment
- ⑦ **IR/POWER/CHR**
- Remote sensor, power indicator, or charge indicator

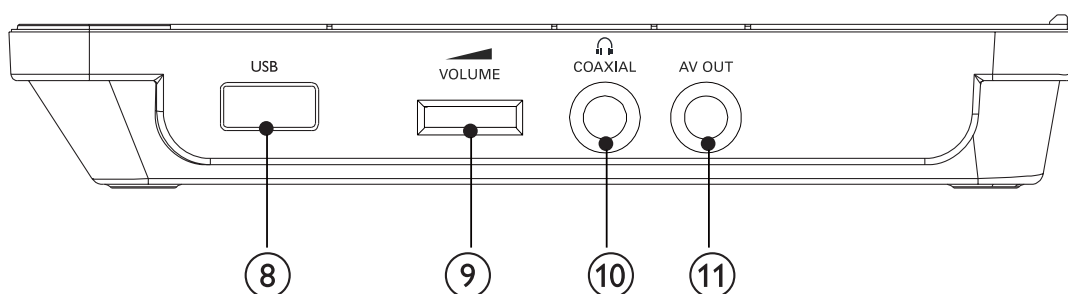

- ⑧ **USB**
- USB socket.
- ⑨ **VOLUME + / -**
- Adjust volume level


- ⑩ **COAXIAL**
  - Connect headphones
  - Socket for coaxial output

 - ⑪ **AV OUT**
  - Socket for audio/video output

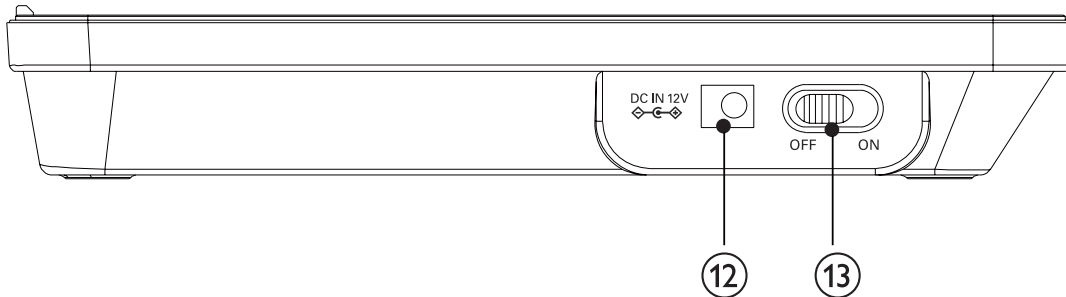

- ⑫ **DC IN 12V**
  - Power supply socket
- ⑬ **POWER ON / OFF/CHR**
  - Turns on/off DVD player.

## Overview of the remote control

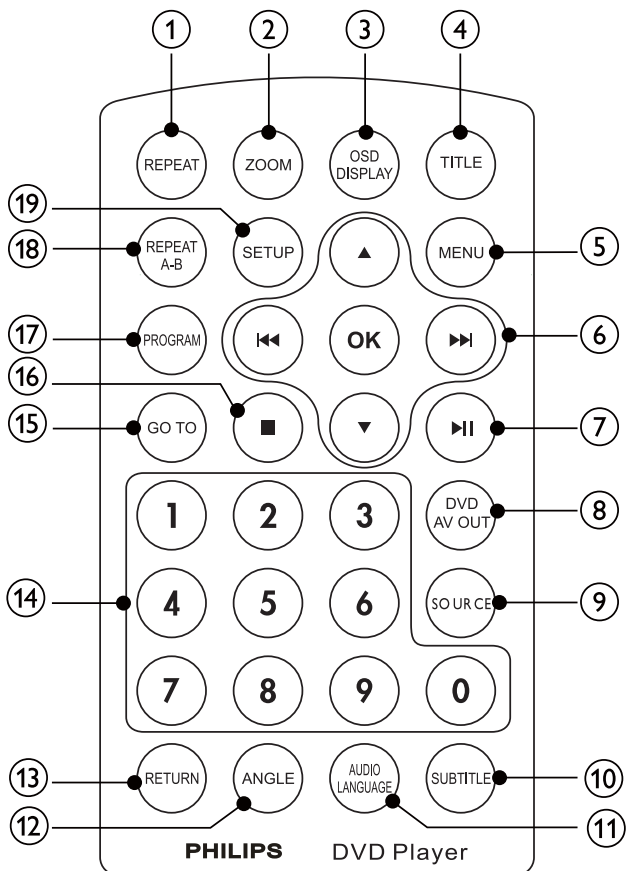 

- ① **REPEAT**
  - Select a repeat mode
- ② **ZOOM**
  - Zoom into or out of an image
- ③ **OSD DISPLAY**
  - Display the current play status or disc information
- ④ **TITLE**
  - Access or exit the title menu of a disc
- ⑤ **MENU**
  - For DVD, access or exit the root menu
  - For VCD and SVCD, turn PBC (playback control) on or off in PBC mode
- ⑥ **▲ / ▼ / ◀◀ / ▶▶**
  - Select the up/down/left/right item
- ◀◀ / ▶▶**
  - Press to skip to the previous or next title/chapter/track
  - Press and hold for fast-backward or fast-forward search
- OK**
  - Confirm an entry or selection
- ⑦ **▶ ||**
  - Start, pause or resume disc play
- ⑧ **DVD AV OUT**
  - Switch between [TV Mode (PAL)], [Dual Screen (NTSC)] and [AV OUT OFF]
- ⑨ **SOURCE**
  - Switch between DISC and USB.
- ⑩ **SUBTITLE**
  - Select a subtitle language
- ⑪ **AUDIO LANGUAGE**
  - Select an audio language or an audio channel
- ⑫ **ANGLE**
  - Select a viewing angle of a DVD
- ⑬ **RETURN**
  - (For VCD, PBC on) Return to the previous menu

- ⑭ **Numeric Keypad 0 - 9**
  - Select an item to play
- ⑮ **GO TO**
  - Skip to a chapter/track/title or a play time
- ⑯ **■**
  - Stop disc play
- ⑰ **PROGRAM**
  - Access or exit the program menu
- ⑱ **REPEAT A-B**
  - Mark the section for repeat play
- ⑲ **SETUP**
  - Access or exit the setup menu

## 3 Get started



### Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Charge the built-in battery



### Caution

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



## Note

- You can only charge the player when it is in power-off mode.

- 1 Switch the **POWER ON / OFF/CHR** slide selector to the **OFF/CHR** position.
- 2 Connect the supplied AC adaptor to the **DC IN 12V** socket on the player and to the AC outlet.

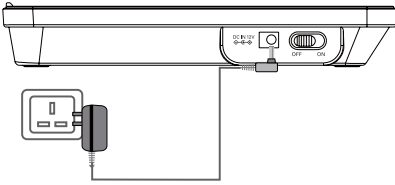

- ↳ The red charge indicator turns on. It takes about 4 hours to fully charge the battery.
- ↳ When the battery is fully charged, the red charge indicator turns off.



## Tip

- You can only charge the battery when the temperature is between 0°C and 35°C.
- When headphones are connected to the player, the fully charged battery lasts about 2.5 hours.
- To maximize battery life, recharge the battery immediately after the battery is fully discharged.
- When the player is not in use, turn it off.

---

## Install remote control battery



### Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

**1** Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- 1** Open the battery compartment.
- 2** Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3** Close the battery compartment.

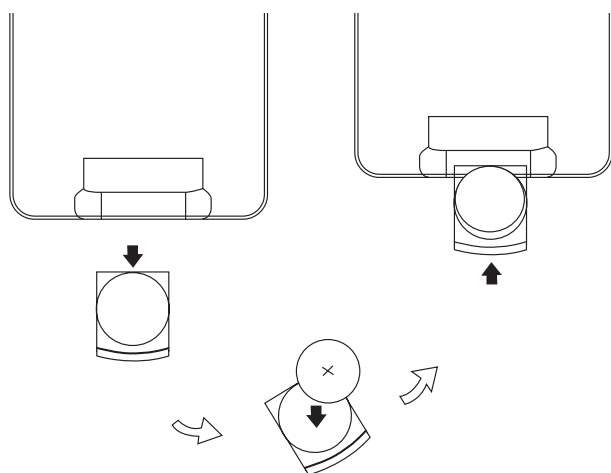

---

## Connect additional equipment



### Caution

- Before you connect your player to any additional equipment, turn it off.

You can connect the player to a TV or an amplifier to enjoy DVDs or Karaoke.

 
## Connect a TV

On the player,

- 1 Connect the black end of the supplied AV cable to the **AV OUT** socket.


On the TV,

- 1 Connect the white end to the left audio input socket and the red end to the right audio input socket.
- 2 Connect the yellow end to the video input socket.

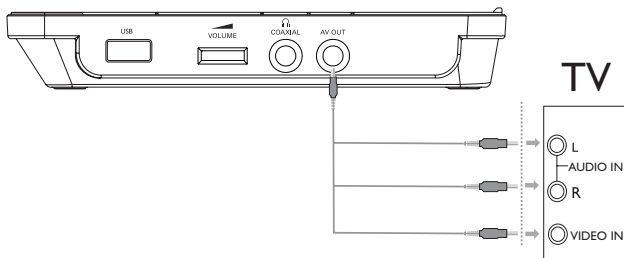

## Connect an amplifier

 - 1 On the player, connect the black end of AV cable (not supplied) to the **COAXIAL** socket.
- 2 Connect an amplifier with a Dolby digital stereo system only with the yellow end of AV cable.

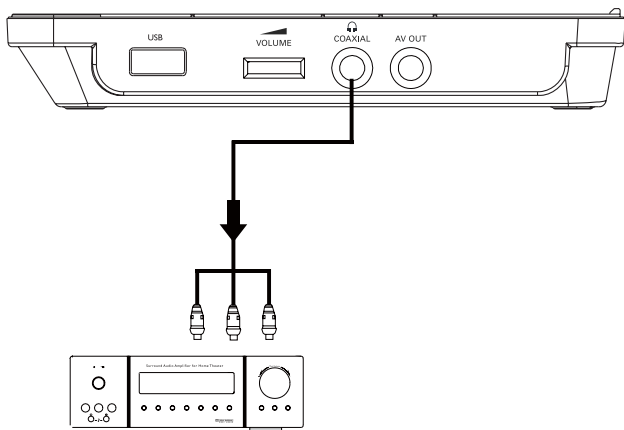


## Connect a stereo system

- 1 On the player, connect the black end of the supplied AV cable to the **AV OUT** socket.
- 2 On the TV, connect the yellow end to the video input socket.



 - 3 On the amplifier with a Dolby digital stereo system, connect the white end to the left audio input socket and the red end to the right audio input socket.

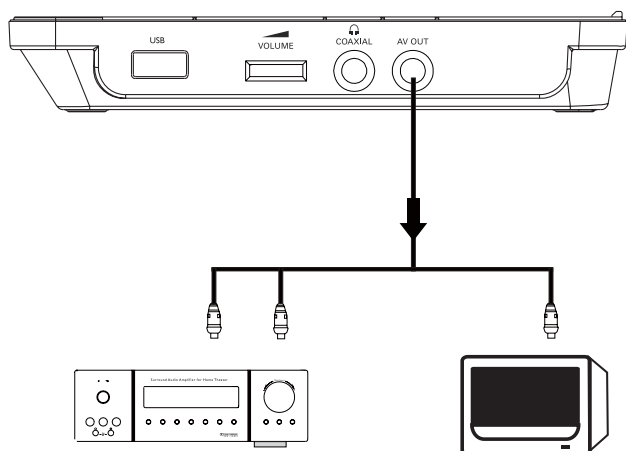

---

## Install the DVD player in a car



### Warning

- While this player is being used in your vehicle, be sure it is safely secured and does not obstruct safety devices like air bags or seat belts.

- 1 Strap the car pouch over your car seat headrest.
- 2 Insert the DVD player into the pouch.
- 3 Close the buckle and adjust the belt until it fits tightly around the headrest.



### Tip

- You can place the DVD player anywhere in the car as long as the cable length allows. Fasten the pouch straps if you do not put the DVD player inside the pouch.

---

 
## Turn on

- 1 Switch the **POWER ON / OFF/CHR** slide selector to the **ON** position.  
↳ The green power indicator turns on.

## Select an OSD language

You can select an OSD language for the on-screen display.

- 1 Press **SETUP**.  
↳ The setup menu is displayed.

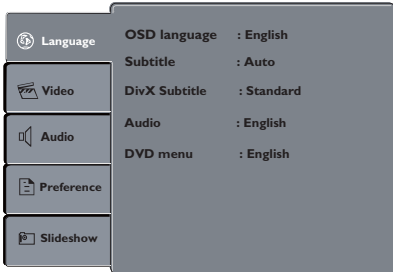

- 2 Select [**Language**], and then press ►►.
- 3 Select [**OSD language**], and then press ►►.
- 4 Select an option, and then press **OK** to confirm.
- 5 Press **SETUP** to exit.

## 4 Use your player

### Play discs

Before you play a DivX disc, use a DivX® registration code (see 'Get the DivX® registration code' on page 30) to download DivX® movies from the Internet, and then copy them to a recordable disc.



#### Note

- Ensure that the player is connected to an AC power socket or the built-in battery is charged fully.

- 1 Lift the display panel.
- 2 Switch the **OPEN** slide selector to the right to open the disc compartment.
  - (For the first time) Remove the protective card.
- 3 Insert a disc with the printed side facing up.
- 4 Push the lid down to close the disc compartment.

- ↳ Disc starts to play automatically. If not, press **OK** or **▶||**.
- ↳ If a menu appears, select an item and then press **OK** to start play.

During play,

- To pause, press **PLAY/PAUSE / ▶||**.
- To resume, press **PLAY/PAUSE / ▶||** again.
- To stop, press **STOP / ■**.



#### Tip

- With the player, you can play subtitle files in the following formats: .srt, .smi, .sub, .ssa, and .txt.
- Ensure that you save the subtitle file (.sub) with the same movie file (.avi) in the same folder.

---

## Play options

---

### Activate PBC

For VCDs with Playback Control (PBC) feature (version 2.0 only) and SVCDs,

- 1 Press **MENU**.
- 2 Select **[PBC On]**.
  - ↳ The disc menu (if available) appears.

During play,

- Press **◀◀** after the first 5 seconds, play starts from the beginning of the current track.
- Press **◀◀** within the first 5 seconds, play goes to the previous track.
- If PBC on, press **RETURN** to return to the menu screen.



#### Tip

- If PBC is on, you cannot use numeric keypad (0-9) to select a track.

---

## Program

For VCD/SVCD/DVD discs,

- 1 During play, press **PROGRAM** on the remote control.

- ↳ The program menu is displayed.
- 2 Select a title, and then press **OK** to confirm.
- 3 Select a chapter, and then press **OK** to confirm.
  - Select a track, and then press **OK** to confirm.
- 4 Press **PROGRAM** twice, and then repeat steps 2 and 3 to program other title/chapter/track.
- 5 To play the program, select **[Play]** and then press **OK** to confirm. In the Program menu,
  - To exit the program menu, press **PROGRAM** once.
  - To clear the latest program, select **[Clear]** and then press **OK** to confirm.
  - To clear all the program, select **[Clear All]** and then press **OK** to confirm.



#### Tip

- For VCD and SVCD discs, program is only available when PBC is set to **[PBC Off]**.

---

## Repeat

- 1 During play, press **REPEAT** repeatedly to select the following repeat options:
  - For DVD**
    - **[Repeat Chapter]** (current chapter)
    - **[Repeat Title]** (current title)
    - **[Off]**
  - For CD/VCD/SVCD**
    - **[Repeat Single]** (current track)
    - **[Repeat Folder]** (entire disc)
    - **[Off]**
  - For JPEG/MP3**
    - **[Repeat Single]** (current file)
    - **[Repeat Folder]** (current folder)
    - **[Off]**



## Tip

- For VCD/SVCD, if PBC is on, you cannot repeat items.

---

## Repeat a section

You can repeat a specific section of audio/video within a title/chapter/track (repeat A-B).

- 1 During play, at the chosen start point, press **REPEAT A-B**.
- 2 At the chosen end point, press **REPEAT A-B** again.  
↳ The selected section plays repeatedly.
- 3 Press **REPEAT A-B** to cancel.

---

## Rotate pictures

During play,

- 1 Press ▲ to rotate a JPEG picture anti-clockwise.
- 2 Press ▼ to rotate a JPEG picture clockwise.

---

## Skip to a title/track/chapter

To select the previous or next title/track/chapter,

- 1 During play, press ◀◀ or ▶▶.

To skip directly to any title/track/chapter,

- During play, enter the corresponding number with the numerical keys (0-9), and then press **OK** to confirm.
- Press **GO TO**, enter a number, and then press **OK** to confirm.

---

## Search

- 1 To search a section within a disc, press and hold ▶▶ or ◀◀.
  - During search, press and hold ◀◀ or ▶▶ to select a search speed.
- 2 Press ▶|| or **OK** to resume normal play.

---

## Select an audio language

For DVDs with two or more audio languages,

- 1 During play, press **AUDIO LANGUAGE** repeatedly to select a language.
- 

## Select an audio mode

For VCDs with two or more audio tracks,

- 1 Press **AUDIO LANGUAGE** repeatedly to select an audio channel: **[Left]**, **[Right]**, **[Mix]**, or **[Stereo]**.
- 

## Select a subtitle

For discs with multilingual subtitles,

- During play, press **SUBTITLE** to select a subtitle.
- 

## Select a view angle

To select a view angle for DVD,

- During play, press **ANGLE** repeatedly on the remote control.
- 

## View disc information

To view information on a DVD/VCD,

- During play, press **OSD DISPLAY** on the remote control.
- 

## Zoom

For DVD, VCD and JPEG CDs, you can zoom into or out of an image.

 
- 1 Press **ZOOM** repeatedly to zoom into or out of an image.
- 2 When the image is enlarged, press **▲ / ▼ / ►► / ◀◀** to pan through it.

# 5 Adjust settings

---

## Select language options

- 1 Press **SETUP**.
- 2 Select **[Language]**, and then press **►►**.

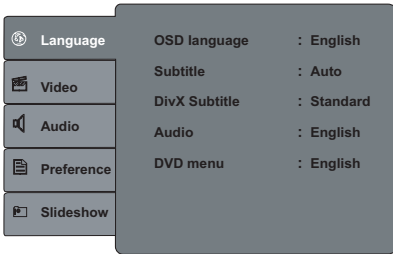


- 3 Select an option, and then press **OK** to confirm.
  - **[OSD language]**: Select an on-screen display language.
  - **[Subtitle]**: Select a disc subtitle language.
  - **[DivX Subtitle]**: Select a subtitle for a DivX disc.
  - **[Audio]**: Select a disc audio language.
  - **[DVD menu]**: Select a DVD menu language.
- 4 Select an option, and then press **OK** to confirm.
- 5 Press **SETUP** to exit.

---

## Get the DivX<sup>®</sup> registration code

 With the DivX<sup>®</sup> registration code, you can rent or purchase movies using the DivX VOD (Video on Demand) service on the Internet. For details, visit the website: <http://www.divx.com/vod>.

- 1 On the main unit, press **SETUP**.
- 2 Select **[Preference]**, and then press **▶▶**.

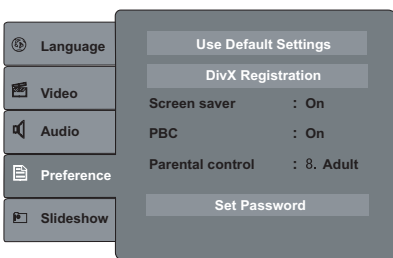


- 3 Select **[DivX Registration]**, and then press **OK** to confirm.
  - ↳ The registration code is displayed.
- 4 Write down the code.
  - Press **OK** to exit the code message.
- 5 Press **SETUP** to exit the setup menu.

# Select video options
 
## Select display ratio

- 1 Press **SETUP**.
- 2 Select **[Video]**, and then press **▶▶**.

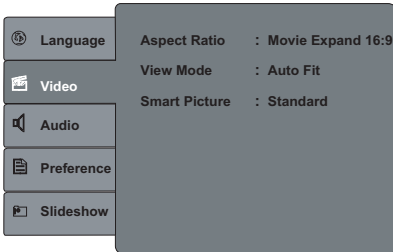

- 3 Select **[Aspect Ratio]**, and then press **OK** to confirm.
- 4 Select an option, and press **OK** to confirm.
  - **[4:3]**: The picture is reproduced in 4:3 format. A black band is displayed on either side of the picture.
  - **[Movie Expand 16:9]**: (Default) (letterbox format) The picture is enlarged to 16:9 format. A large part of the top and bottom of the picture is trimmed. Select this to play pictures which have black band at the top and bottom.
  - **[Widescreen]**: The picture is displayed in the original proportion of images transmitted in 16:9 format.
- 5 Press **SETUP** to exit.




### Tip

 - If you play a 4:3 picture in **Widescreen** mode, it stretches horizontally.

## Select a view mode

- 1 Press **SETUP**.
- 2 Select **[Video]**, and then press **▶▶**.

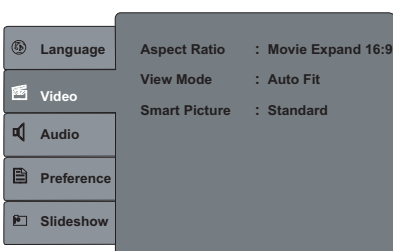




- 3 Select **[View Mode]**, and then press **OK** to confirm.
  - 4 Select an option, and then press **OK** to confirm.
    - **[Original]**: Fit the original screen size (for JPEG only).
    - **[Auto Fit]**: (Default) Take the minimum value of horizontal and vertical fit scale ratio (like letter box).
    - **[Pan Scan]**: Take the maximum value of horizontal and vertical fit scale ratio.
  - 5 Press **SETUP** to exit.
- 

## Select picture contrast

 
- 1 Press **SETUP**.
- 2 Select **[Video]**, and then press **▶▶**.

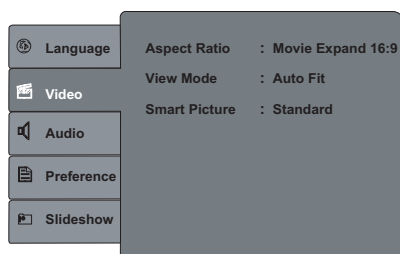

- 3 Select **[Smart Picture]**, and then press **OK** to confirm.
  - 4 Select an option, and then press **OK** to confirm.
    - **[Standard]**: (Default) Select the preset picture setting.
    - **[Vivid]**: Make the picture brighter.
    - **[Cool]**: Make the picture softer.
    - **[Personal]**: Personalize your picture color by adjusting brightness, contrast and color.
  - 5 Press **SETUP** to exit.
- 

## Select audio options

 - 1 Press **SETUP**.
- 2 Select **[Audio]**, and then press **▶▶**.

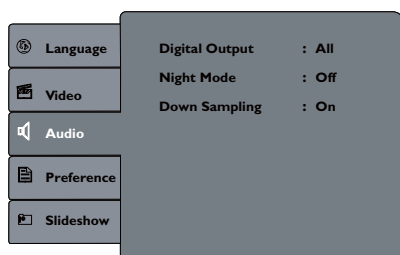

- 3 Select **[Digital Output]**, and then press **OK** to confirm.
- 4 Select an option, and then press **OK** to confirm.
  - **[Off]**: Deactivate the digital audio output.
  - **[PCM]**: For the connected device that cannot decode multichannel audio. The DVD player converts the Dolby digital and DTS multichannel signals to PCM.
  - **[All]**: (Default) For the connected device that has a built-in multichannel decoder that supports Dolby digital or DTS.
- 5 Press **SETUP** to exit.



### Tip

- If you select **[All]** for an MPEG/MP3 disc, the player outputs PCM signals.

 
---

## Select play preferences

---

### Restore original settings

- 1 Press **SETUP**.
- 2 Select **[Preference]**, and then press **▶▶**.

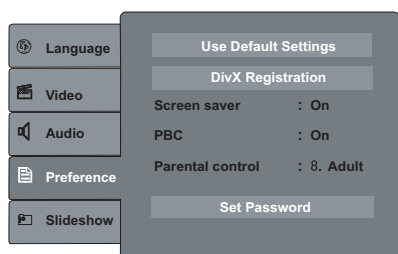


- 3 Select **[Use Default Settings]**, and press **OK** to confirm.  
↳ A confirmation message is displayed.
- 4 Press **◀◀ / ▶▶** to select an option, and then press **OK** to confirm.
- 5 Press **SETUP** to exit.

---

### Activate screen saver

 - 1 Press **SETUP**.
- 2 Select **[Preference]**, and then press **▶▶**.

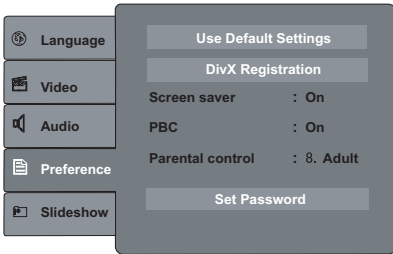

- 3 Select **[Screen saver]**, and then press **OK** to confirm.
- 4 Select an option, and then press **OK** to confirm.
  - **[Off]**: Deactivate screen saver.
  - **[On]**: (Default) Activate screen saver.
- 5 Press **SETUP** to exit.



### Tip

 
- For VCD/DVD, if you do not press any button five minutes after the play is stopped, screen saver starts automatically.

---

## Restrict access

With the Parental Control function, you can restrict access to DVDs that are not suitable for your children. The rating levels are country dependent. To view DVDs that are rated higher than the set level, you should enter a 4-digit password.

- 1 Press **SETUP**.
- 2 Select **[Preference]**, and then press **▶▶**.

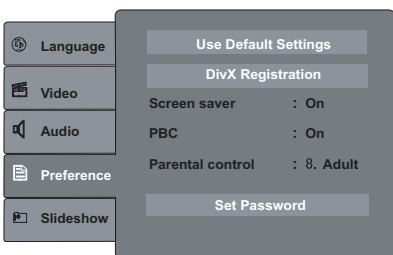

- 3 Select **[Parental control]**, and then press **OK** to confirm.
- 4 Enter the 4-digit password: 0000.
- 5 Select an option, and then press **OK** to confirm.
  - **[1. Kid Safe]**: Childsafe; acceptable for viewers of all ages.
  - **[2. G]**: General Audience; acceptable for viewers of all ages.
  - **[3. PG]**: Parental Guidance suggested.

- [4. PG-13]: Unsuitable for children under age 13.
- [5. PG-R]: Recommend that parents restrict children under 17 from viewing.
- [6. R]: Recommend that parents guide children under 17 to view.
- [7. NC-17]: Unsuitable for children under 17.
- [8. Adult]: (Default) acceptable for adults only.

6 Press **SETUP** to exit.




### Tip

 - This function is only available for DVDs that are coded with rating levels.

## Change a password

- 1 Press **SETUP**.
- 2 Select [**Preference**], and then press **▶▶**.

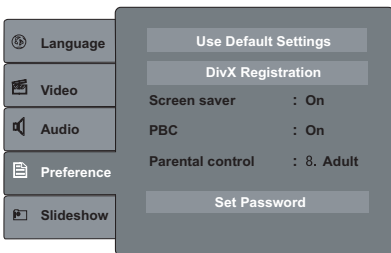

- 3 Select [**Set Password**], and then press **OK** to confirm.
- 4 Enter the current password, and then press **OK** to confirm.
  - The default password is 0000.
- 5 Enter a new 4-digit password, and then press **OK** to confirm.
- 6 Press **SETUP** to exit.




### Tip

- If you forget the current password, you can enter the default password and then press **OK** to confirm. Then, you can enter the new password.

## Select JPEG play options

You can display JPEG images as a slideshow and select a display effect.

 - 1 Press **SETUP**.
- 2 Select [**Slideshow**], and then press **▶▶**.

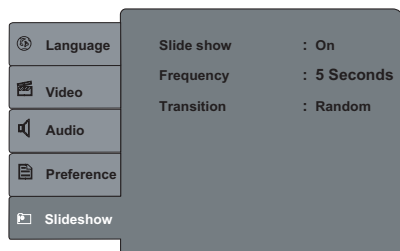

- 3 Select an item, and then press **OK** to confirm.
  - [**Slideshow**]: Activate/deactivate slideshow.
  - [**Frequency**]: Select a display interval for JPEG images.
  - [**Transition**]: Select a display mode for JPEG images.
- 4 Select an option, and then press **OK** to confirm.
- 5 Press **SETUP** to exit.

## 6 Product information



### Note

- Product information is subject to change without prior notice.

Dimensions (player)	199 x 159 x 40 mm
Weight (player)	0.66 kg
Power supply	DC 12V 1A AC 100V - 240V 50/60Hz
Power consumption	12 W
Operating temperature	5 - 35°C
Laser wavelength	650 nm
Playable DivX discs	DivX® 5 and earlier

Frequency response	20Hz - 20KHz $\pm$ 1 dB
Signal/noise ratio	> 85 dB
Audio distortion	< 0.1%
Load impedance	75 $\Omega$
Humidity	15% - 75%

## 7 Troubleshooting



### Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format with **DVD AV OUT** to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### No sound

- Ensure that the AV cable is connected correctly.

### **Cannot play disc**

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

### **No response to the remote control**

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

### **The player feels warm**

- When the player is in use for a long period of time, its surface will be heated. This is normal.

## **8 Glossary**

---

### **A**

#### **Aspect ratio**

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

### **D**

#### **DivX<sup>®</sup>**

The DivX<sup>®</sup> codec is a patent-pending, MPEG-4 based video compression technology developed by DivX<sup>®</sup>, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

---

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

---

## M

### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

### MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

---

## P

### PBC

Playback Control. A system where you navigate through a Video CD/ Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

### PCM

Pulse Code Modulation. A digital audio encoding system.

---

## R

### Region code

A system that allows discs to be played only in the region designated. This unit only plays discs that have compatible region codes. You can find the region code of your unit on the product label. Some discs are compatible with more than one region (or ALL regions.)



 
---

# T

## **Title**

On commercial DVDs, this is the longest section of a movie or music feature on DVD. Each title is assigned a title number, so that you can locate the title you want.

When you record programs, they are stored as titles. Depending on the recording settings, recorded titles may automatically contain several chapters.

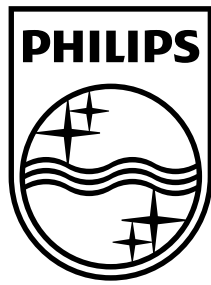

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Printed in China

PET727\_58\_UM\_V1.0

