


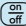 


Call from the phonebook

 
1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press .


The call is initiated.


Listen to messages recorded on the answering machine (for answering machine phone only)


Press  on the base station to turn on the answering machine (the LED is turned on).

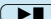

Press  again to turn off the answering machine (the LED is turned off).


Press  on the base station to play phone messages (the last recorded message will be played first).

Press  to skip the current message and play the next message.

Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).


Press   to adjust speaker volume during message playback.

Press  to delete the current message.

Refer to your new phone's User Manual for details about the answering machine function.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem	Solution
<ul style="list-style-type: none"> • There's no dialling tone! 	<ul style="list-style-type: none"> • Check the connections • Charge the batteries • Use the line cable provided
<ul style="list-style-type: none"> • Caller cannot hear me clearly! 	<ul style="list-style-type: none"> • Move closer to the base station • Move the base station at least one metre away from any electrical appliances
<ul style="list-style-type: none"> • SEARCHING... is displayed on handset and  icon is blinking! 	<ul style="list-style-type: none"> • Move closer to the base station • Reset your unit and restart the handset registration
<ul style="list-style-type: none"> • Caller number is not displayed! 	<ul style="list-style-type: none"> • Check your subscription with your network operator

Welcome to Philips!

Register your product and get support at www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your new phone.

Online help

www.philips.com/support

© 2008 Koninklijke Philips Electronics N.V.
All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: Master

 **CE 0168**

Printed in China

Register your product and get support at
www.philips.com/welcome

CD150
CD155



Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS

What's in the box



Handset

Base station with bracket
for your new basic phone
ORyour new answering
machine phone

Battery door

2 AAA rechargeable
NiMH batteries

 
Power supply



Line cord*



User manual

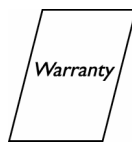

Warranty card



Quick Start Guide

*You may find in the box the line adaptor delivered separately from the line cable. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

 
 
In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the cables and batteries that came with your phone.

1 Connect

Connect the base station

- Place the base station in a central location near the telephone line socket and electricity socket.

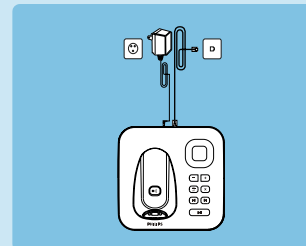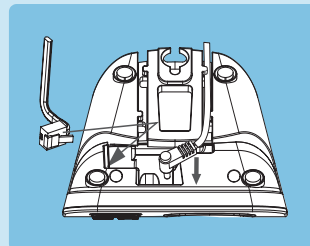


- Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
- Connect the other end of the line cord and power cable to their respective sockets.


2 Install

Insert rechargeable batteries and charge

 Insert batteries

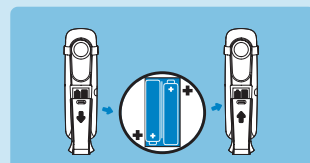

Charge handset for 24 hours

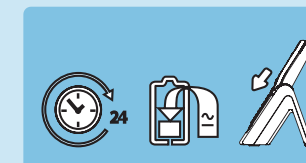 

Configure your phone (if necessary)

After charging your phone for a few minutes, a Welcome screen may appear depending on the country where you live. If the Welcome screen appears:

- Press **OK** to display a list of countries.
- Scroll \updownarrow to find your country.
- Press **OK** to confirm your selection.

Your phone is now ready for use.

3 Enjoy

Make a call

Dial the number (maximum 24 digits) and press **key**.

OR

Press **key** to take the line and dial the number (maximum 24 digits).

Answer a call

When the phone rings, press **key**.

End a call

To end a conversation, press **key**.

Adjust earpiece volume

During a call, press \updownarrow to select from **VOLUME 1**, **VOLUME 2** or **VOLUME 3**.

Set the ring melody

- Press **menu** key in idle mode, scroll \updownarrow to **PERSONAL SET** and press **OK**, scroll \updownarrow to **HANDSET TONE** and press **OK**, scroll \updownarrow to **RING TONES** and press **OK**.
- Scroll \updownarrow to your desired melody to play the melody.
- Press **OK** to set the ring melody.

A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

- Press **menu** key in idle mode, scroll \updownarrow to **PHONEBOOK** and press **OK**, press **OK** to enter **NEW ENTRY**.
- ENTER NAME** is displayed on the screen.
- Enter the name of the contact (maximum 12 characters) and press **OK**.
- Enter the number (maximum 24 digits) and press **OK**.

A validation tone is emitted.

Access the phonebook

- Press \updownarrow in idle mode and scroll \updownarrow to browse the phonebook.
- To view the details, press **OK**.