

Quick Start Guide






Step A *Connect*

Step B *Setup*





Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

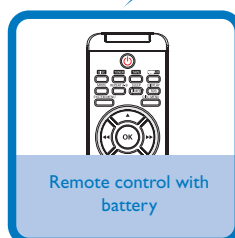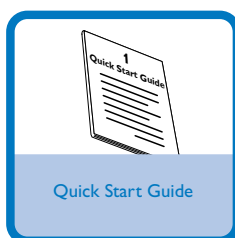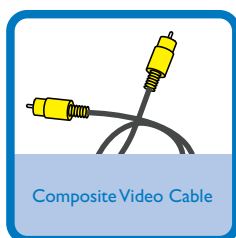

Remove the plastic protective sheet

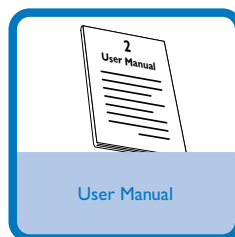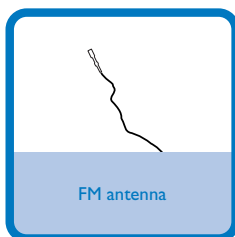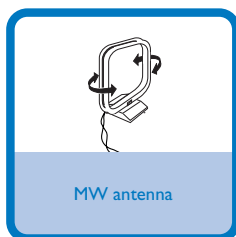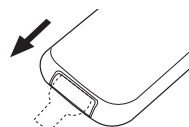

Step A Connect

Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2



Connect the FM and MW antennas.

3


Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

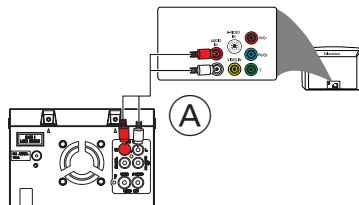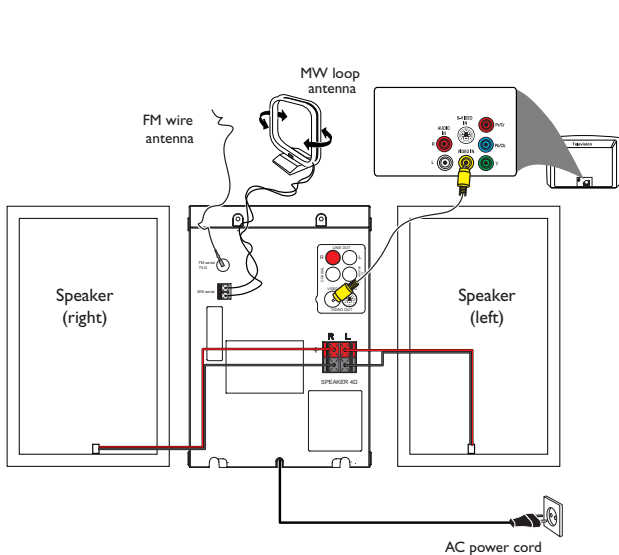

A To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

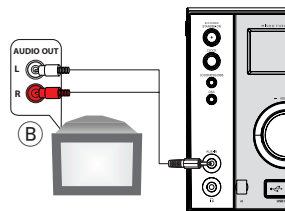

B To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **AUX-IN** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

Step B Setup


Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

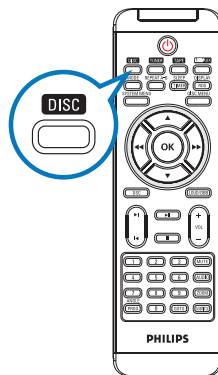

Step B Setup

Setting the clock

Important!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY ON** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the system.

2


When the hour digits flash, turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the minutes.


4

Press **CLOCK** again to confirm the time setting.

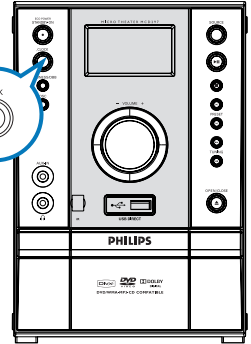






Before using the remote control

- 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example **CD, TUNER**).
- 3 Then select the desired function (for example **▶ || , ◀◀, ▶▶**)

 

Remove the plastic protective sheet

Setting system menu options

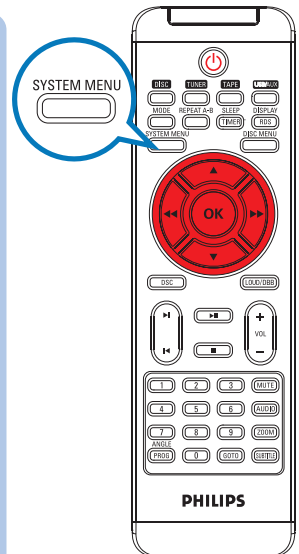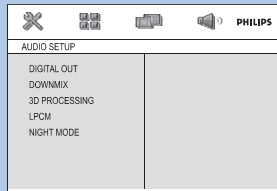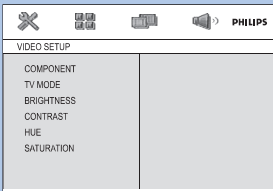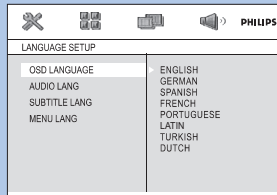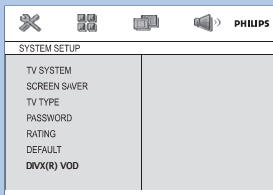

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

Playing a disc



1 Press **OPEN-CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

2 Playback will start automatically. If not press **▶||**.

3 To stop playback, press **■**.

Programming and tuning to radio stations

1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.

2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.

3 Press **PRESET** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

1 Insert the USB device's USB plug into the socket on the front panel of the main set.

2 Press **SOURCE** (or **USB/AUX** on the remote control) once or more to select **USB**.

3 Play the USB's audio files as you do with the albums/tracks on a CD.

