

Quick start guide



 
- 1 Prepare
- 2 Connect
- 3 Enjoy

Please read and accept our Streamium terms & conditions as well as the Software End User License Agreement that are included in the User Manual on the CD-ROM


What's in the box



Streamium Micro Hi-Fi System MCI300

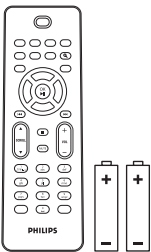


Remote control
2 x AAA batteries

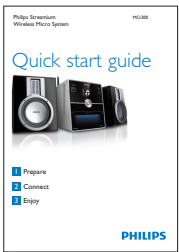 

Quick start guide



 1 x AC power cable




1 x FM wire antenna








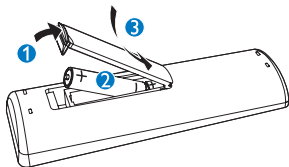 


CD-ROM (User manual
and software)

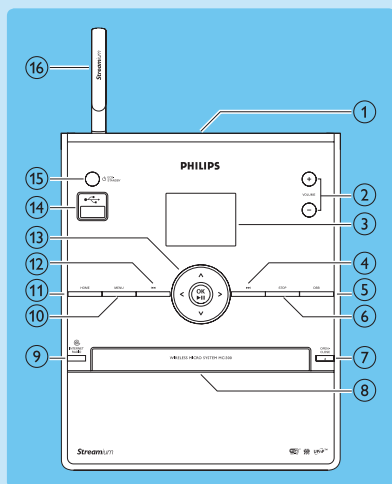 Before using the remote control:
Insert batteries as shown.

 


A Front view




- ①  Headphones
- ② **+VOL** - volume up / down
- ③ Display
- ④  skip forward
- ⑤ **DBB** Dynamic Bass Boost
- ⑥ **STOP**
- ⑦ **EJECT** eject disc
- ⑧ CD tray
- ⑨ **INTERNET RADIO**
- ⑩ **MENU**
- ⑪ **HOME**
- ⑫  skip back
- ⑬  navigate
OK /  confirm / play/pause
- ⑭  USB jack
- ⑮  **/ON/STANDBY/ECO-STANDBY**
- ⑯ WiFi antenna

B Remote control

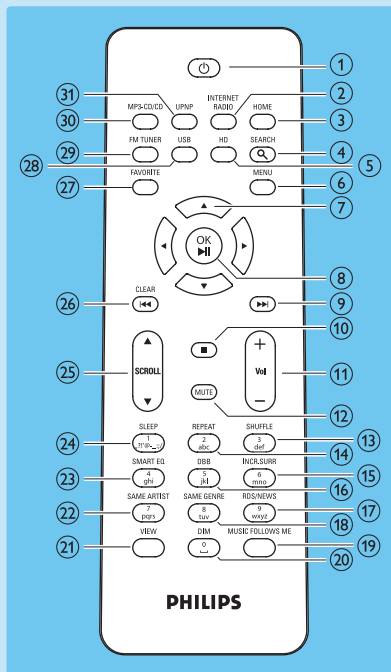

- ①
- ② **INTERNET RADIO**
- ③ **HOME**
- ④ **SEARCH**
- ⑤ **HD** harddisk music (PC or Center)
- ⑥ **MENU**
- ⑦ navigate
- ⑧ **OK /** confirm / play/pause
- ⑨ skip forward
- ⑩ stop
- ⑪ **+VOL -** volume up / down
- ⑫ **MUTE**
- ⑬ **SHUFFLE** (3 def) random play
- ⑭ **REPEAT** (2 abc)
- ⑮ **INCR.SURR.** (6 mno) Incredible Surround sound
- ⑯ **DBB** (5 jkl) Dynamic Bass Boost
- ⑰ **RDS/NEWS** (9 wxyz)
- ⑱ **SAME GENRE** (8 tuv)
- ⑲ **MUSIC FOLLOWS ME**
- ⑳ **DIM**
- ㉑ **VIEW**
- ㉒ **SAME ARTIST** (7 pqrs)
- ㉓ **SMART EQ** (4 ghi)
- ㉔ **SLEEP** (1 „?!’@_ _:;/) standby timer
- ㉕ **SCROLL**
- ㉖ **CLEAR** skip back
- ㉗ **FAVORITE**
- ㉘ **USB** Universal Serial Bus
- ㉙ **FM TUNER**
- ㉚ **MP3-CD/CD**
- ㉛ **UPNP** Universal Plug and Play

 2 Connect

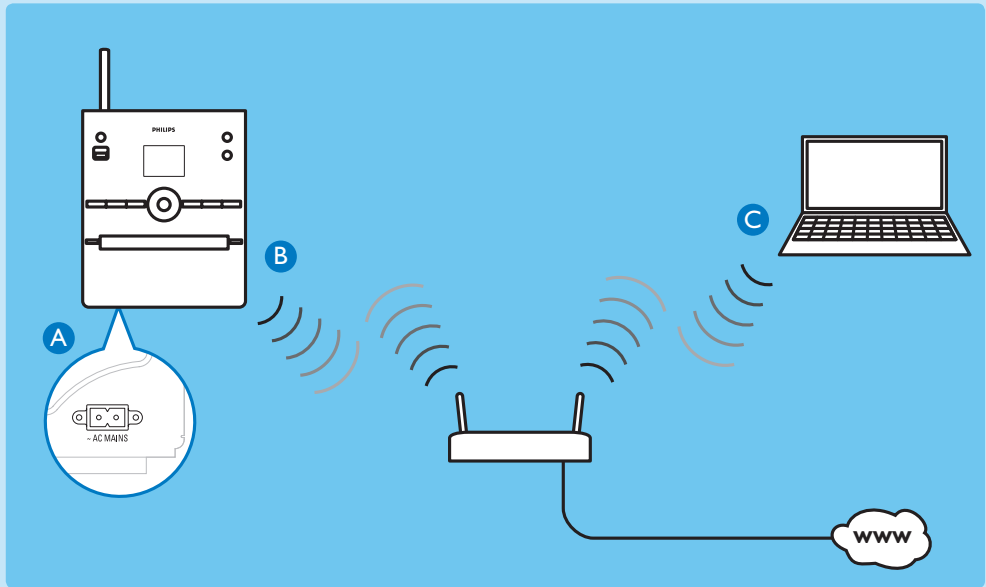

- A** Connect the MCi300 to the power supply
- B** Connect the MCi300 to a home network
- C** Wirelessly stream music from a PC

This section describes the most commonly used wireless home network setup. (For instructions on how to create other type of connection, refer to the User Manual.)

When you connect the MCI300 to a home network with broadband Internet access

You can listen to Internet radio

You can connect to the Internet for firmware updates

START HERE...

Important! For first-time setup, ensure that your network name and network password or the encryption key are available.

A Connect the MCI300 to the power supply

When you connect the MCI300 to the power supply for the first time:

- 1 Wait until the language selection menu pops up, to select your language.
- 2 Press ▲ or ▼, then ► to select the language.
> The MCI300 prompts you to select the network settings.
- 3 To select the network settings, follow the steps on how to connect to a home network.

B Connect to a home network:


- 1 Ensure that your encryption key (if required) is available.
- 2 Ensure that your wireless access point or wireless router with broadband Internet access is turned on.
- 3 Ensure that the MCI300 is turned on.
There are two setup methods:
 - First-time setup when you connect the MCI300 to the power supply (continue with steps 6-8).
 - Change network settings after first-time setup (continue with steps 4-8).
- 4 On the MCI300, press **MENU**.
- 5 Press ▲ or ▼, then ► to select **[Settings]** > **[Network]**.
- 6 Press ▲ or ▼, then ► to select **[Wireless]**.
- 7 Press ▲ or ▼, then ► to select network.
- 8 Use the remote control to enter the encryption key (if required), then press **OK**.
- 9 Press ▲ or ▼, then ► to select **[Automatic]** > (Apply settings?) **[Yes]**.
> The MCI300 displays a confirmation screen that the settings are saved.

Note The chapter **Connect to a home network** in the user manual contains more information about network connections.

C Stream music from a UPnP device / PC

If Windows Media Player 11 is already installed on the PC, you can skip the installation section and continue with the configuration.

Install Windows Media Player 11


- 1 On the PC, insert the supplied software CD.
 - Installation starts.
 - If installation does not start, click on the  icon in your Explorer program.
- 2 Follow the instructions on the PC to install **Windows Media Player 11**.

Configure a PC to share music

You can share music from a PC with the MCi300.

- 1 Follow the instructions to install Windows Media Player 11.
- 2 On the PC, click **Start > Programs > Windows Media Player**.
- 3 In the Windows Media Player interface, click on the **Library** pull-down menu and select **Media sharing...**



- 4 In the **Media sharing...** pop-up window, select **Share my media**, then confirm with **OK**.
 - When the MCi300 is connected to your home network, the display shows the MCi300 with an alert icon: 
- 5 Click on the MCi300.
- 6 Select **Allow**, then confirm with **OK**.
- 7 On the MCi300, press **HOME**.
- 8 Press **▲** or **▼** to select **[UPnP]**, then press **►**.
 - It can take a few minutes until the PC is ready to share media.
> The display shows **[Searching for UPnP servers...]**, followed by the list of media servers.
- 9 Press **▲** or **▼** to select the PC, then press **►**.
- 10 Press **▲** or **▼** to select a track, then press **OK / ►||** to play.

Internet radio

Note

Internet radio features require broadband Internet access.

Internet radio features require registration.

A Register the MCi300 with Philips

- 1 The following steps show you how to register the Internet radio feature.
- 2 Ensure that the MCi300 is turned on.
- 3 Ensure that the MCi300 is connected to the Internet.
- 4 Ensure you have a valid email address.
- 5 Press **INTERNET RADIO**.
 - > The display shows the Internet radio registration screen.
- 6 Press alphanumeric buttons on the remote control to enter the valid email address.
- 7 Press **▶**.
 - > The display confirms the automated email dispatch to your mailbox.
- 8 Check your email inbox for a message from **ConsumerCare@Philips.com** with the subject **Your Streamium Registration....**
- 9 Follow the instructions in the email to complete your registration process on the Philips website.

B Listen to Internet radio

- 1 Follow the steps to register the MCi300 with Philips.
- 2 Ensure that the MCi300 is turned on.
- 3 Ensure that the MCi300 is connected to the Internet.
- 4 Press **INTERNET RADIO**.
 - The options are displayed.
- 5 Press **▲** or **▼**, then **▶** to select first the Internet radio service, then the Internet radio station.

Tip You can manage your Internet radio stations under Streamium Management on the Philips website.

C Mark Internet radio stations as Favorites

You can mark Internet radio stations as your Favourites so next time you want to listen to a station, it is easy to find.

- 1 Follow the steps to register the MCI300 with Philips.
- 2 Ensure that the MCI300 is turned on.
- 3 Ensure that the MCI300 is connected to the Internet.
- 4 When you listen to Internet radio, press [**FAVORITE**] to mark the station.
 - The next time you connect to the Internet radio, the radio station is shown in the Favorite Stations menu.

D Listen to Favorite Stations

You must store Internet radio stations as Favorites, before you can use this feature.

- 1 Follow the steps to register the MCI300 with Philips.
- 2 Follow the steps to mark Internet radio stations as Favorites.
- 3 Ensure that the MCI300 is turned on.
- 4 Ensure that the MCI300 is connected to the Internet.
- 5 Press **HOME**.
- 6 Select [**Internet Radio**] > [**Favorite Stations**].
- 7 Press ▲ or ▼ to select, then press ►.

E Listen to My Media

My Media allows you to manually add Internet radio stations that are not included in the standard service.

- 1 Follow the steps to register the MCI300 with Philips.
- 2 Follow the steps to manually add Internet radio stations.
- 3 Ensure that the MCI300 is turned on.
- 4 Ensure that the MCI300 is connected to the Internet.
- 5 Press **INTERNET RADIO**.
- 6 Press ▲ or ▼ to select [**My Media**], then press ►.

Frequently asked questions

About the Environment

Question	Answer
Is there a maximum distance of transmission between Philips Wireless Micro Hi-Fi System and Wi-Fi routers for effective streaming?	Yes. The maximum distance of Wi-Fi transmission is 250m measured in open spaces. However, in a home environment, where solid obstacles such as walls and doors are present the effective transmission distance is significantly reduced to approximately 50 - 100m. Try to re-position the set if you experience transmission problems.

About Music Management

Question	Answer
Is Philips Wireless Micro Hi-Fi System upgradeable?	Yes, Philips Wireless Micro Hi-Fi System are software upgradeable, which means that they are ready for future functional upgrades if available. Check our website regularly for the latest news on new features and improvements at http://www.philips.com/support .

About Connections

Question	Answer
I have followed all the steps in the user manual to connect the Wireless Micro Hi-Fi System to the home network, but the system is still not connected, what can I do?	<p>On the Wireless Micro Hi-Fi System, press MENU, then select [Information] > [Wireless] > [Wireless mode]. Check that the Wireless Micro Hi-Fi System has been changed from Ad hoc mode to Infrastructure mode. Also check that the SSID, IP address, WEP key, or WPA key matches the setup of your wireless home network.</p> <ul style="list-style-type: none"> • Try to change the SSID on your router to a more unique name to ensure that it is different from the SSID that your neighbors use for their router. • The Wireless Micro Hi-Fi System supports wireless and wired connection at the same time. There is a chance that your wireless IP address and your wired IP address are on the same subnet. This will confuse the device. Consider changing the DHCP range of your wireless router so that the wireless IP received by the device is on a different subnet from its wired IP address. • Try to change the channel of your home network settings on the router. • On your router, consider using a WPA key instead of a WEP key. When you use a WEP as your encryption key, set all 4 keys to be the same. • Ensure that the turbo mode of your wireless router is switched off, if your router has this function.

Need help?

User Manual

See the user manual that came with your player.

Online

Go to www.philips.com/welcome

Hearing Safety



Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing “comfort level” adapts to higher volumes of sound. So after prolonged listening, what sounds “normal” can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally “safe” levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Important

Safety

Know these safety symbols



This ‘bolt of lightning’ indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 
The ‘exclamation point’ calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑯ Apparatus shall not be exposed to dripping or splashing.
- ⑰ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑱ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.



Warning

- Never remove the casing of this MCi300.
- Never lubricate any part of this MCi300.
- Place this MCi300 on a flat, hard and stable surface.
- Never place this MCi300 on other electrical equipment.
- Only use this MCi300 indoors. Keep this MCi300 away from water, moisture and liquid-filled objects.
- Keep this MCi300 away from direct sunlight, naked flames or heat.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
 - Connect the brown wire to the terminal marked L or coloured red.
 - Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).
- Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- ① Remove fuse cover and fuse.
- ② Fix new fuse which should be a BS13625 Amp, A.S.T.A. or BSI approved type.
- ③ Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

The severed plug must be disposed off to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

Norge

Typeskilt finnes på apparatens bakside.

Observer: Nettbryteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke fraktoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet, ikke utsettes for regn eller fuktighet.

Notice

Notice of compliance

For USA:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Canada:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Class II equipment symbol



This symbol indicates that the unit has a double insulation system.

Disposal of product and packing material

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.

Please be informed about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old product with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences to the environment and human health.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please observe the local regulations regarding the disposal of packing materials.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Battery disposal information

Batteries (including built-in rechargeable batteries) contain substances that may pollute the environment. Always hand the appliance in at an official collection point to remove any built-in batteries before you discard the appliance. All batteries must be disposed of at an official collection point.

CE 0678 ! R&TTE Directive 1999/5/EC											
BE ✓	DK ✓	GR ✓	ES ✓	FR ✓	IE ✓	IT ✓	LU ✓	NL ✓	AT ✓	PT ✓	FI ✓
DE ✓	CH ✓	PL ✓	HU ✓	SK ✓	CZ ✓	CY ✓	IS ✓				



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
© 2008 Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com



Printed in China
wk8213