

Philips Streamium  
Wireless Music Center + Station

WACS7500  
WAS7500

# Quick start guide



**1** Prepare

**2** Connect

**3** Enjoy

**PHILIPS**


# What's in the box




Wireless Music Center WAC7500  
(only included in WACS7500 set)



Wireless Music Station WAS7500

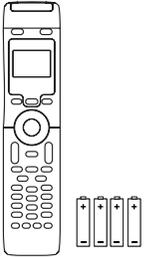

2-way remote control  
(for Center ) 4 x AAA  
batteries  
(only included in  
WACS7500 set)

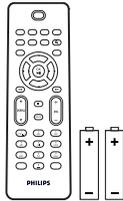


Remote control, 1-way,  
incl. 2x AAA batteries




Quick start guide




User manual

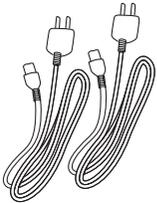

Power cable, 2x

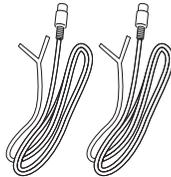


FM wire antenna, 2x

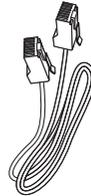

Ethernet cable, 1x




PC Suite CD, 1x

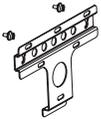


Mounting kit, 1x (for  
Station)

Before using the remote control:

Insert batteries as shown.

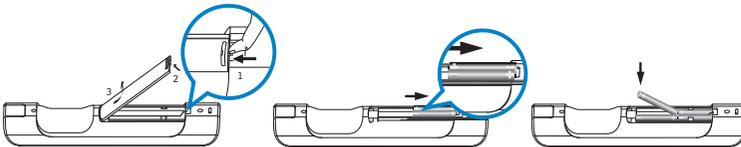

2-way remote control (only for WACS7500)

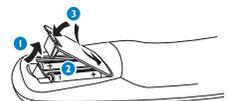

1-way remote control

# How to use this guide

I want to ...

See page(s):

## Connect:

- ... connect the Center to a home network / PC 4 **A** / **B**
- ... add a Station to the network of the Center 5 **C**
- ... relocate a connected Center or Station 5 **E**
- ... set up the Center and Station without a network 5 **D**

## Record / rip / copy:

- ... build an HD library (rip CDs) on the Center 8 **E**
- ... **transfer music from a PC to the Center** 4 **A** / **B** + 10 **G** / 11
- ... record music to a USB device 15 **M**

## Play:

- ... **play HD (Harddisk) music from the Center** 6 **A**
- ... play CDs on the Center 7 **D**
- ... listen to FM radio 9 **F**
- ... **listen to Internet radio\*** 4 **A** / **B** + 13 **I**
- ... **stream music from a PC** 12 **H**
- ... broadcast music to all connected Stations 14 **J**
- ... let the music follow you to another location 14 **K**
- ... play portable USB devices 15 **L**

## Find out more:

- ... FAQ - Frequently Asked Questions 16/17
- ... check what is compatible with the product 17

\* Internet radio requires broadband Internet access.

## Benefits

# Enjoy all your music in every room

## Total music enjoyment and freedom

### All your music on one wireless system

- Wireless streaming between Music Center, Station(s) and PC
- 80GB hard disk to store up to 1500 CDs
- CD and USB Direct playback
- Enjoy Internet radio
- Docking cradle for iPod (optional)

### Easy navigation and control

- View album art in full color
- My Room, My Music: Listen to different music in each room
- Music Broadcast: Listen to the same music on all stations
- Music Follows Me: Take your music with you from room to room


### Quality sound performance

- 80W RMS/Center, 30W RMS/Station with Super Sound Panel

### Expandable

- Extend your system by adding up to 5 Wi-Fi Stations

## A Controls on Center & Station

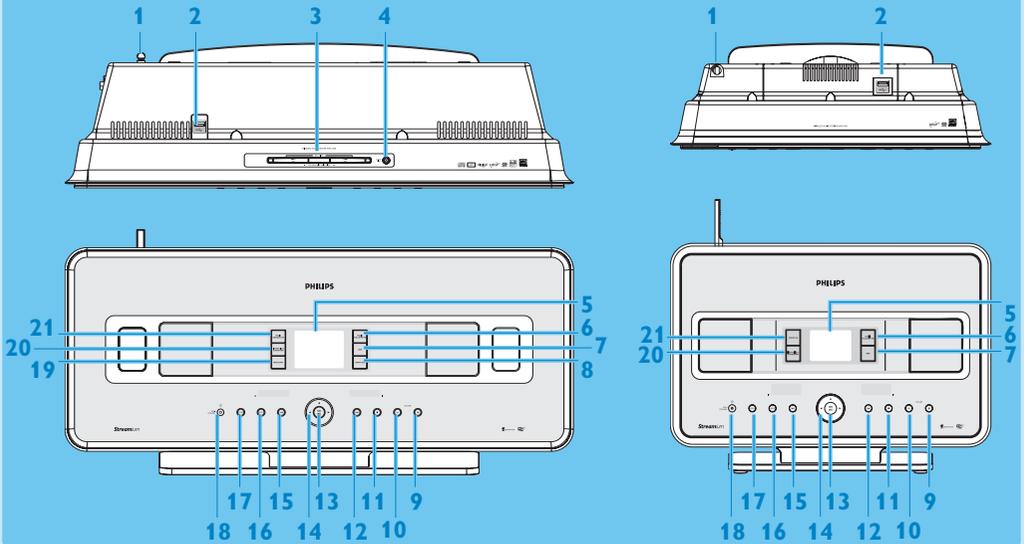

### 1 Antenna

2 USB jack

3 **Disc slot** (loader)

Insert discs with graphics facing you

4 Disk eject

5 **LCD**

6 **MUSIC FOLLOWS ME**

7 **DBB** (Dynamic **B**ass **B**oost)

8 **SMART EQ**

9 **VOLUME +**

10 **VOLUME -**

11 Stop

12 Skip forward

13 **OK** / Play/pause

14 Navigation left / right / up / down

15 Skip back

16 **MENU**

17 **HOME**

18 **ON / STANDBY / ECO STANDBY**

- Press briefly to toggle between modes Standby and ON.

- Press & hold to toggle power modes between ON and Eco Standby (power-saving mode).

19 **RECORD**

20 **INCR.SURR.** Incredible Surround sound

21 **MUSIC BROADCAST** or

**SMART EQ**

**Note** The illumination of one corner of the casing is a design element.


## B Controls on the remote controls

### Important!

You must always **use the 1-way remote control** for the following tasks:

- Internet radio registration
- Network configuration
- Editing track information


### 2-way remote control

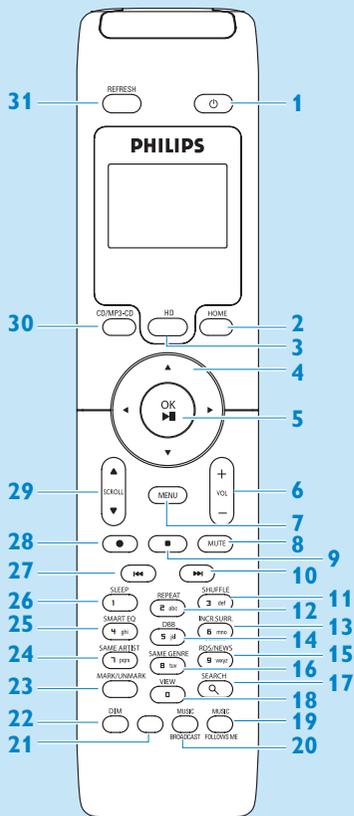

(Only supplied with WACS7500 Center + Station set.)

- 1 On, Standby, Eco Standby
- 2 HOME
- 3 HD (Hard Disk)
- 4 ◀ / ▶ / ▲ / ▼ Navigation controls
- 5 OK, ▶/II
- 6 VOL +, -
- 7 MENU
- 8 MUTE
- 9 ■ Stops
- 10 ▶▶ Skip forward
- 11 SHUFFLE (3 def)
- 12 REPEAT (2 abc)
- 13 INCR.SURR. (6 mno) Incredible Surround sound
- 14 DBB (Dynamic Bass Boost) (5 jkl)
- 15 RDS/NEWS (9 wxyz)
- 16 SAME GENRE (8 tuv)
- 17 SEARCH (Q)
- 18 MARK/UNMARK (0 \_)
- 19 MUSIC FOLLOWS ME
- 20 MUSIC BROADCAST
- 21 Spare
- 22 DIM (display)
- 23 VIEW
- 24 SAME ARTIST (7 pqrs)
- 25 SMART EQ (4 ghi)
- 26 SLEEP (1 ,?!'@-\_:;/)
- 27 ◀◀ Skip back
- 28 REC ●
- 29 SCROLL ▲, ▼
- 30 CD/MP3-CD
- 31 REFRESH


## 1-way remote control

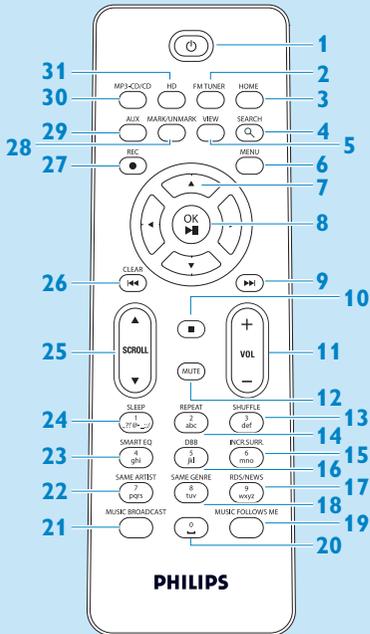

- 1 ⏻ On, Standby, Eco Standby
- 2 **FM TUNER** (radio)
- 3 **HOME**
- 4 **SEARCH**
- 5 **VIEW**
- 6 **MENU**
- 7 ◀ / ▶ / ▲ / ▼ Navigation controls
- 8 **OK, ▶/||**
- 9 ▶▶ Skip forward
- 10 ■ Stop
- 11 **VOL +, -**
- 12 **MUTE**
- 13 **SHUFFLE** (3 def)
- 14 **REPEAT** (2 abc)
- 15 **INCR.SURR.** (6 mno) Incredible Surround sound
- 16 **DBB** (Dynamic **B**ass **B**oost) (5 jkl)
- 17 **RDS/NEWS** (9 wxyz)
- 18 **SAME GENRE** (8 tuv)
- 19 **MUSIC FOLLOWS ME**
- 20 (0 \_)
- 21 **MUSIC BROADCAST**
- 22 **SAME ARTIST** (7 pqrs)
- 23 **SMART EQ** (4 ghi)
- 24 **SLEEP** (1 .,?!'@-\_:;/)
- 25 **SCROLL** ▲, ▼
- 26 ◀◀ Skip back
- 27 **REC** ●
- 28 **MARK/UNMARK** (0 \_)
- 29 **AUX**
- 30 **CD/MP3-CD**
- 31 **HD** (Hard Disk)

## 2 Connect

### A Connect the Center to the power supply

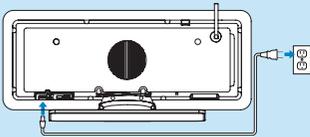


### B Connect the Center to your home network / PC

This section describes the simplest way to set up a wireless connection between the Center and your home network / PC. You can add up to 5 Stations to the connection. For more advanced setups, see section **Connect to PC** in the user manual.

#### When you connect the Center (and Station) to your network

- You can use the Internet Radio feature
- You can connect to the internet for firmware updates
- The product can query the online Gracenote DB for the latest CD and song information (including the retrieval of album artwork)
- You can transfer music from your PC hard disk to the product
- You can stream music using UPNP

#### Connection example:

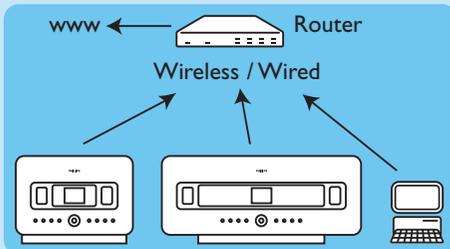

This is the most commonly used home network setup. Your home network may be protected, hold ready your network password or the encryption key.

- 1 Ensure the Center is turned on.
- 2 Press **MENU**
- 3 Select **Settings > Network >**
  - **Wireless** (if your router has 802.11b/g wireless feature)
  - **Wired** (if you use an Ethernet cable to connect your PC or network device to your home network)
- > Center shows list of networks in range.
- 4 Press **▲** or **▼**, then **▶** to select your home network.
- 5 Press alphanumeric buttons to enter encryption key (if you are asked to do so), then **▶**.
- 6 Select
  - **Automatic**, if your router is capable of serving IP addresses and network settings (DHCP enabled).
  - **Static**, if you have to enter IP addresses to introduce new devices in your home network.
- > The display shows: Apply Settings?
- 7 Select **Yes**.
- 8 Press **▶** to complete the configuration process.  
To add a Station, continue with the next section: **Add a Station to the network of the Center.**


## C Add a Station to the network of the Center:

### On the Center:

- 1 Press **HOME**.
  - 2 Press **▲** or **▼**, then **▶** to select **HD** (Harddisk) mode.
  - 3 Press **MENU** to enter the menu display.
  - 4 Press **▲** or **▼**, then **▶** to select **Station Management** (Mgnt).
  - 5 Press **▲** or **▼**, then **▶** to select Add **New Station**.
- > *The Center searches for the new Station.*

### On the Station:

- 1 Connect the Station to the power supply.

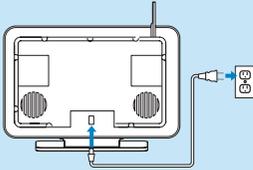

- 2 Turn on the Station.
    - If you turn on the Station for the first time, press **▲** or **▼**, then **▶** to select the language.
    - If you already used the Station with a Center, press **MENU**, followed by **▲** or **▼**, then **▶** to select **Installation Mode**.
- > *The display shows: **Center found***  
 > *The display shows: **Connecting to Center...***

### On the Center:

- 1 When all Stations are found, press **STOP** ■, to stop the search for Stations.
- > *The Center returns to HD mode.*  
 To relocate a device, refer to the section **Relocate a device** in this guide.

## D If you do not have an Internet connection / PC...

### Set up Center and Station without a network

You can operate the Center and Station without a network connection. The following steps show you how to set up the Center and Station on their own for the first time.

- 1 Place Center and Station side by side on a level surface strong enough to support the devices.
  - 2 Use the supplied power cables to connect first the Center, then the Station to the power supply.
  - 3 Select the language on the Center and on the Station.
- > *The installation process starts.*  
*The Center searches for Stations within range.*
- 4 When the Center has detected all the Stations within range, press **STOP** ■ on the Center to stop the search.
- > *The Station registration process starts.*  
*After the successful registration, the displays of the Center and all connected Stations show HD Music.*

## E Relocate a connected device

- 1 Press and hold **⏻** to switch the device to Eco Standby.
  - 2 Disconnect the device from the power supply.
  - 3 Reconnect the device to the power supply in the new location.
- > *The Wi-Fi connection between the devices recovers automatically.*

**Tip** For better Wi-Fi reception, rotate the Wi-Fi antenna or adjust the location of the Center and the Station.

# 3 Enjoy

## A Play HD (Harddisk) music from the Center

- 1 Ensure that the device is turned on.
- 2 Press **HOME**.
- 3 Press **HD** on the remote control.
- 4 Press **▲ ▼ ◀ ▶** to select your playback options.  
Demo tracks are stored under All tracks.
- 5 Press **OK / ▶||** to start play.
- 6 Press **STOP ■** to stop play.

## B Change your playback option:



- 1 During play, press **◀** once or more to enter previous option lists.
- 2 Press **▲ ▼ ◀ ▶** to select, then **OK / ▶||**.

## C Change your remote control:

By default, the 2-way remote control works with the Center only. If you want to use the 2-way remote control for the Station:

- 1 Press and hold **REFRESH** until the display of the remote control shows: **Select Device**.
- 2 Press **▲** or **▼** then **▶** to select the Station check box.
- 3 Press **OK**.


For more information, see **User manual, Prepare: Using the remote control**.

## D Play CDs on the Center

**Important!** For reasons of CD copyright protection, during CD play the features Music Broadcast and Music Follows Me are not supported.

You can play

- all prerecorded audio CDs
- all finalized audio CDR and CDRW discs
- MP3/WMA/m4a-CDs (CD-R/CD-RW with MP3/WMA/m4a files)

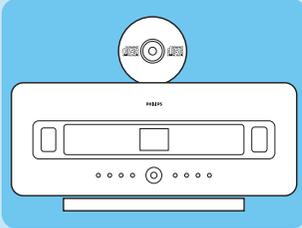

- 1 Ensure that the device is turned on.
  - 2 Insert a CD into the Center (see **Controls on the Center**) with the printed side facing towards the front panel.
- > *The display shows the list of CD tracks.*

For CD recorded with MP3/WMA/m4a audio files:

- 1 To enter a track list, press **▶** on a highlighted folder.
- 2 Press **OK / ▶||** to start play.
- 3 Press **STOP ■** to stop play.
- 4 To remove the CD, press **EJECT ▲**.

For CDs recorded with all other audio files:

- 1 Press **▲ ▼ ◀ ▶** to select a track or album.
- 2 Press **OK / ▶||** to start play.
- 3 Press **STOP ■** to stop play.
- 4 To remove the CD, press **EJECT ▲**.

## E Build an HD music library (Rip CDs) on the Center:

You can build a music library on the hard disk of the Center by ripping music from CDs, importing MP3/WMA/m4a files from a PC, or recording audio from radio or external sources.

**Important!** It takes some time to rip CD music and to convert the ripped music to MP3 file format.

### Rip from CDs

1 Insert a CD into the Center (see **Controls on the Center**), with the printed side facing towards the front panel.

> The display shows the list of CD tracks.

For CD recorded with MP3/WMA/m4a audio files:


1 To enter a track list, press ► on a highlighted folder.

2 In the track list, press **RECORD**.

> The display shows a list of tracks with check boxes .

If you want to rip the whole CD:

1 Press **RECORD**.

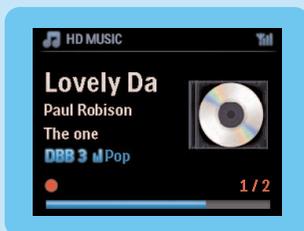

If you want to rip only part of the CD:

1 Press **MARK/UNMARK** on the remote control to select / deselect tracks.

2 Press **RECORD**.

> The display shows the album name of the current track.

When the rip is complete, the Center returns to CD mode.

### Tip:

- To rip a CD during playback (audio CD only), see **User manual, HD: Building music library on Center**.
- To record from the radio or from an external source, see **User manual, HD: Building music library on Center**.
- To edit the track information and import MP3/WMA/m4a files from PC using the supplied **Wireless Audio Device Manager (WADM)**, see section **Enjoy**.

## F Listen to FM Radio

- 1 Ensure that the device is switched on.
- 2 Press **HOME**.
- 3 Press **FM TUNER** on the remote control.
- 4 Press **MENU**.
- 5 Press **▲** or **▼**, then **▶** to select **Autostore radio**.  
> When all available stations are stored, the first auto stored preset station plays.

You can store up to 60 preset radio stations in the memory (including a maximum of 10 RDS stations).



When the radio plays, to directly switch from one preset station to another:

- 1 Press **◀** or **▶**.

When the radio plays, to select a station from the list of preset stations:

- 1 Press **▶**.
- 2 Press **▲** or **▼**, then **▶** to select.

**Tip** When the radio plays, you can also record from the radio by pressing **REC** ●.

## G Transfer music from my PC to the Center

### Important!

- Before you continue, first complete the steps in section 'Connect the device to your home network / PC'.
- Ensure that you install the provided PC software before you try to transfer music from a PC.

### Minimum PC requirements:

- Windows XP SP2 or Vista
- Pentium III 500MHz processor or higher
- 256MB RAM
- CD-ROM drive
- Ethernet adapter, enabled (for wired connection) - or  
Wireless Network adapter 802.11 b/g (for wireless connection)
- 500MB free hard disk space

### Install PC Software

1 Insert the PC Suite CD into the PC.

2 Follow the instructions on the PC to install **WADM**.


3 When the security alert message (Microsoft Windows Firewall) pops up, press **Unblock** to allow the WADM application to run on the PC.

> *The Microsoft Windows Firewall is still effective and only allows the WADM to run.*

### Tip

You can also consult the user manual of the Microsoft Windows Firewall and manually add the WADM application to your list of programs that are safe to run.

4 Follow screen instructions on the PC.

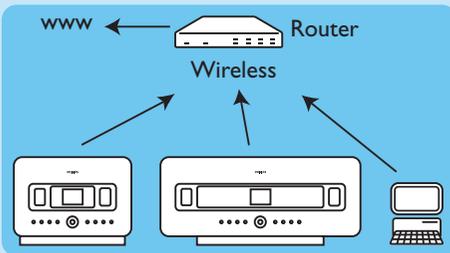

## WADM - Wireless Audio Device Manager

### Launch WADM:

- 1 Double click WADM icon on Desktop.
  - 2 Select your Center from the list.
  - 3 Click **Connect now**.
- > You can transfer music from your PC to the Center.

### Transfer music from your PC to the Center

- 1 Launch the **WADM** software.



- 2 On **My Computer** panel, click to highlight a desired file/folder
- 3 Drag selection to **WACS7500** panel
- 4 While transferring, you can add more file/folder(s) to the transfer queue.

## **H** Stream music from a PC

You can stream music without transferring audio files. When you use UPnP (Universal Plug and Play), you can stream music from a PC or another content server to the Center / Station.

### **For Windows XP / Vista:**

- 1 Ensure that your administrator rights are enabled on the PC.
- 2 Insert the PC suite CD into the PC.
- 3 Click **Install Windows Media Player 11** to start the installation of Windows Media Player.

### **On the PC:**

- 1 Click **Start > Programs > Windows Media Player**.
- 2 In the Windows Media Player interface, click on the Library pull-down menu and select **More Options...**
- 3 In the Library interface, select **Configure Sharing**.
- 4 In the Media Sharing pop-up window, check Share my media, then click **OK**.  
> When the WAC7500 is connected to you home network, the window shows a .
- 5 Click the WAC7500 icon.
- 6 Click **Allow**, then **OK**.

### **On the Center or Station:**

- 1 Press **HOME**.
- 2 Press **▲** or **▼**, then **▶** to enter UPnP mode.  
> The display shows: **Searching for UPnP Servers**, then the list of media servers.
- 3 Press **▲** or **▼**, then **▶** to select your PC.
- 4 Press **▶**.

**Tip** To download Microsoft Windows Media Player 11, use the following URL:  
<http://www.microsoft.com/windows/windowsmedia/download>.

## 1 Internet radio

You have to register your product with a valid email address when using the Internet feature for the first time:

- 1 Ensure that the Center / Station is turned on.
- 2 Ensure that the Center / Station is connected to the Internet.
- 3 Ensure you have a valid email address.
- 4 Ensure that you **use the 1-way remote control of the Station** for the registration process.
- 5 On the Center / Station, press **HOME**.
- 6 Select **RADIO > INTERNET RADIO**.  
> *The Internet radio registration display is shown.*
- 7 Press **ALPHANUMERIC BUTTONS** on the 1-way remote control to enter the valid email address.
- 8 Press **▶**.  
> *The display confirms the automated email dispatch to your mailbox.*
- 9 On the PC, check the email inbox for a message from **ConsumerCare@Philips.com** with the subject **Your Streamium Registration...**
- 10 Follow the instructions in the email to complete your registration process on the Philips website.  
> *The display of the Center / Station returns to the Radio menu.  
The email address is stored in the memory.  
To return to the Home menu, press **HOME**.*

### Listen to Internet radio

- 1 Ensure that the Center / Station is turned on.
- 2 Ensure that the Center / Station is connected to the Internet.
- 3 Press **HOME**.
- 4 Select **RADIO > INTERNET RADIO > USER > SERVICES**.  
> *The service list is displayed.*
- 5 Press **▲/▼** to select from the list. Examples: **RADIOIO, LIVE365**
- 6 Press **▶**.
- 7 Press **▲/▼** to select the station, then press **▶**.  
To return to the Home menu, press **HOME**.

\* Internet radio requires broadband Internet access.


## J Broadcast music

When the Center and Station(s) are switched on and the Center is in HD play mode, you can broadcast the music from the Center to all connected Stations.

1 When in HD play on the Center, press **MUSIC BROADCAST**.

> The display shows the  icon and the HD music is broadcast to all connected Stations.

2 To stop music broadcast, press **STOP**  on the Center.

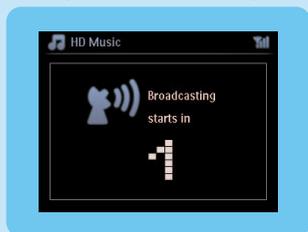

To exit music broadcast on a Station:

1 Press **STOP**  on the Station.

To broadcast music to the Station again:

1 Press **STOP**  on the Center.

2 Start HD play on the Center.

3 Press **MUSIC BROADCAST** on the Center.

To deactivate the feature, press **MUSIC BROADCAST** again on the Center.

**Tip** Music broadcast stops when the selected album or playlist has reached the end.

## K Let the music follow me to another location

As you move around at home you can let the music move with you between the Center and Station or between Stations.

On the source unit (Center or Station) where music is playing:

1 During play, press **MUSIC FOLLOWS ME** to activate the function.

> The display shows the icon .

On the destination unit where you want continue to listen to the music:

2 Ensure that the device is turned on.

3 Press **MUSIC FOLLOWS ME**.

> Play stops on the source unit and continues on the destination unit.

### Tip

- **Music Follows Me** is deactivated again, if you do not press **MUSIC FOLLOWS ME** on the destination unit within 5 minutes.
- Selected play modes are retained on the destination unit (see **User manual** section **Play modes REPEAT, SHUFFLE**).

## L Play portable USB devices

You can play USB flash memory devices (USB 2.0 or USB 1.1) and USB flash players (USB 2.0 or USB 1.1) with the Center or Station.

- 1 Insert the USB plug of the USB device into the socket  on the Center / Station.
- 2 Ensure that the Center /Station and the USB device are turned on.
- 3 On the Center / Station, press **HOME**.
- 4 Select **Portable > USB**.
- 5 Press **OK / ▶** to start play.

## M Record music to USB devices

- 1 Ensure that the USB device is connected to the Center.
- 2 Ensure that the Center and the USB device are turned on.
- 3 Press **HD** on the remote control.
- 4 Press **▲** or **▼**, then **▶** to select your option.  
Enter the list of tracks, if necessary.
- 5 Press **REC ●**.
- 6 Press **MARK/UNMARK** on the remote control to select or deselect the tracks you want to record.  
To select / deselect all tracks, press and hold **MARK/UNMARK** on remote control.
- 7 Press **REC ●** to start recording.  
> The display shows **transferring...** The number of tracks transferred / to be transferred appears.

**Tip** Transferred tracks are saved under **MUSIC** in the USB device.

# FAQ - Frequently asked questions

## About the Environment

<b>Q:</b> Is there a maximum distance of transmission between Philips Wireless Music Center and Stations for effective streaming?	<b>A:</b> Yes. The maximum distance of Wi-Fi transmission is 250m measured in open spaces. However, in a home environment, where solid obstacles such as walls and doors are present the effective transmission distance is significantly reduced to approximately 50 - 100m. Try to re-position the sets if you experience transmission problems.
<b>Q:</b> Do I need a computer or home network to use Philips Wireless Music Center and Station?	<b>A:</b> No. Philips Wireless Music Center and Station are designed to work independent of the computer. You can record music from CDs to the music library of Center (Hard Disk), and stream music to Stations without any computer or home networking structure.
<b>Q:</b> Would my neighbors be able to access the music I stored on Philips Wireless Music Center if they also have Philips Wireless Music Station?	<b>A:</b> No. Every Philips Wireless Music Station has a unique encryption code that will only be recognized by the Philips Wireless Music Center during the installation process.

## About Recording from CDs/ Track Information

<b>Q:</b> What does 'Ripping from CDs' mean and what functions can I use while the recording is in progress?	<b>A:</b> 'Ripping from CDs' is the process by which a CD track is converted into the much smaller MP3 format, and is then added to the Wireless Music Center's music library (Hard Disk). On the Wireless Music Center, 'Ripping from CDs' requires two steps: first, it reads the CD content and stores it temporarily on the Hard Disk. Then, it converts this temporary CD content into MP3 format - a process called 'background encoding'. It takes 1 hour to convert 1 hour of CD music. During this stage you cannot stream or broadcast music on Center, though you can still stream music from Stations. Always switch the set to Eco Standby (power-saving mode) before removing its power plug.
<b>Q:</b> Do I need to immediately update the Gracenote music recognition database stored in Philips Wireless Music Center straight after bringing it home?	<b>A:</b> No. There is already a massive CD-tracks database pre-stored in Philips Wireless Music Center, which should match most of the CDs released within the last six months.
<b>Q:</b> Does Philips provide Gracenote music recognition database updates?	<b>A:</b> Yes. We provide quarterly updates of the Gracenote music recognition database through the website <a href="http://www.club.philips.com">http://www.club.philips.com</a> . Download the file to your PC and update the built-in Gracenote music recognition database from the PC using WADM in the supplied PC suite. Or you can burn the downloaded file on a CD and insert the CD into the CD loader on Center for update.

<p><b>Q:</b>What is Philips Wireless Audio Device Manager (WADM)?</p>	<p><b>A:</b>WADM mainly serves to transfer your PC's music library to the Wireless Music Center. In addition, it provides a one-stop solution to help you manage the music library on Center music library, such as edit track information, create/rename playlists, backup/restore music library in Center, as well as network setting, Gracenote music recognition update, Firmware upgrade. For details, see the manual <b>Connect to your PC</b> and WADM help file.</p>
<p><b>Q:</b> How do I transfer the MP3/WMA files of my PC's music library to Philips Wireless Music Center?</p>	<p><b>A:</b> Once you have installed Philips Wireless Audio Device Manager (WADM) and connected your PC to the Philips Wireless Music Center with the supplied Ethernet cable, you can use this software to drag and drop music files from your PC to the 'device window' of WADM. Transfer of track will start automatically and the average time it takes to transfer one track is 4-15 seconds. Always press and hold  to switch the set to Eco Standby (power-saving mode) before removing its power plug.</p>
<p><b>Q:</b> Is Philips Wireless Music Center and Station upgradeable?</p>	<p><b>A:</b>Yes, Philips Wireless Music Center and Station are software upgradeable, which means that they are ready for future functional upgrades if available. Check our website regularly for the latest news on new features and improvements at <a href="http://www.philips.com/support">http://www.philips.com/support</a></p>

## Compatibility

<p>Philips Streamium Wireless Music Products</p>	<p>The Philips Wireless Music Centers (WAC700/7000/7500, WAC3500D) are compatible with any Philips Wireless Music Stations (WAS700/7000/7500)</p>
<p>Flash Player</p>	<p><b>Philips</b> KEY007, KEY010, KEY013, HDD1XX (HDD100 / HDD120), SA16X (SA160 / SA164 / SA165 / SA167 / SA169), SA170, SA175, SA177, SA179, SA159, SA26X (SA261), PSA61X / PSA612, HDD084, HDD1XXX (HDD1830 / HDD1420 / HDD1620 / HDD1630 / HDD1835), HDD6XXX (HDD6320/00), SA1100/02, SA1115/02, SA12XX, SA13XX (SA1300/02), SA2000, SA40XX, SA5000, PMC7230, SA9XXX (SA9200, Flat I), SA21XX, SA31XX, SA41XX, SA51XX</p> <p><b>Apple</b> iPod Shuffle, Shuffle Gen 2, Mini, Nano Gen 1/2, Photo, Video Gen 1/2</p> <p><b>Creative</b> Zen Micro, MuVo TX FM, MuVo Micro N200, MuVo VIDZ, Zen Music.Photo Vision:M, DMPFX200</p> <p><b>Sony</b> NW-HD3, NW-E105,NW-E307</p> <p><b>iRiver</b> U10CT (0081) OR 103, H10,T10</p> <p><b>JNC</b> SSF-F302</p> <p><b>Samsung</b> YP-T7V</p> <p><b>SanDisk</b> Sansa m260</p>
<p>Flash Drive</p>	<p><b>SanDisk</b> Cruzer Flash Drive, Cruzer U3 Flash drive</p> <p><b>Sony</b> Mirco Vault Elite</p> <p><b>Toshiba</b> Flash memory U3</p> <p><b>PQI</b> PQI</p>

# Need help?

## User Manual

See the User manual that came with your player.

## Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)

## Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

 Please act according to your local rules and do not dispose of your old products with your normal household waste.

The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Batteries contain chemical substances that may pollute the environment, so they should be disposed of at an official collection point.



Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners  
© 2008 Koninklijke Philips Electronics N.V.  
All rights reserved.  
[www.philips.com](http://www.philips.com)



Printed in China  
wk8033