Quick Start Guide




What's in the Box?

You should find these items upon opening the box.





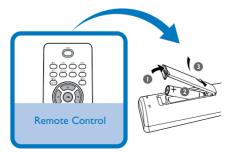












Connection

- 1 Connect the speaker wires to the **SPEAKERS** terminals.
- 2 Connect the power cord of the system to the AC power outlet.

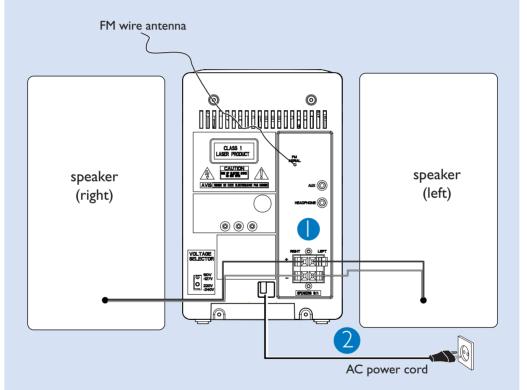

Tip:

It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

Step B Setup

Setting the clock

1 In standby mode, press and hold **CLOCK/DISPLAY** on the remote control set for 2 seconds.

2 Press **PROG** to select 12-hour or 24-hour display.

3 Press **CLOCK/DISPLAY** to confirm.

→ The clock digits for the hours flash.

4 Press **TUNING** I → I (→ / → on the remote control) to set the hours.

5 Press CLOCK/DISPLAY again.

→ The clock digits for the minutes flash.

6 Press **TUNING** I ►► I (► / ► on the remote control) to set the minutes.

7 Press CLOCK/DISPLAY to confirm the time.

Step C Enjoy

Playing a disc


1 Select CD source.

2 Lift the CD door on the top of the system to open the CD compartment.

3 Insert a disc with the printed side facing up and press down on **PULL TO OPEN** to close the CD door.

4 Press II to start playback.

5 Press ■ to stop playback.

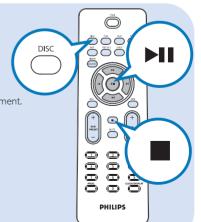



Programming and tuning to radio stations

- 1 Select TUNER source.
- **2** Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press ALBUM/PRESET +/- until the desired preset station is displayed

Tip:

Detailed playback features and additional functions are described in the accompanied owner's manual.

Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or AUX, for example).
- Then select the desired function (►II,
 I for example).



2007 © Koninklijie Philips Electronics N.V. All rights reserved. http://www.philips.com

