# Quick Start Guide





# What's in the Box?

You should find these items upon opening the box. Pull out the plastic \_ \_ \_ protective sheet before use. User Manual **Remote Control Quick Start Guide** 3 X iPod dock adaptors AC power adaptor








Connect the AC power adaptor of the system.

### Tip

- See the User Manual for how to connect other equipment to this system.

- Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!

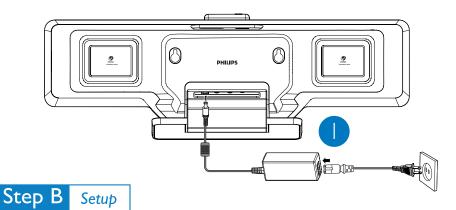

# Setting the clock

	In standby mode, press and hold <b>PROG/SET TIME</b> on the remote control.	
2		
	Press <b>VOLUME +</b> /- (or <b>VOL +</b> /- on the remote control) to switch between 12 hour and 24 hour display.	FOMER (Pod) (TUNER)
2		
	Press <b>PROG/SETTIME</b> on the remote control again to confirm. → The clock digits flash on the display panel.	
4		
	Press VOLUME +/- (or VOL +/- on the remote control) to set the hours.	SET TIME
A		SD (SHUFFLE) (TIMER) (PROG)
	Press <b>PROG/SET TIME</b> on the remote control again. → The clock digits for the minutes flash.	REPEAT ALBUM PRESET
6		
	Press <b>VOLUME +</b> /- (or <b>VOL +</b> /- on the remote control) to set the minutes.	SLEEP MUTE UOL _
		PHILIPS
	Press <b>PROG/SETTIME</b> on the remote control to confirm the time.	



3


3

# Programming and tuning to radio stations

Press **SOURCE** repeatedly (or **TUNER** on the remote control) to select the tuner source (FM).

Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.

Press **PRESET** +/- (or **ALBUM/PRESET**  $\blacktriangle$  /  $\bigtriangledown$  on the remote control) until the desired preset station is displayed.

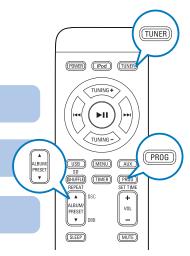

## Playing a USB mass storage device/SD/MMC card

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1) and memory cards

Insert the USB device's USB plug into the socket  $\bullet^{-+}$  or fully insert the SD/MMC card into the SD/MMC slot on the top of the system.

Press SOURCE once or more (or USB/CARD on the remote control) to select USB/CARD.

Play the available audio files using playback buttons on the set or remote control (such as II (



# Playing Apple iPod using DC910

Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.

Correctly place the compatible iPod player into the dock.

3

5

Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.

Power on your iPod player.

Select and play your favourite songs stored in the iPod player.

## Тір

Detailed playback features and additional functions are described in the accompany owner's manual.

#### Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example iPod, TUNER).
- Then select the desired function (for example ▶ II,
  ◄<, ▶>).



© Royal Philips Electronics N.V. 2008 All rights reserved.

