

DVD Kitchen Radio
with dock for iPod

Quick Start Guide

- 1
- Preparation
- 2
- Connect it
- 3
- Mount it
- 4
- Use it



This **Guide** shows you:

- basic installation setup
- how to install your unit
- how to play a DVD
- how you can watch TV on the unit

For detailed operation of all the features, please also read the **User manual**.



What else you'll need

These tools (not included) will help you mount the unit as described in part 3 Mount it, and on the template.

Electric drill

Tape measure

Scissors

Sellotape

Screwdriver

Safety goggles

What's in the box

DVD Kitchen Radio
with dock for iPod

Remote control
with one CR2025
battery loaded

12V DC adapter

Quick start guide

User manual

6 x iPod dock
adaptors

Mounting
template

4 x screws

4 x spacers

1 Preparation

For best performance, install the unit as far as possible from sources of noise and interference (e.g. fridges, microwaves, fluorescent lamps)


- a
- Find a mounting location near a wall outlet.
- b
- Use the mounting template to test the design and thickness of your kitchen cabinet bottom.
- c
- Decide whether you want to connect the unit with other audio/ visual equipment. (See **2B** below)

Template



To reduce the risk of fire, do not place any heating or cooking apparatus beneath this unit.

2 Connect it

- A
- Connect the following supplied accessories to the respective jacks on the rear of the unit :
- **12V DC** power adapter
 - Extend the FM pigtail antenna fixed to the main unit (The unit has built-in AM antenna.)

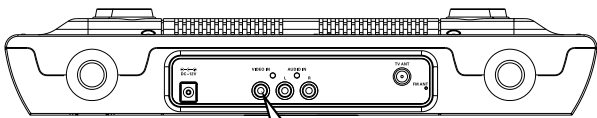

- B
- Other connections (cables not included)
- For TV reception on the unit, connect a TV antenna/CATV cable (not supplied).
 - For use with VCR or other audio/video appliances, connect the composite cable and match the colors of the cinches (**AUDIO IN L/R, VIDEO IN**) on the unit.

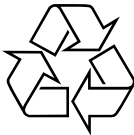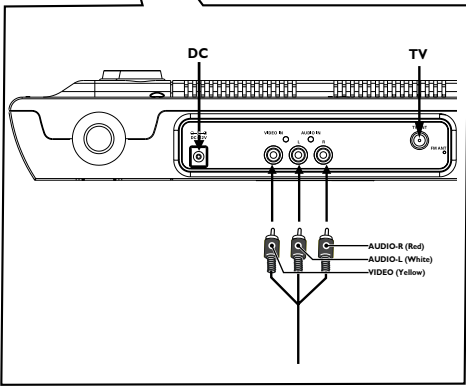


3

Mount it

Ask a friend to help out. An extra hand to hold the unit makes mounting easier and quicker.

A

- Cut the template to fit inside the cabinet.
- Align the template border marked **"FRONT"** along the front edge of your cabinet.
- Use adhesive tape to fix the template.
- Drill 1/4 inch holes, as marked **X** on the template.
- Remove the template when you finish drilling.

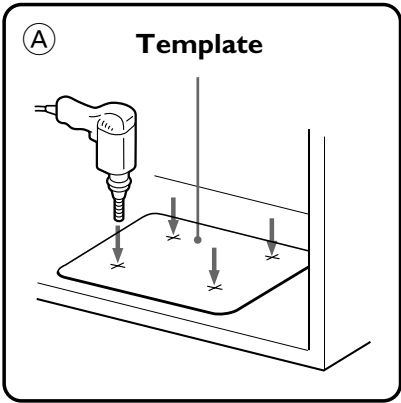

Tip


- Clean the bottom of the cabinet surface and also empty your cabinet before mounting.
- Place the unit in a clean, safe place when drilling to avoid wood shavings dropping into the ventilation slots.
- Use a nail to start each drill hole.
- Drill from the bottom upwards if you do not have enough room inside the cabinet.
- Hold your drill firmly at 90° with the cabinet bottom and drill holes at low speed.
- Clear wood shavings.

B

Using the spacers



On the spacers, there are 4 pairs of notch length options. Depending on the thickness of you cabinet bot- tom (with/ without an overhang), these notch lengths correspond to the 4 notch height in the space holders, and allow you to adjust to the best height to help you mount the unit.

- Measure the height of the cabinet bottom and/over- hang.
- Turn the spacer counterclockwise to determine which of the 4 heights is most suitable: **Low** • • **High**. Align to the arrow indication.
- Insert the spacers accordingly.

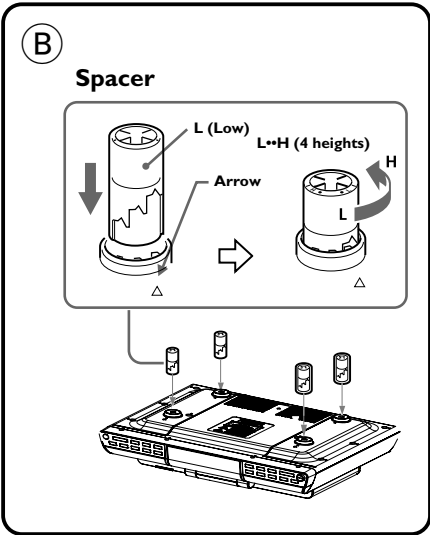

C

- **Manually** fasten the **4** long screws down into the spacer holder holes to mount your set. Start screwing at opposite corners of the unit for better support.

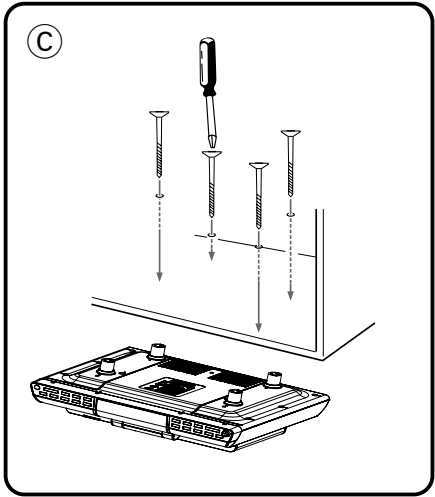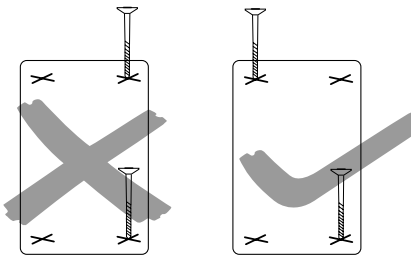

Tip

! To prevent damage to your set, do not use an electric drill to secure screws when mounting!



- If the overhang is more than 1 1/4 inch, use longer screws (not included).

4


Use it

For full details, please read and follow the instructions inside the **User manual**.

A

Power supply



- 1 Insere the DC plug of the AC adaptor to the 12V sock on the back panel.
- 2 Plug the AC plug of the AC adaptor to the wall socket.
- 3 Press **⏻** (or **SOURCE**) to switch on.

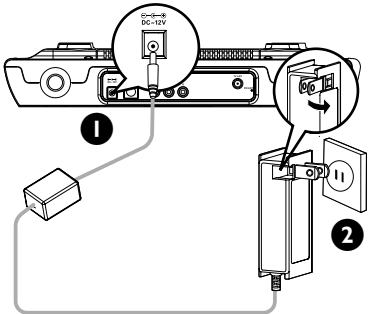

B

Using the TV screen


- 1 Press **PUSH** at the bottom the set to release the TV panel. .
- 2 Pull down the panel (maximum 110°).
- 3 Turn around the panel to find the screen.
- 4 Adjust the screen to a suitable angle (maximum 270°).

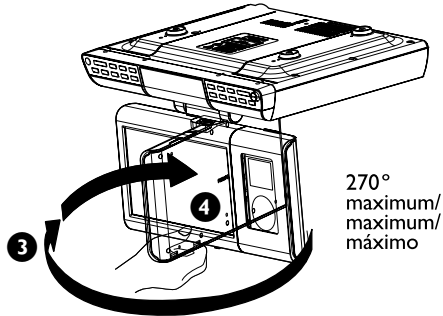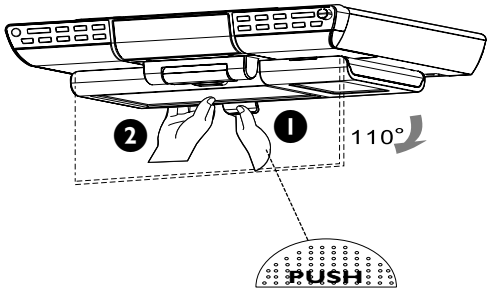


E

Playing Apple iPod using DCD778

- 1 Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.
- 2 Correctly place the compatible iPod into the dock.
- 3 Press **iPod** on the main unit (**iPod/AV** on the remote control).
- 4 Power on your iPod.
- 5 Select and playback your favorite song/video/photo on the **iPod**.

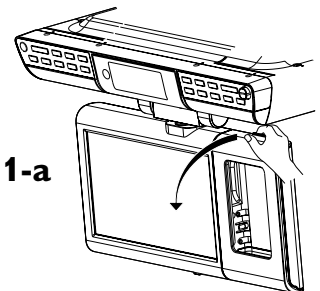

1-b

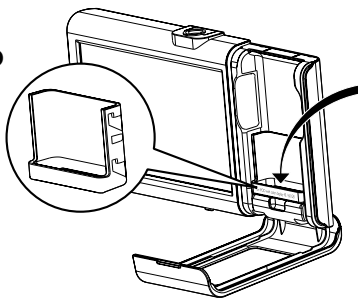

Tip

– Refer to the user manual supplied for detailed descriptions of “Compatible portable player”, “Selecting the correct dock adaptor”, “Installing the dock adaptor”, and the important notes for dock operation.

C

How to play a DVD /CD

- Select **DISC** source.
- Press **▲ EJECT** to open the disc tray.
- Insert a DVD/CD with the print side facing up, and close the disc tray.
- Press **▶ II** to start disc playback.