

# Quick Start Guide



Step A **Connect**

Step B **Setup**

Step C **Enjoy**

## What's in the Box?


You should find these items upon opening the box.




DIN cable




AV cord (R/W/Y)

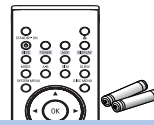


Remote control with two  
AAA batteries

 


FM antenna  
SCART adapter

 

Quick start guide  
User manual  
Wall mounting instructions

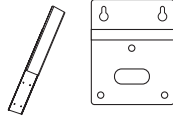

Brackets and screws  
Cabling channel (optional)

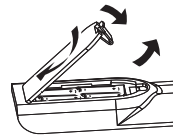


# PHILIPS

## Step A Connect

### Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.



- 1 Connect the sub woofer to the main unit with the supplied DIN cable.
- 2 Connect speakers.
- 3 Connect the FM antenna.
- 4 Connect the AV cable to a TV.
- 5 Connect the power cords of the system and TV.

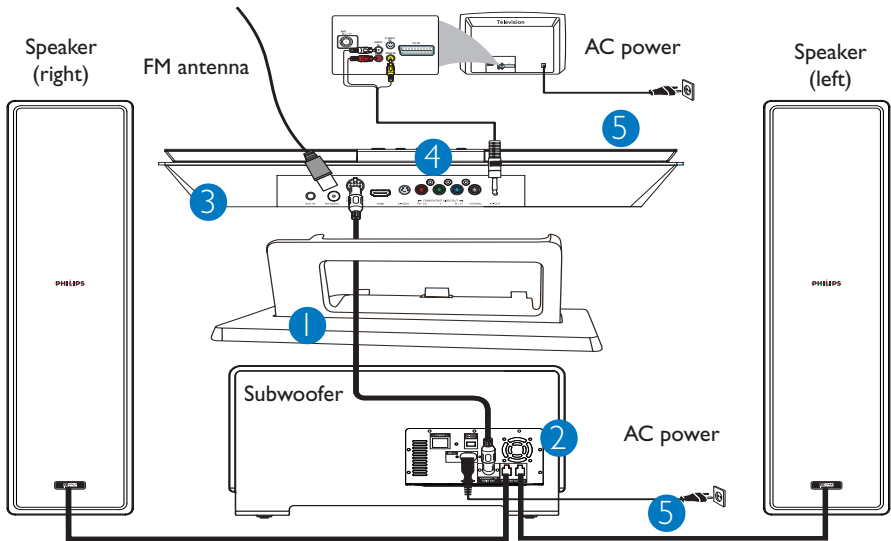

## Step B Setup

### Setting up the TV

- 1 Press **SOURCE** (DISC 1 or DISC 2 on the remote) to select the disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

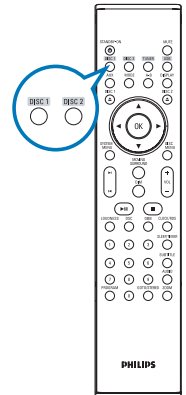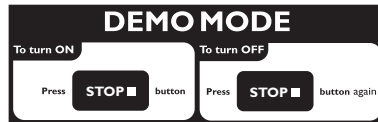

## Step B Setup

### Setting the clock

1


In Standby mode, press and hold **CLOCK/RDS** on the remote until the time flashes on the display.

2

Press **VOLUME +/-** (**VOL+/-** on the remote) to set the hours and **CLOCK/RDS** to confirm.

3

Press **VOLUME +/-** (**VOL+/-** on the remote) to set the minutes and **CLOCK/RDS** to confirm.

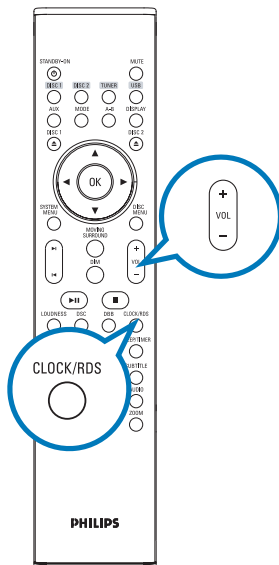


### Setting DVD menu options

#### IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to the interlaced mode.
- 2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC 1** (or **DISC 2**) and "1" to exit progressive scan.

**Tip**  
See chapters "Getting Started" and "System Menu Options" in the User Manual for detailed descriptions.

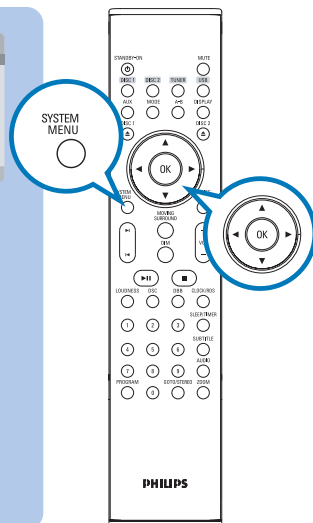

## Playing a disc

1 Press **DISC 1** ▲ / **DISC 2** ▲ on the remote to open the disc tray and load in a disc, then press the same button again to close the disc tray.  
→ Make sure the label side of the disc is facing you.

2 Playback will start automatically. If not press ►||.

3 To stop playback, press **STOP** ■ (■ on the remote).

## Programming and tuning to radio stations

1 Press **SOURCE** (or **TUNER** on the remote control) to select tuner source.

2 Press **PROGRAM** on the remote control for more than two seconds to program all available stations in order of waveband.

3 Press ◀/▶ (or ◀/▶ on the remote control) until the desired preset station is displayed.

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

### Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (**DISC** or **TUNER**, for example).
- Then select the desired function (►||, ◀, ▶ for example).

