

## MP3-CD Soundmachine

AZ1308

PHILIPS CONSUMER ELECTRONICS COMPANY  
Marietta, GA 30006-0026, U.S.A.



Thank you for choosing Philips.

### Need help fast?

Read your Quick Use Guide and/or Owner's Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

[www.philips.com/support](http://www.philips.com/support)  
or call

1-888-PHILIPS (744-5477)  
while with your product.  
(and Model / Serial number)



Philips vous remercie de votre confiance.

### Besoin d'une aide rapide?

Les Guide d'utilisation rapide et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips.

Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

[www.philips.com/support](http://www.philips.com/support)  
ou formez le

1-800-661-6162 (Francophone)  
1-888-PHILIPS (744-5477) (English speaking)  
Veuillez à avoir votre produit à portée de main.  
(et model / serial nombre)



Gracias por escoger Philips

### Necesita ayuda inmediata?

Lea primero la Guía de uso rápido o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

[www.philips.com/support](http://www.philips.com/support)  
o llame al teléfono

 
1-888-PHILIPS (744-5477)  
y tenga a mano el producto.  
(y número de model / serial)



# PHILIPS



Meet Philips at the Internet  
<http://www.philips.com>

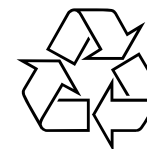

CLASS 1  
LASER PRODUCT

AZ1308

Printed in China

PDCC-JH-0604

## Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

### \*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

### \*Product Safety Notification


By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.


### \*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

### Know these safety symbols



 This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.


 The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 
For Customer Use	
Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.	
Model No.	_____
Serial No.	_____

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

## IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a piece of dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart /apparatus combination to avoid injury from tip-over:






AC Polarized Plug

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:  
Install **all** batteries correctly, **+** and **-** as marked on the unit.  
Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).  
Remove batteries when the unit is not used for a long time.
16. Apparatus shall not be exposed to dripping or splashing.
17. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
18. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.  
**For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).**

EL 6475-S004: 03/12


**Class II equipment symbol**   
This symbol indicates that the unit has a double insulation system

   1

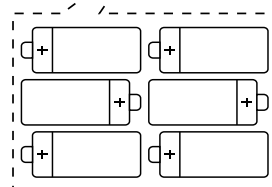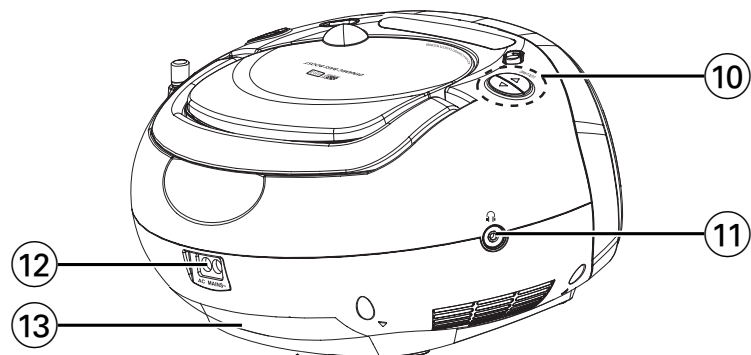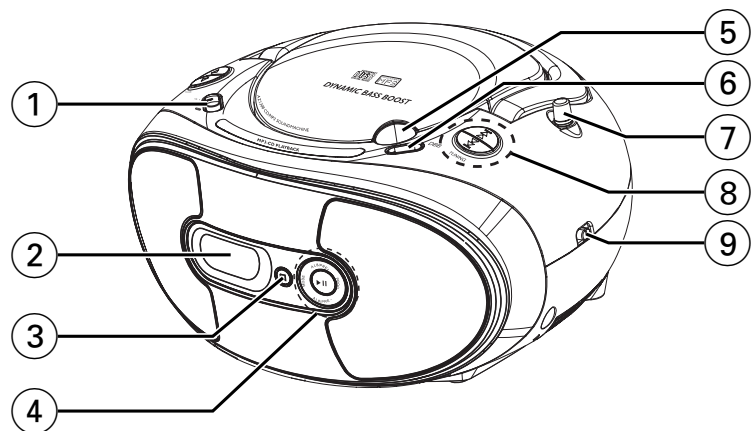

6 x R14 • UM-2 • C-CELLS

 
2

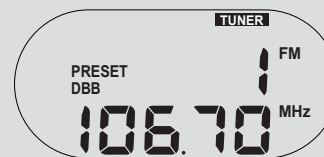


3



 
4

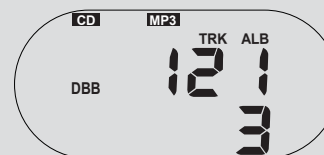

5

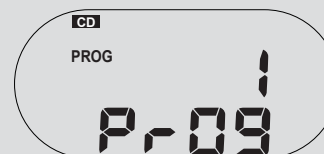 


6

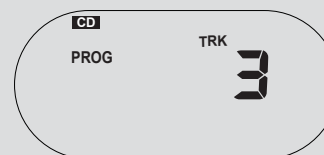 


7



 8

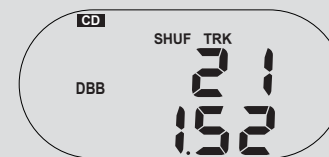

9

 

## English

### Supplied Accessories

– AC power cord

### Top/front panels (See 1)

① **Source selector: CD/MP3, TUNER, OFF**

– selects CD/MP3, or radio (FM/AM) source of sound

– power off switch

② **Display** – shows the status of the disc/tuner

③ **■** – stops CD/MP3 playback;  
– erases a CD/MP3 program

④ **▶ II** – starts or pauses CD/MP3 playback

**MODE** – selects different play modes:  
e.g. REPEAT or SHUFFLE (random order)

**PROG**

**CD/MP3:** – programs tracks and reviews the program

**TUNER:** – programs preset radio stations

**ALB/PRESET +/-**

**For MP3:** – selects albums (up, down)

**TUNER:** – selects a preset radion station

⑤ **LIFT TO OPEN** – opens/ closes the CD door.

⑥ **DBB (Dynamic Bass Boost)**  
– turns the bass enhancement on/off.

⑦ **Telescopic antenna** – improves FM reception.

## Controls

⑧ **TUNING** ►►◄◄

**TUNER:** – tunes to radio stations

**CD/MP3:** – selects the next/previous track  
– fast searches forwards/backwards (press and hold the button) with- in the current track

⑨ **BAND** – selects waveband: FM or AM

### Back/bottom panels (See 1)

⑩ **VOLUME** – adjusts volume level

⑪ **🎧** – 3.5 mm stereo headphone socket

**Helpful hints:** *The speakers will be muted when headphones are connected to the set.*

⑫ **AC MAINS~** – inlet for power cord.

⑬ **Battery door** – open to insert 6 x 1.5V R-14/ UM-2/ C-cells

### CAUTION

**- Visible and invisible laser radiation. If the cover is open, do not look at the beam.**

**- High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.**

**- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.**

## Power Supply

### Power Supply

Whenever convenient, use the power supply cord if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

### Batteries (not included)

- 1 Open the battery door and insert 6 batteries, typed **R-14, UM-2** or **C-cells**, (preferably alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment. (See 1)
- 2 Replace the battery door, making sure the bat- teries are firmly and correctly in place. The set is now ready to operate.

**Batteries contain chemical substances, so they should be disposed of properly.**

- *Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst:*
- *Do not mix battery types: e.g. alkaline with car- bon zinc. Only use batteries of the same type for the set.*
- *When inserting new batteries, do not try to mix old batteries with the new ones.*
- *Remove the batteries if the set is not to be used for a long time.*

### Using AC power

- 1 Check if the power voltage, **as shown on the type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
- 2 Connect the power cord to the **AC MAINS~** inlet and the wall socket. The set is now connected and ready for use.
- 3 To switch the set off completely, withdraw the power cord from the wall socket.
- 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.

## Basic Operation

- Disconnect the power cord from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.

**The type plate is located on the bottom of the set.**

### Helpful hints:

- *To avoid unnecessary energy consumption, always adjust the **Source selector** to **OFF** after using the set.*

### Basic operation

**Switching on and off and selecting the function**

- 1 To select your sound source, adjust the **Source selector** to: **CD/MP3** or **TUNER**.
- 2 To switch off the set, adjust the **Source selector** to **OFF** position.

### Adjusting volume and sound

- 1 Adjust the volume with the **VOLUME ▲, ▼** controls.  
→ Display briefly shows **LVL** and the vol- ume level in number from 00-32.
- 2 Adjust **DBB** to select dynamic bass boost on or off.  
→ Display shows "DBB" when activated.

**This product complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:**

1. **This device may not cause harmful interference, and**
2. **this device must accept any interference received, including interference that may cause unde- sired operation.**

## Digital Tuner

### Digital tuner

#### Tuning to radio stations

- 1 Push the **source selector** to **TUNER**.  
→ **LU** is displayed briefly, then the radio station frequency, waveband and, if programmed, a preset number are shown. (See [2])
  - 2 Push **BAND** to **FM** or **AM** to select desired waveband.
  - 3 Press and hold **TUNING** **◀▶** until the frequency in the display starts running.  
→ The radio automatically tunes to a station of sufficient reception. Display shows **Scrch** during automatic tuning.
  - 4 Repeat step 3 if necessary until you find the desired station.
    - To tune to a weak station, press **TUNING** **◀▶** briefly and repeatedly until you have found optimal reception.
- To improve radio reception:**
- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
  - For **AM**, the set uses a built-in aerial. Direct this aerial by turning the whole set.

#### Programming radio stations

You can store up to a total of 20 radio stations in the memory (10 FM and 10 AM), manually or automatically (Auto store).

#### Manual programming

- 1 Tune to your desired station (see **Tuning to radio stations**).
- 2 Press **PROG** to activate programming.  
→ Display: **PROG** flashes.
- 3 Press **ALB/PRE +/-** once or more to allocate a number from 1 to 10.
- 4 Press **PROG** to confirm.
- 5 Repeat steps 1-4 to store other stations.

#### Helpful hints:

- You can erase a preset station by storing another frequency in its place.

#### Autostore

Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- 1 Push **BAND** to **FM** or **AM** to select desired waveband.
- 2 Press **PROG** until **Autst** displays and flashes.  
→ Available stations are programmed (AM or FM). After all stations are stored, the first autostore preset station will then automatically play.

#### To listen to a preset or autostore station

Press the **ALB/PRE +/-** buttons once or more until the desired preset station is displayed.

## CD/MP3 Player

### About MP3

The music compression technology MP3 (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- **Getting MP3 files:** you can either download legal music files from the internet to your computer hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files.)
- **Creating a MP3 CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner.

#### Helpful hints:

- Make sure that the file names of the MP3 files end with **.mp3**.
- Total number of music files and albums: around 350 (with a typical file name length of 20 characters)
- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

### Playing a disc

- This CD player plays Audio Discs including CD-R/CD-RW and MP3-CD. Do not try to play a CD-ROM, CD-I, CDV, VCD, DVD or computer CD.

#### IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.

- 1 Adjust the **Source selector** to **CD/MP3**.
- 2 Open the CD door, and insert a CD/MP3 with the printed side facing up, then press the CD door gently to close.  
→ Display shows flashing **CD**, indicating the disc reading, then the total track number and playing time. "CD" is also display (See [3]).  
→ **For MP3:** "MP3" and the total album number are also displayed (See [4]).
- 3 Press **▶II** to start playback.  
→ Display shows current track number and the elapsed time of the track.
- 4 To pause playback, press **▶II**.  
→ Display: The elapsed playing time flashes.
- 5 To resume, press **▶II** again.
- 6 To stop CD playback, press **■**.

#### Helpful hints:

CD play will also stop when:

- you open the CD door;
- you select **TUNER** or **OFF**;
- the CD has reached the end.

### Selecting a different track

- Press **TUNING** **◀▶** once or repeatedly until the desired track number appears in the display.  
**For MP3:** First press **ALB/PRE +/-** once or more to find your album.
- In the pause/stop position, press **▶II** to start playback.

### Finding a passage within a track

- 1 During playback, press and hold **TUNING** **◀▶**.  
→ The CD/MP3 is played at high speed and with reduced volume.

## CD/MP3 Player

- 2 When you recognize the passage you want, release **TUNING** ◀/ ▶ to resume normal playback.

### Helpful hints:

- When your searching reaches the end of the last track, the CD/MP3 goes to stop mode.

## Programming track numbers

You may store up to 20 tracks (for MP3: 10 tracks) in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **TUNING** ◀ or ▶ to select your desired track number.  
**For MP3:** First press **ALB/PRE +/-** once or more to find your album.
- 2 Press **PROG** to store the desired track number.  
→ “PROG” is displayed, and display briefly shows current program sequence, then the currently stored track number.  
(see [5] [6])  
→ “**For MP3:** The current album number is also displayed.
- If you attempt to program without first selecting a track, display will show **NOSE** briefly, then the total track number.
- 3 Repeat steps 1 to 2 to select and store all desired tracks in this way.  
→ If you attempt to store more than 20 tracks (for MP3: 10 tracks), no track can be stored and the display shows **FULL**.
- 4 To play your program, press ▶II.

### To review your program

In the stop position, press **PROG** to view the first program information, then press **PROG** again to view the next program information. Repeat the above to view all the program stored.

→ Each time the display shows the program sequence (**Pr 09 X**) briefly, then the program track number (see [5] [6]).

### To erase a program

You can erase a program by:

- pressing ■ (twice during playback or once in the stop position);
  - selecting **TUNER** or **OFF** position;
  - opening the disc door.
- Display: **PROG** disappears.

## Different play modes: REPEAT and SHUFFLE (See [7] [8])

You can play the current track or the whole disc repeatedly, and combine REPEAT modes with PROGRAM.

**REP** – plays the current track continuously.

**REP ALL** – repeats the entire CD/program

**SHUF** – plays all the tracks in random order

- Selection of shuffle play is not available in the program mode.
- 1 To select play mode, press **MODE** once or more.  
→ The display shows selected play mode.
  - 2 Press ▶II to start playback if in the stop/pause position.  
→ The disc will play automatically around few seconds later when SHUF mode is selected.
  - 3 To return to normal playback, press **MODE** repeatedly until the modes are no longer displayed.  
– You can also press ■ to cancel your play mode.

## Maintenance & safety (See [9])

### CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD-tape door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

### Safety information

- Place the set on a flat, hard and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15cm (6 inches) between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- Do not cover the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.



## Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

### Problem

- Possible cause
- Remedy

### No sound /power

- Volume not adjusted
- Adjust the VOL
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Headphones connected to the set
- Disconnect headphones.
- CD contains non-audio files
- Press **TUNING** ◀▶ once or more to skip to a CD audio track, instead of the data file.

### Display does not function properly / No reaction to operation of any of the controls

- Electrostatic discharge
- Switch off and unplug the set. Reconnect after a few seconds

### Poor radio reception

- Weak radio signal
- FM: Adjust the FM telescopic aerial

### Need indication

- No CD inserted
- Insert a CD
- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared
- CD-R/CD-RW is blank or not finalized
- Use a finalized CD-R/CD-RW or suitable CD Audio disc only

### Note:

**Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.**

### The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- Program/Shuffle is active
- Quit program/shuffle mode

### Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc

### The MP3-CD skips albums

- CD contains non-MP3 file folders
- Check your disc contains suitable file folders.

## Environmental information

All unnecessary packaging material has been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.**

## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français :

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

## PHILIPS LIMITED WARRANTY

### One (1) Year Free Product Exchange

**PHILIPS CONSUMER ELECTRONICS** warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

#### PROOF OF PURCHASE:

You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product, the date that you purchased the product, as well as the authorized retailer included, is considered such proof.

#### COVERAGE:

Warranty coverage begins the day you buy your product. For a period of one (1) year from the date of purchase, if the product is determined to be defective, Philips will exchange the defective product with a new or renewed product, at its option, at no charge. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires. When it is necessary for you to ship the product to Philips for exchange, you will pay the shipping cost for shipment to Philips. Philips will pay the shipping costs when returning a product to you.

Note: The exchange model supplied will be the most comparable one in Philips current inventory. Shipping of your product to Philips implies intent to follow the specified requirements of the warranty and exchange program. Product received by Philips cannot be returned. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay of exchange process.

#### EXCLUDED FROM WARRANTY COVERAGE

Your warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- Damage occurring to product during shipping when improperly packaged or cost associated with packaging.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Products lost in shipment and no signature verification of receipt can be provided.
- Products sold AS IS or RENEWED.

#### WHERE WARRANTY EXCHANGE IS AVAILABLE:

Exchange is available in all countries where Philips officially distributes the product. In countries where Philips does not distribute the product, the local Philips organization will attempt to exchange the product, although there may be a delay if the appropriate product is not readily available, or special customs processes are implied.

#### FOR EXCHANGE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:  
1-888-PHILIPS (1-888-744-5477)

#### FOR EXCHANGE IN CANADA...

1-800-661-6162 (French Speaking)  
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the PHILIPS partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

(Warranty: 4835 710 27325)