# Always there to help you

Register your product and get support at www.philips.com/support



BT3600



# User manual



## **Contents**

1	Important	2
2	Your Bluetooth speaker Introduction What's in the box	3 3 3
	Overview of the speaker	4
3	Get started	5
	Place the speaker Charge the built-in battery Turn on/off	5 5 5 5
4	Use Bluetooth devices	6
	Connect a device Connect two Bluetooth devices	6
	simultaneously	7
	Play from Bluetooth device	7
	Control your phone call	7
5	Listen to an external device	8
6	Product information	9
	Specifications	9
7	Troubleshooting	10
	General	10
	About Bluetooth device	10
8	Notice	11
	Compliance	11
	Care of the environment	11
	Trademark notice	12

# **Important**



#### Warning

- · Never remove the casing of this speaker.
- · Never lubricate any part of this speaker.
- Never place this speaker on other electrical equipment.
- · Keep this speaker away from direct sunlight, naked flames or heat.
- Do not use this speaker near water.
- Make sure that there is enough free space around the speaker for ventilation.
- Only use attachments or accessories specified by the manufacturer.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The speaker shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the speaker (e.g. liquid filled objects, lighted candles).



#### Note

. The type plate is located on the back of the product.

# Your Bluetooth speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

#### Introduction

With this speaker, you can


- enjoy audio from your Bluetooth-enabled devices or other external audio devices; and
- control the incoming phone call through Bluetooth connection.

## What's in the box

Check and identify the contents of your package:

- Main unit
- USB cable
- Short user manual
- Safety and notice leaflet

## Overview of the speaker

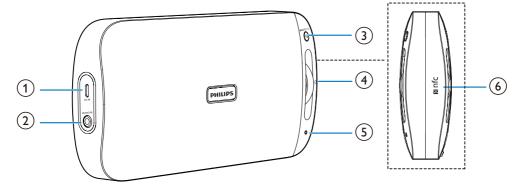


- (1) DC IN
  - Recharge the built-in battery.
- (2) AUDIO IN
  - Connect an external audio device.
- (3) MULTIPAIR (8)
  - Press and hold for two seconds to enter pairing mode.
  - Press and hold for two seconds to clear idle Bluetooth devices connected to the speaker.
  - Press to answer an incoming call.
  - Press and hold for two seconds to reject an incoming call.
  - During a call, press to end the current phone call.
  - During a call, press and hold for two seconds to transfer the call to your mobile device.
- (4)  $\circlearrowleft$  /Volume knob
  - Turn the speaker on or off.
  - · Adjust volume.
- 5 LED indicator
  - Indicate system status.
- 6 NFC
  - Connect a NFC compatible device through Bluetooth.

## 3 Get started

Always follow the instructions in this chapter in sequence.

## Place the speaker

To place the speaker on a flat surface, pull out the retractable stand from the backside of the speaker.

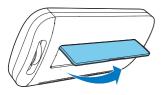

## Charge the built-in battery

The speaker is powered by the built-in rechargeable battery.



Note

- · Before use, fully charge the built-in battery.
- . The micro USB socket is for charging only.
- Rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.




Connect the USB cable between

- the DC IN socket on the speaker, and
- a USB socket on a computer.

The LED indicator indicates the battery status.

Mode	LED indicator	Battery status
"Off" mode	Solid red	Under charging
	Off	Fully charged
"Bluetooth"	Flashing red	Low battery
or "Audio-in"		
mode		

#### Turn on/off

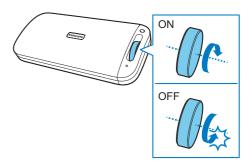

Rotate the  $\circlearrowleft$  knob clockwise or anticlockwise to turn the speaker on or off.

→ When the speaker is turned on, the LED indicator flashes.



Note

- During play, rotate the knob to increase or decrease volume.
- If there is no operation for 15 minutes, the speaker switches to standby mode automatically for power saving.

# 4 Use Bluetooth devices

With this speaker, you can listen to audio from Bluetooth-enabled devices and control the incoming call through Bluetooth.

#### Connect a device



#### Note


- Before pairing a device with this speaker, read its user manual for Bluetooth compatibility.
- The speaker can memorize a maximum of four paired devices. The fifth paired device will replace the first one.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- Any obstacle between this speaker and a Bluetooth device can reduce the operational range. Keep away from any other electronic device that may cause interference.
- The operational range between this speaker and a Bluetooth device is approximately 10 meters (30 feet).
- Make sure that no audio-in cable is connected to the AUDIO IN socket.

#### Connect a device through NFC

Near Field Communication (NFC) is a technology that enables short-range wireless communication between various NFC compatible devices, such as mobile phones and IC tags.

If your Bluetooth device supports NFC, you can connect it with this speaker easily.

- 1 Turn on the speaker.
  - → The LED indicator flashes blue.
- 2 Enable the NFC feature on your Bluetooth enabled device (refer to the user manual of the device).
- 3 Tap the NFC tag on the speaker with the NFC area of your Bluetooth device.

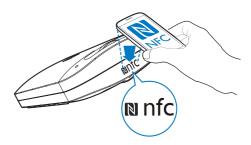

- 4 On your Bluetooth device, accept the pairing request with "BT3600". If necessary, input "0000" as the pairing password.
- 5 Follow the on-screen instructions to complete the pairing and connection.
  - → After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.

#### Connect a device manually

- 1 Turn on the speaker.
  - → The LED indicator flashes blue.
- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices (refer to the user manual of the device).
- When [Philips BT3600] is displayed on your device, select it to start pairing and connection. If necessary, enter default password "0000".
  - → After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.
  - If you fail to find [Philips BT3600] for pairing, press and hold MULTIPAIR 6 for two seconds to enter pairing mode, and then try again.

#### To disconnect the Bluetooth-enabled device:

- Disable Bluetooth on your device; or
- Move the device beyond the communication range.
  - The speaker beeps twice, and the LED indicator flashes.

# Connect two Bluetooth devices simultaneously

The speaker can connect to two Bluetooth devices at the same time.



- 1 Connect one Bluetooth device.
- Press and hold MULTIPAIR for two seconds.
  - → The speaker is ready to pair with one more Bluetooth device.
  - → The LED indicator flashes blue.
- 3 Connect the other Bluetooth device.
- If the speaker is connected to two devices and only one device is playing music, press and hold MULTIPAIR for two seconds.
  - → The speaker disconnects the idle device, and gets ready to pair with another device.
- If the speaker is connected to two devices and both are not playing music, press and hold MULTIPAIR for two seconds.
  - → The speaker disconnects the first paired device, and gets ready to pair with another device.

LED indicator	Description
Flashing blue quickly	Pairing
Flashing blue slowly	Connecting
Solid blue	Connected

## Play from Bluetooth device



Note

• If there is an incoming call on the connected mobile phone, music play pauses.

After successful Bluetooth connection, play audio on any connected Bluetooth device.

→ Audio streams from your Bluetooth device to the speaker.

### Control your phone call

After Bluetooth connection, you can control an incoming call with this speaker.

Button	Function
<b>(</b> 0	Press to answer an incoming call.
	Press and hold for two seconds to
	reject an incoming call.
	During a call, press to end the current call.
	During a call, press and hold for two
	seconds to transfer the call to your
	mobile device.



Note

 Music play pauses when there is an incoming call, and resumes when your phone call ends,


# 5 Listen to an external device

With this speaker, you can also listen to an external audio device such as an MP3 player.



#### Note

 Make sure that music playback through Bluetooth is stopped.

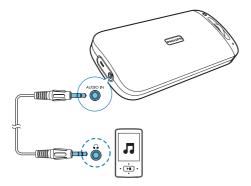

- Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to
  - the AUDIO IN socket on this speaker, and
  - the headphone socket on the external device.
- 2 Play audio on the external device (refer to its user manual).

# 6 Product information



#### Note

 Product information is subject to change without prior notice.

## **Specifications**

## Amplifier

Rated Output Power	2 X 5 W RMS
Signal to Noise Ratio	> 62 dBA
Audio-in Input	600 mV

#### Bluetooth

Bluetooth Version	V4.1
Supported Profiles	A2DP, AVRCP, HSP/ HFP
Range	10 m (Free space)

## General information

Power Supply (through USB socket)	5 V === 1 A
Built-in Battery	Li-polymer battery (3.7 V, 2200 mAh)
Dimensions - Main Unit (W x H x D)	207 × 97 × 34 mm
Weight - Main Unit	0.45 kg

# 7 Troubleshooting



#### Warning

· Never remove the casing of this device

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

#### General

#### No power

• Recharge your speaker.

#### No sound

- Adjust volume on the speaker or the Bluetooth-connected device.
- Make sure that your Bluetooth device is within the effective operational range.

#### No response from the speaker

Restart the speaker.

The LED indicator is solid red, and the speaker has no response when pressing any key.

 The speaker is in DEMO mode. Press and hold MULTIPAIR (9) for 15 seconds to exit this mode.

#### About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

#### Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is not in pairing mode. Press and hold MULTIPAIR for two seconds, and then try again.

# The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

## 8 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

### **Compliance**

# **C€**0890

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.philips.com/support.

### Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains a built-in rechargeable battery covered by

European Directive 2013/56/EU which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.

Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



#### Caution

 Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.



#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Trademark notice

# **Bluetooth**°

The Bluetooth \* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson is under license. Other trademarks and trade names are those of their respective owners.



The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.



2015  $\circledcirc$  Gibson Innovations Limited.All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

