

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CEM2000



---

|    |                          |    |
|----|--------------------------|----|
| EN | User manual              | 3  |
| RU | Руководство пользователя | 27 |

---

**PHILIPS**

# Contents

---

|                    |          |
|--------------------|----------|
| <b>1 Important</b> | <b>4</b> |
| Safety             | 4        |
| Notice             | 4        |

---

|                                |          |
|--------------------------------|----------|
| <b>2 Your car audio system</b> | <b>5</b> |
| Introduction                   | 5        |
| What's in the box              | 5        |
| Overview of the main unit      | 7        |
| Overview of the remote control | 8        |

---

|                                |          |
|--------------------------------|----------|
| <b>3 Get started</b>           | <b>9</b> |
| Install the car audio          | 9        |
| Install remote control battery | 13       |
| Turn on                        | 14       |
| Select country/region          | 14       |
| Set clock                      | 14       |

---

|                                |           |
|--------------------------------|-----------|
| <b>4 Listen to radio</b>       | <b>15</b> |
| Tune to a radio station        | 15        |
| Store radio stations in memory | 15        |
| Store stations manually        | 15        |
| Tune to a preset station       | 15        |

---

|                              |           |
|------------------------------|-----------|
| <b>5 Play with RDS</b>       | <b>16</b> |
| Turn on RDS                  | 16        |
| Select program type          | 16        |
| Select alternate frequencies | 17        |
| Receive traffic announcement | 17        |
| Set RDS clock                | 17        |

---

|                               |           |
|-------------------------------|-----------|
| <b>6 Play audio files</b>     | <b>18</b> |
| Play a disc                   | 18        |
| Play from USB                 | 18        |
| Search for an MP3/WMA track   | 19        |
| View play information         | 19        |
| Repeat play                   | 19        |
| Shuffle play                  | 19        |
| Intro play                    | 19        |
| Connect external sound source | 19        |

---

|                               |           |
|-------------------------------|-----------|
| <b>7 Adjust sound</b>         | <b>20</b> |
| Adjust volume                 | 20        |
| Mute                          | 20        |
| Turn DBB and subwoofer on/off | 20        |
| Select preset equalizer       | 20        |
| Other sound settings          | 20        |

---

|                                 |           |
|---------------------------------|-----------|
| <b>8 Adjust system settings</b> | <b>21</b> |
| Select anti-shock setting       | 21        |
| Turn beep sound on/off          | 21        |
| Select blackout setting         | 21        |
| Turn demo mode on/off           | 21        |
| Reset                           | 22        |

---

|                                 |           |
|---------------------------------|-----------|
| <b>9 Additional information</b> | <b>22</b> |
| Detach the front panel          | 22        |
| Replace fuse                    | 22        |
| Remove the unit                 | 23        |

---

|                               |           |
|-------------------------------|-----------|
| <b>10 Product information</b> | <b>23</b> |
|-------------------------------|-----------|

---

|                           |           |
|---------------------------|-----------|
| <b>11 Troubleshooting</b> | <b>24</b> |
|---------------------------|-----------|

---

|                    |           |
|--------------------|-----------|
| <b>12 Glossary</b> | <b>25</b> |
|--------------------|-----------|

# 1 Important

## Safety

- Read and understand all instructions before you use your apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- This apparatus is designed for negative ground (earth) 12 V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Clean the apparatus and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- Never place any objects other than discs into the apparatus.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the apparatus screen! Never touch, push, rub or strike the screen with any object.



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

## Notice



Be responsible  
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

This apparatus includes this label:



## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



This product complies with the radio interference requirements of the European Community.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2010 © Koninklijke Philips Electronics N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

## 2 Your car audio system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

### Introduction

With the in-car audio system, you can enjoy your drive while listening to:


- FM or AM (MW) radio
- Audio from CD or MP3 disc
- Audio from a USB device
- Audio from external devices

---


### What's in the box

Check and identify the contents of your package:

- ① Main unit
- ② Remote control
- ③ Front panel
- ④ Trim plate
- ⑤ Carrying case for front panel
- ⑥ Sleeve
- ⑦ Rubber cushion
- ⑧ Screws x 4 pcs
- ⑨ Standard ISO connector
- ⑩ Disassembly tools x 2 pcs
- ⑪ User manual
- ⑫ Quick start guide

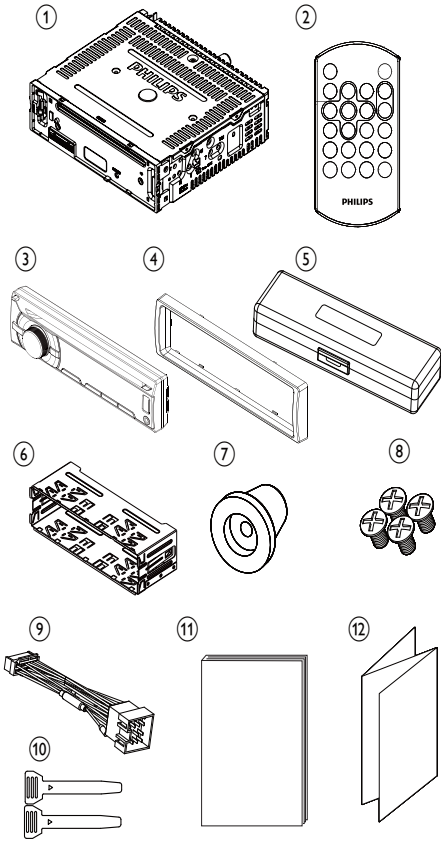

## Overview of the main unit

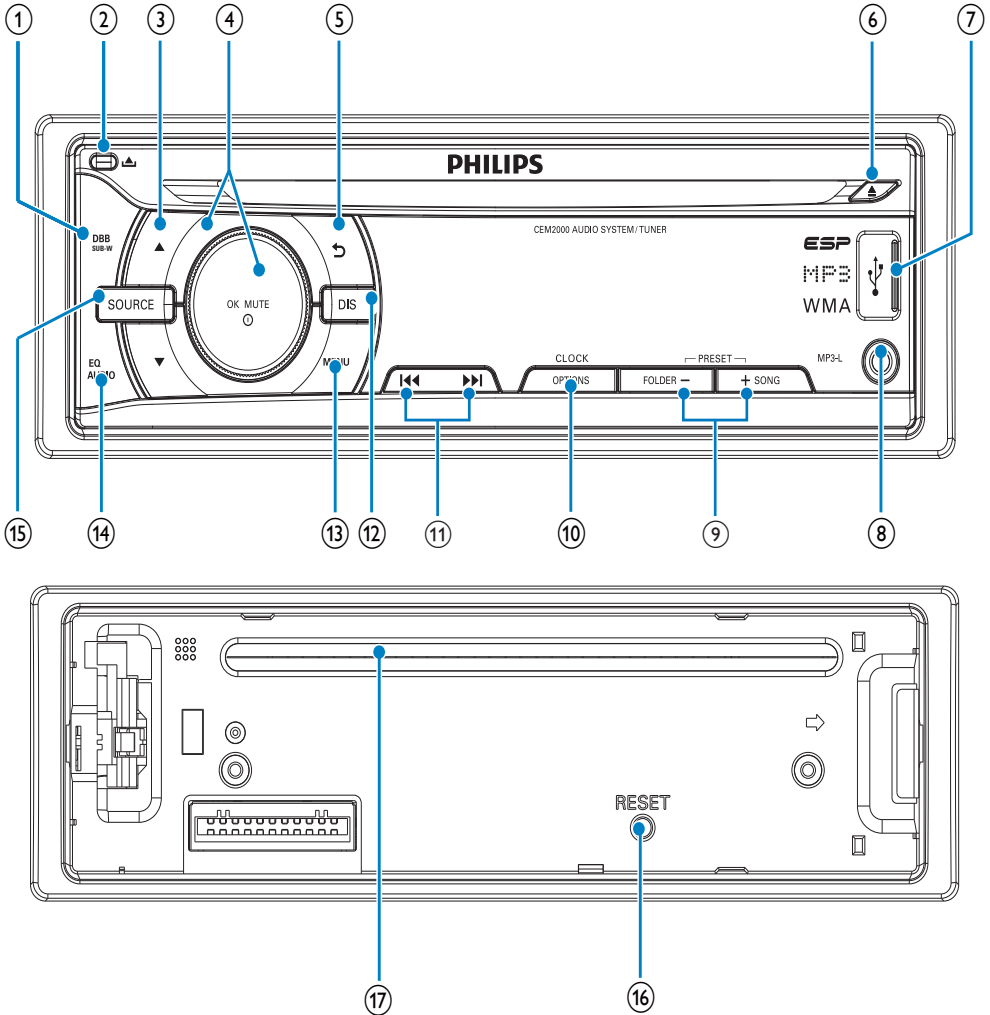

### ① DBB/SUB-W

- Turn on or off Dynamic Bass Boost (DBB) sound.
- Turn on or off subwoofer.

### ② ▲

- Unlock the panel.





### ③ ▲/▼

- Select tuner band.
- Select MP3/WMA folder.
- Scroll up/down menu.


### ④ ⓪/OK/MUTE



- Turn the unit on or off.
- Confirm selection.

- Mute or unmute sound.
- Rotate to adjust volume.

- ⑤  Return to previous menu.
- ⑥  Eject disc.
- ⑦  USB socket.
- ⑧ **MP3 LINK**  
• Connect external audio device.
- ⑨ **+SONG/FOLDER -**  
• Select preset radio station.  
• Search for track/folder.
- ⑩ **OPTIONS/CLOCK**  
• Access option menu.  
• View clock.
- ⑪  Tune for radio station.  
• Skip/search for track.  
• Fast forward/backward playback.
- ⑫ **DISP**  
• Display current status.
- ⑬ **MENU**  
• Access system menu.
- ⑭ **EQ AUDIO**  
• Select equalizer (EQ) setting.  
• Access audio setting menu.
- ⑮ **SOURCE**  
• Select audio source.
- ⑯ **RESET**  
• Restore default settings.
- ⑰ **Disc slot**
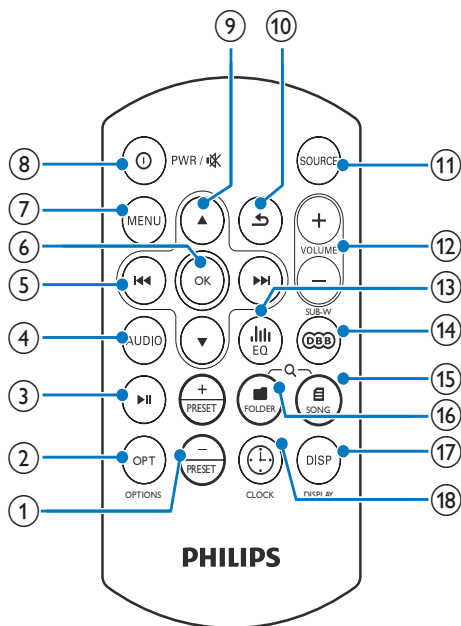
## Overview of the remote control



- ① **+ / PRESET - / RESET**  
• Select preset radio station.
- ② **OPT**  
• Access option menu.
- ③  Start play.  
• Pause or resume play.
- ④ **AUDIO**  
• Access audio setting menu.
- ⑤  Tune to a radio station  
• Skip track.  
• Fast backward/forward playback
- ⑥ **OK**  
• Confirm selection.
- ⑦ **MENU**  
• Access system menu.

- ⑧ **Ⓞ/PWR/Ⓜ**
  - Turn the unit on or off.
  - Mute or restore volume.
- ⑨ **▲/▼**
  - Select tuner band.
  - Scroll up/down menu.
  - Select MP3/WMA folder.
- ⑩ **⏪**
  - Return to previous/top menu.
- ⑪ **SOURCE**
  - Select audio source.
- ⑫ **VOLUME +/-**
  - Adjust volume.
- ⑬ **EQ**
  - Select equalizer (EQ) setting.
- ⑭ **DBB/SUB-W**
  - Turn on or off Dynamic Bass Boost (DBB) sound.
  - Turn on or off subwoofer.
- ⑮ **SONG**
  - Search for track.
- ⑯ **FOLDER**
  - Search for folder.
- ⑰ **DISP**
  - Display current status.
- ⑱ **CLOCK**
  - View clock.

## 3 Get started



### Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.



### Caution

- This unit is designed for negative ground (earth) 12 V DC operation only.
- Always install this unit in the car dashboard. Other locations can be dangerous as the rear of the unit heats up during use.
- To avoid short-circuit: before you connect, ensure that the ignition is off.
- Ensure that you connect the yellow and red power supply leads after all other leads are connected.
- Ensure that all loose leads are insulated with electrical tape.
- Ensure that the leads do not get caught under screws or in parts that will move (e.g. seat rail).
- Ensure that all ground (earth) leads are run to a common ground (earth) point.
- Use only the supplied mounting hardware for a safe and secure installation.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.



### Note on the power supply lead (yellow)

- When you connect other devices to this apparatus, ensure that the rating of the car circuit is higher than the total fuse value of all the connected devices.

### Notes on speaker connection


- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another.

## Connection: for cars with ISO connectors


### ! Caution

- Ensure that all loose leads are insulated with electrical tape.


- 1 Pull out the ISO connectors from car dashboard and connect them to the bigger end of the supplied standard connector.

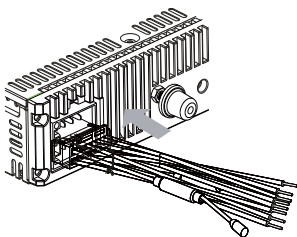

- 2 Connect the other end of the supplied standard connector to the unit.

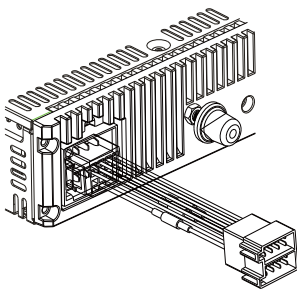

- 3 Connect the antenna and amplifier as illustrated, if applicable. You can connect the car audio to the amplifier through RCA-TO-RCA cables (not supplied).

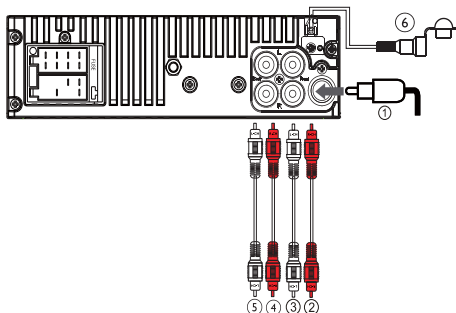


|   | Connector                    | Connect to          |
|---|------------------------------|---------------------|
| 1 | ANTENNA                      | Antenna             |
| 2 | FRONT LINE<br>OUT R (Socket) | Front right speaker |
| 3 | FRONT LINE<br>OUT L (Socket) | Front left speaker  |
| 4 | REAR LINE<br>OUT R (Socket)  | Rear right speaker  |
| 5 | REAR LINE<br>OUT L (Socket)  | Rear left speaker   |
| 6 | SUBWOOFER                    | Subwoofer           |

## Connection: for cars without ISO connectors


### ! Caution

- Be sure to connect the black ground (earth) lead first.

- 1 Connect the antenna and amplifier as illustrated, if applicable.

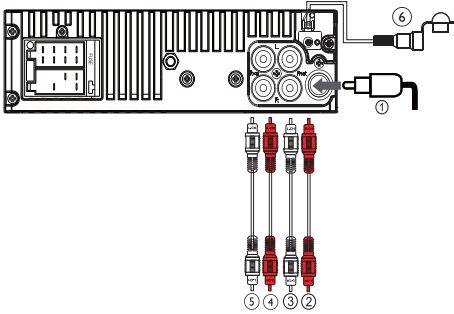


| Connector                   | Connect to          |
|-----------------------------|---------------------|
| 1 ANTENNA                   | Antenna             |
| 2 FRONT LINE OUT R (Socket) | Front right speaker |
| 3 FRONT LINE OUT L (Socket) | Front left speaker  |
| 4 REAR LINE OUT R (Socket)  | Rear right speaker  |
| 5 REAR LINE OUT L (Socket)  | Rear left speaker   |
| 6 SUBWOOFER                 | Subwoofer           |

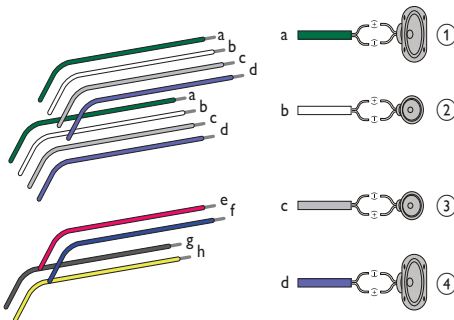

- 2 Cut off the bigger end of the supplied standard connector.
- 3 Check the car's wiring carefully and connect them to the supplied standard connector.

|   |                    |  |
|---|--------------------|--|
| 1 | Green/black strip  | Left speaker (Rear)  |
| 2 | White/black strip  | Left speaker (Front)   |
| 3 | Gray/black strip   | Right speaker (Front)  |
| 4 | Purple/black strip | Right speaker (Rear)   |
| e | RED                | Ignition key +12V DC when ON/ACC                                       |
| f | BLUE               | Motor/electric antenna relay control lead/Amplifier relay control lead |
| g | BLACK              | Ground   |
| h | YELLOW             | To the +12V car battery which is energized at all times                |

- 4 Connect the supplied standard connector to the unit.

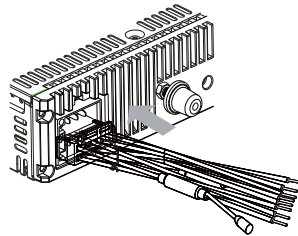


#### Tip


- The pin arrangement for the ISO connectors depends on the type of vehicle you drive. Be sure to make proper connections to prevent damage to the unit.

## Mount into the dashboard


- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
  - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
  - If the car battery is not disconnected, to avoid short-circuit, ensure that the bare wires do not touch each other.
- 2 Ensure that car dashboard opening is within these measurements:

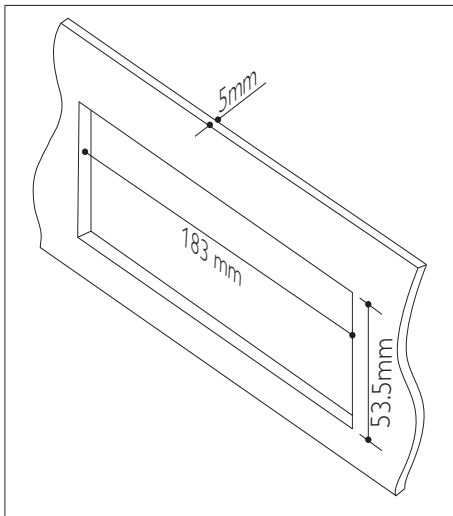

- 3 Remove the two screws on the top of the unit.

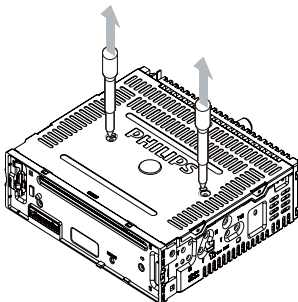


- 4 Remove the mounting sleeve with the supplied disassembly tools.

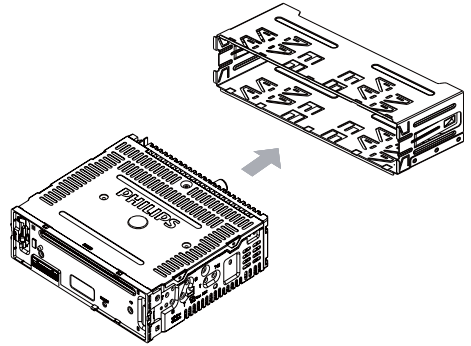


- 5 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

### Note


- If the unit is not fixed by sleeve but by the supplied screws, skip this step.

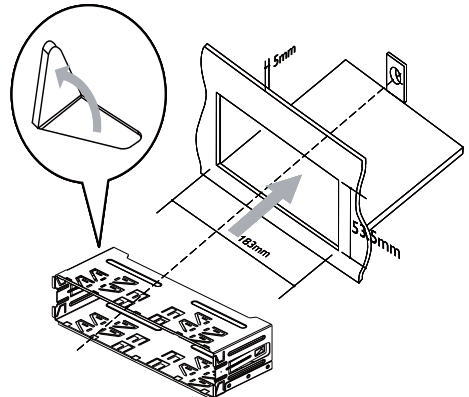

- 6 Place the supplied rubber cushion over the end of the mounting bolt.

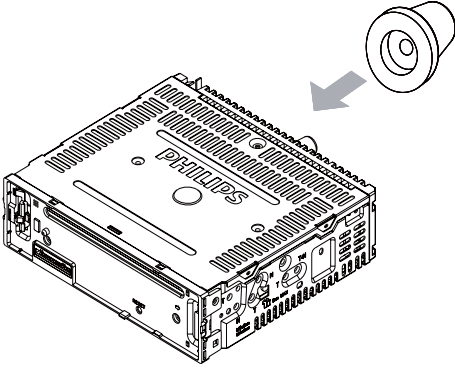


- 7 Slide the unit into the dashboard until you hear a click sound.

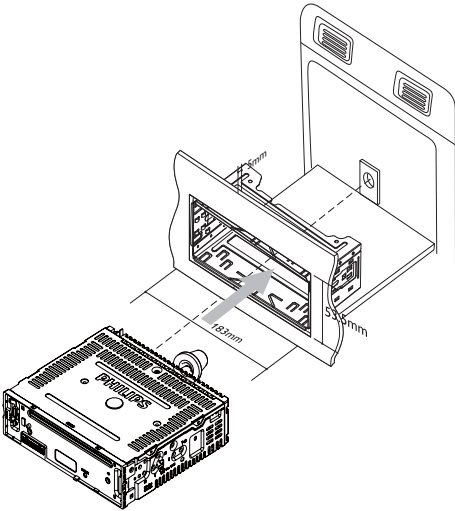


- 8 Reconnect the negative terminal of the car battery.

## Attach the front panel

- 1 Attach the trim plate.

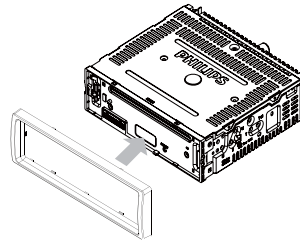

- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- 3 Press the left side of the panel until the mechanism locks it into place.

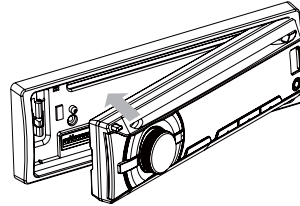

## Install remote control battery



### Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

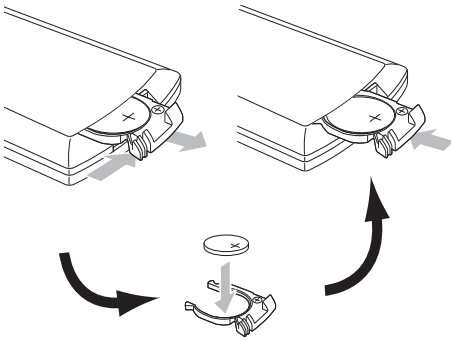

- 3 Press **⊕** to confirm.

---

## Set clock

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until currently time is displayed.
- 3 Turn **⊕** clockwise to set hour.
- 4 Press **⊕** to confirm.
- 5 Turn **⊕** anti-clockwise to set minute.
- 6 Press **⊕** to confirm.

---

## View clock

- 1 Press and hold **OPTIONS** repeatedly until the clock is displayed.

---

## Turn on

- 1 Press **⊕** to turn on the unit.
  - To turn off the unit, press **⊕** for over 3 seconds.

---

## Select country/region



### Note

- Select correct country/region for this unit, otherwise the unit can not work properly.

- 1 Press **⊕** to turn on the unit.
  - ↳ **[SELECT OPERATING REGION]** is displayed.
- 2 Rotate **⊕** to select an option:
  - [USA] (United States)
  - [Latin] (Latin America)
  - [Europe] (Western Europe)
  - [ASIA] (Asia Pacific)
  - [Mid-East ] (Middle East)
  - [Russia] (Russia)

## 4 Listen to radio

### Tune to a radio station

- 1 Press **SOURCE** repeatedly to select Tuner.
- 2 Press **▲** or **▼** to select band: [FM1], [FM2], [FM3], [AM1], or [AM2].
- 3 Press **◀◀** or **▶▶** to tune to a radio station manually.
  - ↳ The radio station is broadcast.
  - ↳ To search for a radio station automatically, press **◀◀** or **▶▶** for over 3 seconds.

### Select tuner region

You can select suitable country/region of the radio.

- 1 Press **SOURCE** to select Radio mode.
- 2 Press **MENU** repeatedly to select region.
- 3 Rotate **⊙** to select:
  - [Europe] (Western Europe)
  - [USA] (United States)
  - [LATIN] (Latin America)
  - [OIRT] (Russia)

### Select tuner sensitivity

To receive more radio stations or only stations with strong signal, you can adjust the tuner sensitivity.

- 1 Press **OPTIONS** repeatedly until [LOCAL] or [DX] is displayed.
- 2 Rotate **⊙** to select a setting:
  - [LOCAL SEEK ON] (local seek on): Only stations with strong signal can be broadcast.
  - [LOCAL SEEK OFF] (local seek off): Stations with strong and weak signals can be broadcast.

### Store radio stations in memory

You can store up to 6 stations in each band.

### Store stations automatically

- 1 Press **OPTIONS** repeatedly until **AUTO-SCAN** is displayed, then press **⊙** to confirm.
  - ↳ The six strongest stations of the selected band are saved in preset channel automatically: FM1,FM2,FM3 1-6,AM1,AM2.

### Store stations manually

- 1 Tune to a station that you want to store. (see 'Tune to a radio station' on page 17)
- 2 Press and hold **+ /PRESET** or **- /RRESET** to enter storing mode.
  - ↳ The preset number on LCD screen blinks..
- 3 Press **+ /PRESET** or **- /RRESET** to select storing location.
- 4 Press **⊙** to confirm.
  - ↳ The station is saved in the selected channel.
  - ↳ The preset number on LCD screen lights up and remains on.

### Tune to a preset station

- 1 Press **▲** or **▼** to select band.
- 2 Press **+ /PRESET** or **- /RRESET** to select the preset station.

# 5 Play with RDS

The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. If you tune to an RDS station, an RDS icon and information about the presenter, station or program is displayed.

---

## Turn on RDS



Note

- The default setting for RDS is off.

- 1 Press **MENU** for over 3 seconds.
- 2 Rotate  $\odot$  to select **RDS ON**:  
↳ The RDS function is turned on.

---

## Select program type

Before tuning to RDS stations, you can select program type and let the unit search only for programs of the selected category.

- 1 Press **OPTIONS** until [PTY SCH] is displayed.
- 2 Turn  $\odot$  to select a type, then press  $\odot$  to confirm.

| Item | Program type    | Description                     |
|------|-----------------|---------------------------------|
| 1    | <b>NEWS</b>     | News services                   |
| 2    | <b>AFFAIRS</b>  | Politics and current affairs    |
| 3    | <b>INFO</b>     | Special information programs    |
| 4    | <b>SPORT</b>    | Sports                          |
| 5    | <b>EDUCATE</b>  | Education and advanced training |
| 6    | <b>DRAMA</b>    | Radio plays and literature      |
| 7    | <b>CULTURE</b>  | Culture, religion and society   |
| 8    | <b>SCIENCE</b>  | Science                         |
| 9    | <b>VARIED</b>   | Entertainment programs          |
| 10   | <b>POP M</b>    | Pop music                       |
| 11   | <b>ROCK M</b>   | Rock music                      |
| 12   | <b>EASY M</b>   | Light music                     |
| 13   | <b>LIGHT M</b>  | Light classical music           |
| 14   | <b>CLASSICS</b> | Classical music                 |
| 15   | <b>OTHER M</b>  | Special music programs          |
| 16   | <b>WEATHER</b>  | Weather                         |
| 17   | <b>FINANCE</b>  | Finance                         |
| 18   | <b>CHILDREN</b> | Children's programs             |
| 19   | <b>SOCIAL</b>   | Social Affairs                  |
| 20   | <b>RELIGION</b> | Religion                        |
| 21   | <b>PHONE IN</b> | Phone In                        |
| 22   | <b>TRAVEL</b>   | Travel                          |
| 23   | <b>LEISURE</b>  | Leisure                         |
| 24   | <b>JAZZ</b>     | Jazz Music                      |
| 25   | <b>COUNTRY</b>  | Country Music                   |
| 26   | <b>NATION M</b> | National Music                  |
| 27   | <b>OLDIES</b>   | Oldies Music                    |
| 28   | <b>FOLK M</b>   | Folk Music                      |
| 29   | <b>DOCUMENT</b> | Documentary                     |
| 30   | <b>TEST</b>     | Alarm Test                      |
| 31   | <b>ALARM</b>    | Alarm                           |

## Select alternate frequencies

If the radio signal is poor, turn on AF (Alternate Frequency) to search for another station with stronger signal.

- 1 Press **MENU** or **OPTIONS**.
- 2 Press **▲** or **▼** repeatedly until **[AF]** is displayed.
- 3 Rotate **⊙** to select a setting:
  - **[AF ON]**: Turn on the AF mode.
  - **[AF OFF]**: Turn off the AF mode.

## Set region for AF tuning

You can define AF tuning region:

- |                  |  |
|------------------|--|
| <b>[REG ON]</b>  | Only stations in current region can be tuned to automatically. |
| <b>[REG OFF]</b> | All stations can be tuned to automatically.                    |

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[REG]** (Regional Radio) is displayed.
- 3 Rotate **⊙** to select a setting.

## Receive traffic announcement

If you do not want to miss traffic announcement when enjoying music, turn on the TA (Traffic Announcement) function.

- 1 Press **MENU** or **OPTIONS**.
- 2 Press **▲** or **▼** repeatedly until **[TA]** is displayed.
- 3 Rotate **⊙** to select a setting:
  - **[TA ON]**: When there is traffic announcement, the unit switches to the tuner mode (regardless of the current mode) and begins to broadcast the traffic conditions. When the traffic announcement is over, it returns to the previous mode.

- **[TA OFF]**: Traffic announcement does not cut in.

## Set RDS clock

You can use time signal that is broadcast together with the RDS signal to set the clock of the unit automatically.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[CT]** is displayed.
- 3 Rotate **⊙** to select a setting:
  - **[CT ON]**: Turn on the RDS clock. Time shown on the unit synchronizes with that on the RDS station.
  - **[CT OFF]**: Turn off the RDS clock.



### Tip

- The accuracy of the transmitted time depends on the RDS station that transmits the time signal.



# 6 Play audio files

## Note

- Ensure that the disc or device contains playable files.

## Play a disc

## Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs and these discs:

- CD-Recordables (CD-R)
- CD-Re-writables (CD-RW)
- MP3 CDs
- WMA CDs

## Note

- Ensure that the disc contains playable content.

- 1 Insert a CD with the printed side facing up.
  - ↳ Play starts automatically.
- To pause CD play, press  $\odot$ .
- To resume CD play, press  $\odot$  again.
- To skip to the previous/next track, press  $\lll$  or  $\ggg$ .
- To search backward/forward rapidly within the current track, press  $\lll$  or  $\ggg$  for 3 seconds.

## Remove the CD

To take out the CD, press  $\blacktriangle$  on the front panel.

## Tip

- If the disc is blocked in the disc compartment, press and hold  $\blacktriangle$  until the disc comes out.


## Play from USB

## Note

- Ensure that the USB device contains playable music.

## Insert the USB device

- 1 Slide the USB socket cover marked  $\leftarrow$  to the left.
- 2 Insert the USB device into the USB socket.
  - ↳ The unit starts playing from the USB device automatically.

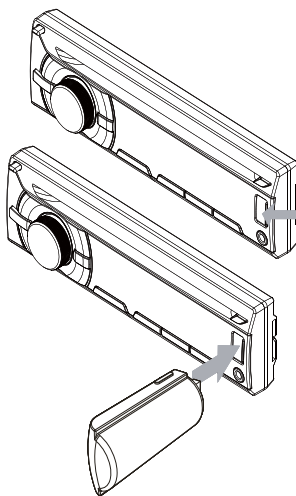

## Remove the USB device

- 1 Press  $\odot$  to turn off the unit.
- 2 Remove the USB device.

---

## Search for an MP3/WMA track

### Search within the current folder

- 1 Press **+SONG**.
  - ↳ The name of the current track is displayed.
- 2 Turn  $\odot$  to select another track in current folder
- 3 Press  $\odot$  to confirm.

### Search in other folder

- 1 Press **FOLDER -**.
  - ↳ The name of the current folder is displayed.
- 2 Rotate  $\odot$  to navigate through all folders.
- 3 Press  $\odot$  to access the selected folder.
- 4 Rotate  $\odot$  to select a track in the folder.
- 5 Press  $\odot$  to start play.



#### Tip

- To go back to upper level of a folder, press **↶**.

---

## View play information

- 1 During playing, press **DISP** repeatedly to view:
  - Track number and elapsed play time
  - Artist
  - Album
  - Title
  - Folder
  - File

---

## Repeat play

- 1 During play, press **OPTIONS** repeatedly until **[REP]** is displayed.

- 2 Rotate  $\odot$  to select a setting.
  - **[RPT TRK]** (repeat one track): play current track repeatedly.
  - **[RPT DIR]** (repeat a folder): play all tracks in the current folder repeatedly.
  - **[RPT ALL]** (repeat all tracks): play all tracks repeatedly.

---

## Shuffle play

You can play the tracks in random order:

- 1 During play, press **OPTIONS** repeatedly until **[SHUF]** is displayed.
- 2 Rotate  $\odot$  to select a setting:
  - **[SHUF ON]**: start shuffle play for all tracks.
  - **[SHUF OFF]**: cancel shuffle play.

---

## Intro play

You can play the first 10 seconds of each track.

- 1 During play, press **OPTIONS** repeatedly until **[INT]** is displayed:
- 2 Rotate  $\odot$  to select a setting:
  - **[INT ON]**: After the first 10 seconds of each track have been played, play stops.
  - **[INT OFF]**: Cancel intro play and start normal play.

---

## Connect external sound source

- 1 Connect the external sound source to **MP3 LINK** socket with a 3.5 mm cable.
- 2 Press **SOURCE** repeatedly until **[MP3 LINK]** is displayed.
- 3 Operate the external component (refer to the instructions supplied with the external component).

# 7 Adjust sound

---

## Adjust volume

- 1 Turn  $\odot$  clockwise/anticlockwise to increase/decrease volume.

---

## Mute

You can turn off the sound of your audio.

- 1 During play, press  $\odot$ .
  - To resume sound, press  $\odot$  again.

---

## Turn DBB and subwoofer on/off

- 1 Press **DBB**, then the current setting is displayed:
  - ↳ **[DBB ON]**: The Dynamic Bass Boost (DBB) function is on.
  - ↳ **[DBB OFF]**: The DBB function is off.
- 2 Press **DBB** again to change the DBB setting.
- 3 Press and hold **DBB** to access subwoofer settings:
  - ↳ **[SUBWOOFER ON]**: The subwoofer function is on.
  - ↳ **[SUBWOOFER OFF]**: The subwoofer function is off.

---

## Select preset equalizer

- 1 Press **EQ/Audio**.
  - ↳ Current Equalizer setting is displayed.
- 2 Press **EQ/Audio** again to select a preset EQ setting:
  - **[OPTIMAL]** (optimal)
  - **[FLAT]** (flat)
  - **[POP]** (pop)
  - **[USER]** (user)
  - **[TECHNO]** (techno)
  - **[ROCK]** (rock)
  - **[CLASSIC]** (classic)
  - **[JAZZ]** (jazz)

---

## Other sound settings

You can also adjust the preset **EQ/Audio** settings.

- 1 Press **EQ/Audio** for 3 seconds.
- 2 Press  $\blacktriangle$  or  $\blacktriangledown$  repeatedly to select the item to be adjusted:
  - **[BAS]** (bass) range: -7 to +7.
  - **[TRE]** (treble) range: -7 to +7.
  - **[BAL]** (balance) range: 12L to 12R. (L = left speaker, R = right speaker)
  - **[FAD]** (fader) range: 12R to 12F. (R = rear speaker, F = front speaker)
- 3 Rotate  $\odot$  to select a value.

## 8 Adjust system settings

### Select anti-shock setting

You can select anti-shock setting according to the stability of your car and the condition of the road.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[ESP]** is displayed.
- 3 Turn **⊖** to select a setting:
  - **[ESP 10S]**: when the road is smooth and there are few bumps.
  - **[ESP 40S]**: when the road is bumpy and unstable.
- 4 Press **⊖** to confirm.

### Turn beep sound on/off

Each time you press a button, the unit beeps. You can turn on or off this beep sound.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly to until **[BEEP]** is displayed.
- 3 Rotate **⊖** to select a setting:
  - **[BEEP ON]**: Turn on the beep sound.
  - **[BEEP OFF]**: Turn off the beep sound.

### Select blackout setting

You can set the screen to turn off automatically after the unit is idle for 10 or 20 seconds.

- 1 Press **MENU**.
- 2 Rotate **⊖** to select a setting:
  - **[BKO 10 S]**: Turn off the screen automatically 10 seconds after last operation.
  - **[BKO 20 S]**: Turn off the screen automatically 20 seconds after last operation.
  - **[BKO OFF]**: Never turn off the screen.
- 3 Press **⊖** to confirm.

### Turn demo mode on/off


- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[DEMO]** is displayed.
  - ↳ The screen shows current Demo mode setting.
- 3 Rotate **⊖** to select a setting:
  - **[DEMO ON]**: Turn on the demo mode. When the unit is idle for more than 10 seconds, all functions are displayed.
  - **[DEMO OFF]**: Turn off the demo mode.

---

## Reset

You can reset the unit to its default setting.

- 1 Detach the front panel.
- 2 Press the reset button by using a ball-point pen or a similar tool.
  - ↳ Preset adjustments such as preset channels and sound adjustments are erased.

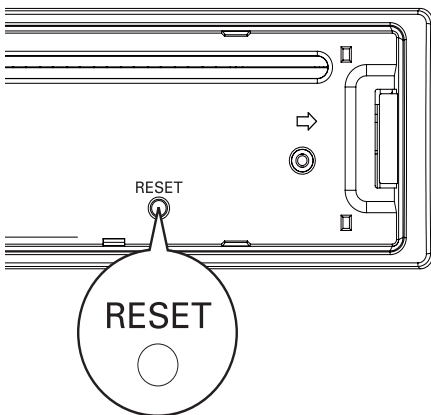


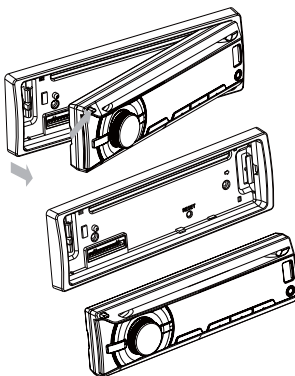
## 9 Additional information

---

### Detach the front panel

You can detach the front panel to deter theft.

- 1 Press  to release the panel.
- 2 Push the left side of the panel rightward.




- 3 Pull the panel towards you to disengage it from the chassis.
- 4 Store the panel in the supplied carry case to protect it from dirt or damage.

---

### Replace fuse

If the fuse is damaged,

- 1 Check the electric connection.
- 2 Buy a fuse that matches the voltage of the damaged fuse.
- 3 Replace the fuse.

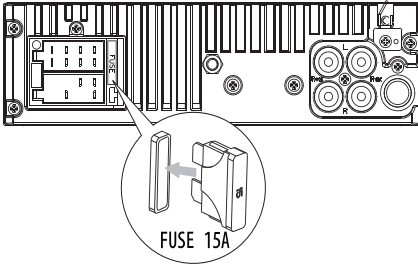


### Note

- If the new fuse gets damaged again, there may be an internal malfunction. Consult your Philips dealer.

## Remove the unit

You can remove the unit from the dashboard.

- 1 Detach the front panel.
- 2 Pull out the unit by using the disassembly tools.

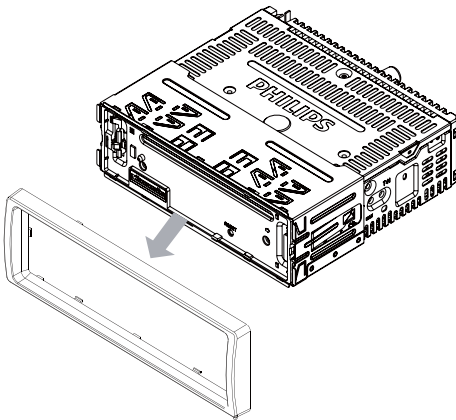

# 10 Product information

### Note

- Product information is subject to change without prior notice.

|                            |  |
|----------------------------|--|
| Power supply               | 12 V DC (11 V - 16 V), negative ground |
| Fuse                       | 15 A                                   |
| Suitable speaker impedance | 4 - 8 $\Omega$                         |
| Maximum power output       | 45 W x 4 channels                      |
| Continuous power output    | 22 W x 4 RMS (4 $\Omega$ 10% T.H.D.)   |
| Pre-Amp output voltage     | 2.5 V                                  |
| Aux-in level               | $\geq$ 500 mV                          |
| Dimensions (W x H x D)     | 188 x 58 x 201 mm                      |
| Weight                     | 1.47 kg                                |

### Radio

|  |  |
|--|--|
| Frequency range - FM                       | 65.0 - 74.0 MHz<br>87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search) |
| Frequency range - AM (MW)                  | 522 - 1620 KHz (9 kHz)<br>530 - 1710 kHz (10 kHz)  |
| Usable sensitivity - FM                    | 8 $\mu$ V  |
| Usable sensitivity - AM (MW) (S/N = 20 dB) | 30 $\mu$ V   |

### Compatible USB devices:

- USB flash memory: USB 1.1 host with interface reading all speed support (1.1, 2.0)
- USB flash players: USB 1.1 host with interface reading all speed support (1.1, 2.0)

### Supported formats:

- USB or memory file format: FAT16, FAT32
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA V4, V7, V8, V9 (L1, L2)
- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 2 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 2~256 (kbps), variable bit rates
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: CD maximum 99, USB maximum 199
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length 64 bytes)

### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

# 11 Troubleshooting



### Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

### No power or no sound.

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is too low. Adjust volume.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

### Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from Stereo to mono.

### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/ CD-R/CD-RW.
- Ensure that the CD is not encoded with copyright protection technologies.

**The CD skips tracks**

- Ensure that the CD is not damaged or dirty.
- Ensure that random mode is deactivated.

**Disc cannot be ejected**

- Press and hold ▲

**Preset stations lost.**

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

**Display show ERR-12**

- USB data error. Check the USB device.

# 12 Glossary

---

## M

**MP3**

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

---

## W

**WMA (Windows Media Audio)**

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.



