Register your product and get support at www.philips.com/welcome



Quick start guide



Connect



3

Get started

Enjoy



What is in the box



User manual, quick start guide, guarantee

Note

- * In multi-handset packs, there are additional handsets, chargers and power adapters.
- **In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Caution

• Use only the supplied batteries and power adapter.

1 Connect

Connect the base station



- 1 Connect each end of the power adapter to:
 - the DC input jack at the back of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the back of the base station;
 - the telephone socket on the wall.

For multi-handset version only:

- 3 Connect each end of the power adapter to:
 - the DC input jack at the back of the base station;
 - the power socket on the wall.




2 Get started

Configure your phone



- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
- 3 Set the country and language if prompted.
- 4 Set the date and time.
 - If the time is in 12-hour format, press key to select
 [am] or [pm].

Charge your phone

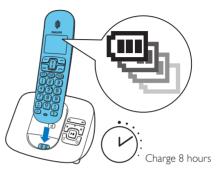

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

→ The handset starts charging.

- Note

• Charge the batteries for 8 hours before first use.

Check the battery level

Icon Status



When the handset is off the base station/charger, the bars indicate the battery level (full to low). When the handset is on the base station/charger, the bars flash until charging is complete.

The empty battery icon flashes and you hear an alert tone.

The battery is low and needs recharging.

3 Enjoy

Call

- To make a call, press \clubsuit and dial the phone number:
- To answer a call, press $\stackrel{\bullet}{\smile}$ when the phone rings.
- To end a call, press 🦰

Adjust the earpiece volume

Press 🕫 or 퉣 to adjust the volume during a call.

Set the direct keys

- 1 Enter the number, then press and hold M1, M2 or M3.
- 2 Enter the name then press [OK] to confirm.
- 3 Enter the number, then press [Save] to confirm.
- 4 To make a quick call from the record pre-saved in the direct key, press [®] or ⊲), then press M1, M2 or M3.

Add a contact in the phonebook

- 1 Select [Menu] > [Phonebook] > [Add new], then press [OK] to confirm.
- 2 Enter the name, then press [OK] to confirm.
- 3 Enter the number, then press [Save] to confirm.

Record an announcement (for XL395 only)

- 1 Select [Menu] > [Answ. Machine] > [Announcement], then press [OK] to confirm.
- 2 Select [Record also] or [Answer only], then press [OK] to confirm.
- 3 Select [Record], then press [OK] to confirm.
- 4 Recording starts after the beep.
- **5** Press **[OK]** to stop recording or the recording stops after 3 minutes.
 - \rightarrowtail You can listen to the newly recorded announcement on the handset.

Listen to messages recorded on the answering machine (for XL395 only)



- ⑦To turn the answering machine on or off in standby mode, press Ů.
- ②To start/stop listening, press ▶■.
- ③To adjust the volume, press ◄) / ◄.
- ④ To play the previous message/replay the current message, press
- ⑤ To play the next message, press ▶
- ⑥To delete the current message, press [¬]/_□.

- Note

• For more information, see the Telephone answering machine section in the user manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User manual

Refer to the user manual that came with your new phone.

Online help

www.philips.com/support

C€0168



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. All rights reserved. 2012 Koninklijke Philips Electronics N.V.



QSG_XL390-395 05_EN_V1.0 WK11463