



# PHILIPS


## AZ1022

### 1 Choosing Power Supply

- a Connect the AC power cord to the **AC MAINS** inlet and the wall socket.

-OR-

- b Open the **battery door** and insert 6 x C batteries (not included).

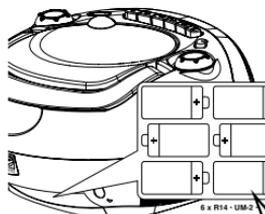

1a

R-14, UM-2 or C-cells  
(not included)


1b

### 2 Listening to the Radio

- a Push the **source selector** to **TUNER**.
- b Adjust **BAND** to **MW** or **FM**.
- c Turn **TUNING** to tune to a station.

2a

3a  
4a

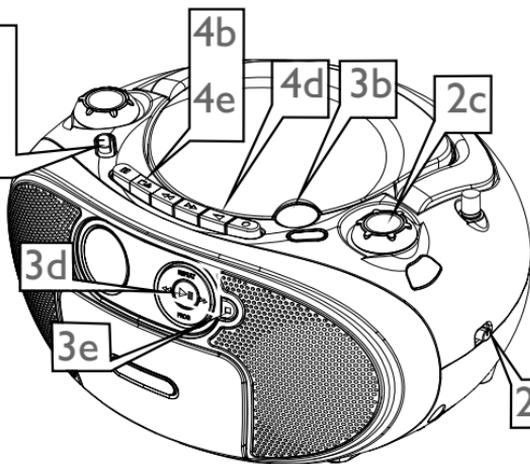

### 3 Playing a disc

This CD player Audio Discs including CD-Recordables and CD-Rewritables. Do not try to play a MP3, CD-ROM, CD-1, CDV, VCD, DVD or computer CD.

- a Adjust the **source selector** to **CD**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶ II** to start playback.
- e To stop disc playback, press **■**.

### 4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **STOP•OPEN ■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **PLAY ◀** to start playback.
- e To stop the tape, press **STOP•OPEN ■▲**.



## VOLUME

Turn to adjust volume level.

## Source selector

Slide to select function: CD, radio or tape.

## CASSETTE RECORDER keys

Press to operate a tape.

## Display

Shows disc functions



Press to start or pause disc playback..



Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.

## PROG

Use to program disc tracks and review a disc program.

## LIFT TO OPEN

Lift to open the disc door.

## Telescopic antenna

Improves FM reception.

## TUNING

Turn to tune to a station.

## BAND

Slide to select waveband

## SHUFFLE

Press to select SHUFFLE mode

## REPEAT

Press to select REPEAT mode

Press to stop disc playback or erase a disc program.

## DBB

Press to turn the bass enhancement on/off.

## Battery door

## AC MAINS

inlet for the AC power cord.

