

Quick Start Guide



Step A **Connect**

Step B **Setup**



 
Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.



Pull out the plastic protective sheet before use.

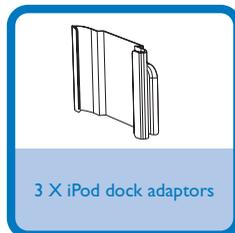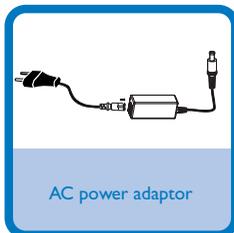


PHILIPS

Step A *Connect*

- 1 Connect the AC power adaptor of the system.

Tip


- See the User Manual on how to connect other equipment to this system.
- Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!

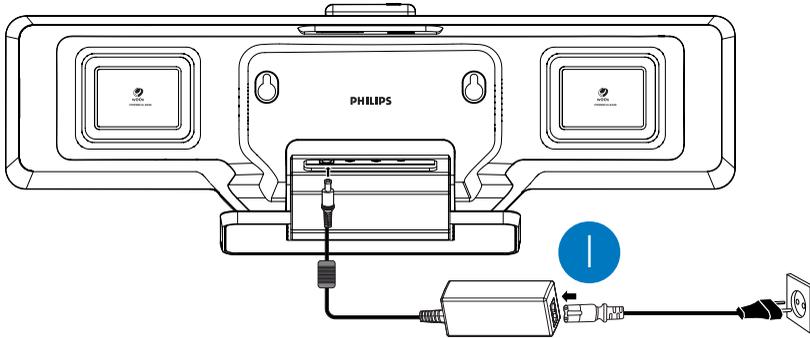

Step B *Setup*

Setting the clock

- 1 In standby mode, press and hold **PROG/SET TIME** on the remote control.
- 2 Press **VOLUME +/-** (or **VOL +/-** on the remote control) to switch between 12 hour and 24 hour display.
- 3 Press **PROG/SET TIME** on the remote control again to confirm.
→ The clock digits flash on the display panel.
- 4 Press **VOLUME +/-** (or **VOL +/-** on the remote control) to set the hours.
- 5 Press **PROG/SET TIME** on the remote control again.
→ The clock digits for the minutes flash.
- 6 Press **VOLUME +/-** (or **VOL +/-** on the remote control) to set the minutes.
- 7 Press **PROG/SET TIME** on the remote control to confirm the time.

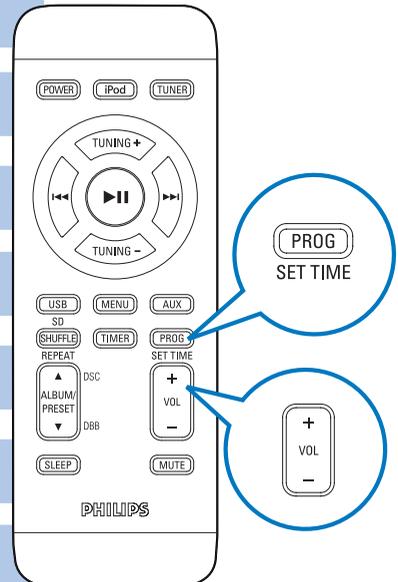

Programming and tuning to radio stations

1


Press **SOURCE** repeatedly (or **TUNER** on the remote control) to select the tuner source (FM).

2

Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.

3

Press **PRESET +/-** (or **ALBUM/PRESET ▲ / ▼** on the remote control) until the desired preset station is displayed.

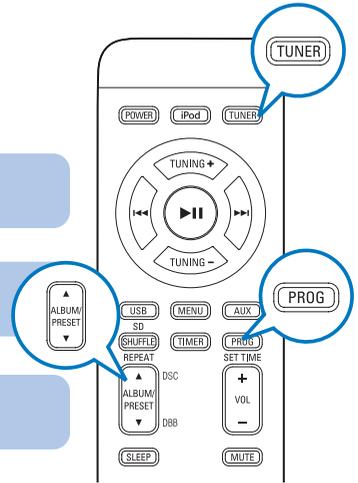

Playing a USB mass storage device/SD/ MMC card

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1) and memory cards

1

Insert the USB device's USB plug into the socket  or fully insert the SD/MMC card into the SD/MMC slot on the top of the system.

2

Press **SOURCE** once or more (or **USB/CARD** on the remote control) to select **USB/CARD**.

3

Play the available audio files using playback buttons on the set or remote control (such as    ).

Playing Apple iPod using DC910

1

Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.

2

Correctly place the compatible iPod player into the dock.

3


Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.

4

Power on your iPod player.

5

Select and play your favourite songs stored in the iPod player.

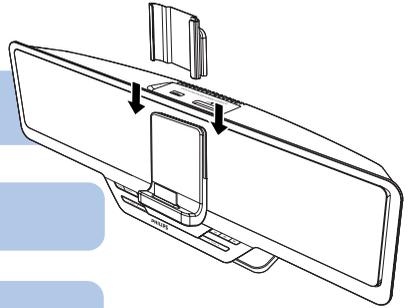

Tip

3 iPod dock adaptors are included to fit in different iPod models. Check the iPod model names on the adaptors to select matchable adaptor with your iPod.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example iPod, TUNER).
- Then select the desired function (for example ► ||, ◀◀, ▶▶).

