

Micro Hi-Fi System


MCM285

Register your product and get support at
www.philips.com/welcome



User manual



 PHILIPS

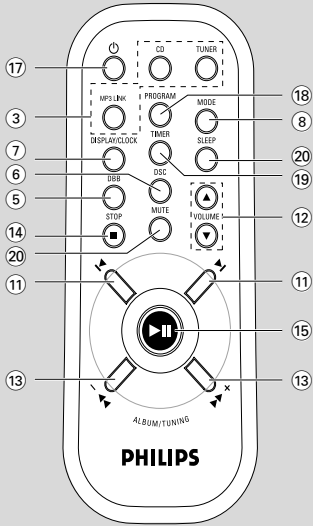

Top view

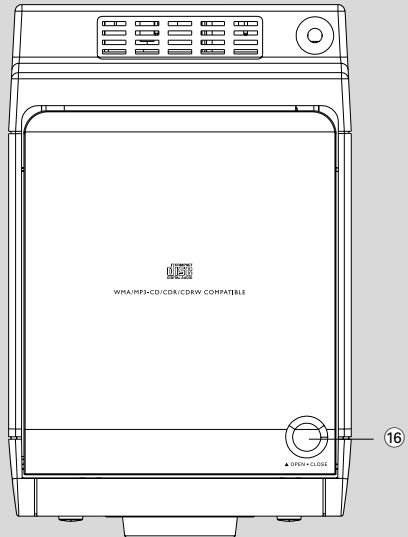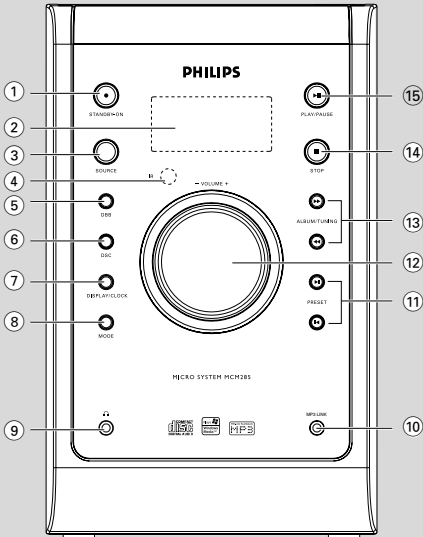  

General Information

Supplied accessories	6
Environmental information	6
Safety information	6

Preparation

Rear connections	7
Optional connection	8
Inserting batteries into the remote control... ..	8

Controls

Controls on the system and remote control	9
---	---

Basic Functions

Switching the system on	10
Power-saving automatic standby	10
Adjusting volume and sound	10

CD/MP3/WMA Operation

Playing a disc	11
Selecting a different track	11
Finding a passage within a track	11
Playing an MP3/WMA disc	11
Discs for playback	12
Different play modes: Shuffle and Repeat	12
Programming track numbers	12
Erasing the programme	12

Radio Reception

Tuning to radio stations	13
Programming radio stations	13
Automatic programming	
Manual programming	
Tuning to preset radio stations	13

External Sources

Connecting external equipment	14
-------------------------------------	----

Clock/Timer

Setting the clock	14
Setting the sleep timer	14-15
Setting the timer	15

Specifications

Maintenance

Troubleshooting

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

General Information

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Supplied accessories

- 2 speaker boxes
- remote control
- MP3 Link cable

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

 
The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Safety information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The apparatus shall not be exposed to dripping or splashing.
- Install this unit near the AC outlet and where the AC power plug can be reached easily.
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the disc unit inside the system. Should this occur, the CD player would not operate normally. Leave the power on for about one hour with no disc in the system until normal playback is possible.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**



**Be responsible
Respect copyrights**

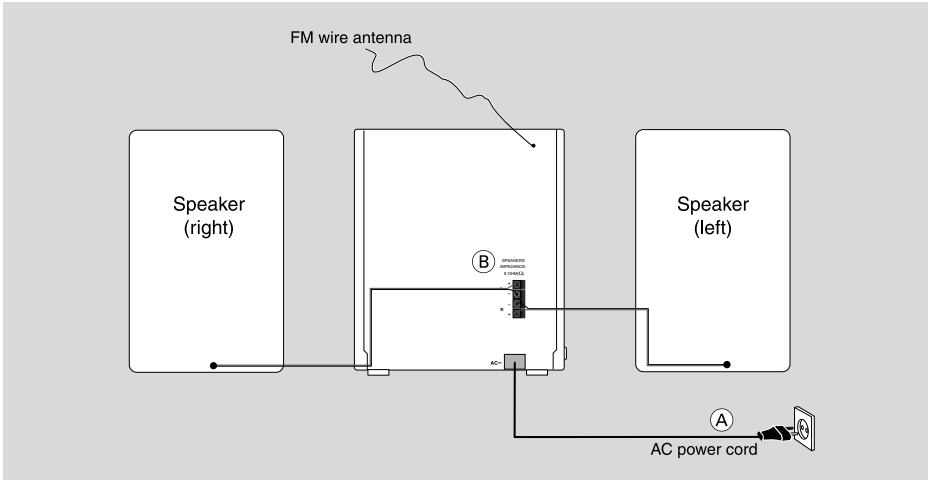

Rear connections

The type plate is located at the rear of the system.

(A) Power

- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.

WARNING!

 
- For optimal performance, use only the original power cable.
- Never make or change any connections with the power switched on.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

(B) Speakers Connection

Front Speakers

Connect the speaker wires to the SPEAKERS terminals, right speaker to "R" and left speaker to "L", red wires to "+" and black wires to "-".

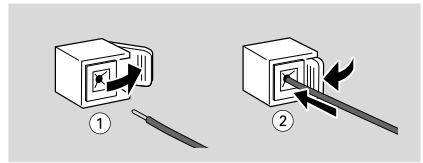

- Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/– speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Preparations

Optional connection

 
The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.

Connecting a non-USB device

Use a cinch cable to connect **MP3 LINK** to the audio out terminals of an external equipment (TV,VCR, Laser Disc player, DVD player or CD Recorder).

Inserting batteries into the remote control

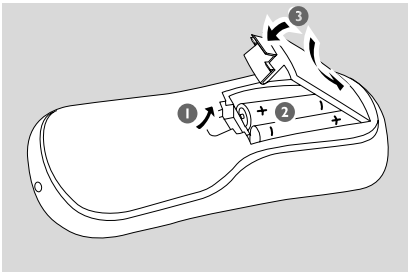

Insert two batteries type AAA into the remote control with the correct polarity as indicated by the "+" and "-" symbols inside the battery compartment.




CAUTION!

- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Controls on the system and remote control

- ① **STANDBY ON**
 - switches the system on or to standby mode.
- ② **LCD Display**
 - shows the status of the system.
- ③ **Source (CD/TUNER/MP3 LINK)**
 - selects the respective sound source for CD/TUNER/MP3 LINK.
- ④ **iR SENSOR**
 - infrared sensor for remote control.
- ⑤ **DBB (Dynamic Bass Boost)**
 - enhances the bass.
- ⑥ **DSC (Digital Sound Control)**
 - selects sound characteristics: CLASSIC, JAZZ, POP or ROCK.
- ⑦ **DISPLAY/CLOCK**
 - to set or view the clock.
- ⑧ **MODE**
 - selects different play modes: e.g. REPEAT or SHUFFLE (random order)
- ⑨ 
 - Plugs in a headphone.
- ⑩ **MP3 LINK**
 - 3.5mm audio input jack.
- ⑪ **PRESET +/- ◀/▶**
 - skips to the beginning of a current track/previous/next track.
 - sets the hours and minutes for the clock and timer.
 - selects a preset radio station.
- ⑫ **VOLUME +/-**
 - adjusts the volume level.
- ⑬ **ALBUM/TUNING ◀◀ / ▶▶**
 - selects an album.
 - tunes to a radio station.
 - (press and hold) fast searches back and forward within a track/disc.
- ⑭ **STOP ■**
 - stops CD playback or erases a CD program.
- ⑮ **▶||**
 - starts or pauses CD playback.
- ⑯ **OPEN/CLOSE**
 - open/close the CD door.
- ⑰ 
 - switches the system to standby mode.
- ⑱ **PROGRAM**
 - (for CD) programs CD tracks and reviews the program.
 - (for TUNER) programs preset radio stations.
- ⑲ **TIMER**
 - activates/deactivates the timer.
- ⑳ **SLEEP**
 - activates/deactivates or selects the sleep time.
 - views the remaining sleep time.
- ㉑ **MUTE**
 - switches playback sound off and on.

 Basic Functions

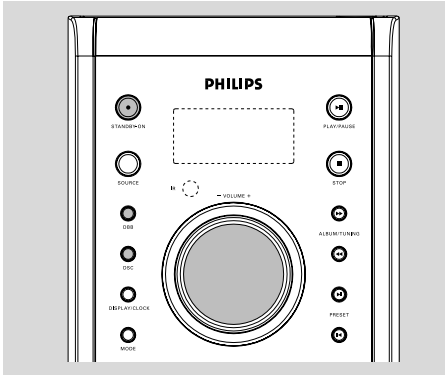

IMPORTANT:

Before you operate the system, complete the preparation procedures.

Switching the system on

- Press **STANDBY-ON** on the main set.
→ The system will switch to the last selected source.
- Press **CD**, **TUNER**, or **MP3 LINK** on the remote control.
→ The system will switch to the selected source.

To switch the system to standby mode

 
- Press **STANDBY-ON** (⏻) on the remote control).
→ The volume level (up to a maximum volume level of 15), interactive sound settings, last selected source and tuner presets will be retained in the player's memory.

Power-saving automatic standby


The power-saving feature automatically switches to standby 30 minutes after CD playback has ended and no control is operated.

Adjusting volume and sound


- 1 Adjust the **VOLUME** control knob or press **VOLUME** ▲/▼ on the remote control to increase or decrease volume.
→ Display shows the volume level *100* and a number from 0-40.
 - 2 Press **DBB** to switch bass enhancement on or off.
→ Display shows: **DBB** if the DBB is activated.
 - 3 Press **DSC** on the remote control repeatedly to select the desired sound effect: **CLASSIC**, **JAZZ**, **POP**, or **ROCK**.
→ The selected DSC is shown.
 - 4 Press **MUTE** on the remote control to stop sound playback instantly.
→ Playback will continue without sound and the display shows **MUTE**.
- To start sound playback you can:
 - press **MUTE** again;
 - adjust the volume controls.

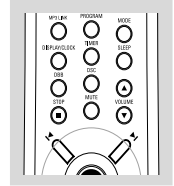

CD/MP3/WMA Operation

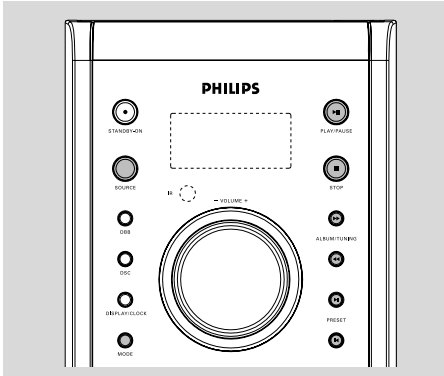 

 IMPORTANT:
The lens of the CD player should never be touched.

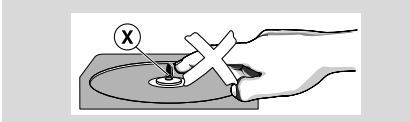

Playing a disc

This CD player plays Audio Discs including CD-Recordables, CD-Rewritables and MP3 CD.

- CD-ROM, CD-I, CDV, VCD, DVD or computer CDs, however, are not possible.
- 1 Press **SOURCE** once or more or **CD** on the remote control to select **CD**.
 - 2 Press **OPEN/CLOSE** on the system to open the CD compartment.
→ **OPEN** is displayed when you open the CD compartment.
 - 3 Insert a disc with the printed side facing up and press **OPEN/CLOSE** to close the CD door.
→ **READ** is displayed as the CD player scans the contents of a disc, and then the total number of tracks and playing time (or the total number of albums and tracks for MP3 disc) are shown.
 - 4 Press **▶▶** to start playback.
→ The current track number and elapsed playing time of the track are displayed during disc playback.

- 5 To pause playback press **▶▶**. Press **▶▶** again to resume play.
→ The display freezes and the elapsed playing time flashes when playback is interrupted.

- 6 To stop disc playback, press **STOP**.

Note: CD playback will also stop when;
– the CD door is opened.
– the disc has reached the end.
– you select another source: **TUNER** or **MP3 LINK**.
– you select standby.

Selecting a different track

- Press **PRESET +/-** **◀/▶** (**◀/▶** on the remote) once or repeatedly until the desired track number appears in the display.
- Press **▶▶** to start playback.

Finding a passage within a track

- 1 Press and hold down **ALBUM/TUNING** **◀◀ / ▶▶** (**◀◀/▶▶** on the remote).
→ The disc is played at high speed and low volume.
- 2 When you find the passage you want, release **ALBUM/TUNING** **◀◀ / ▶▶** (**◀◀/▶▶** on the remote).
→ Normal playback continues.

Playing an MP3/WMA disc

- 1 Load an MP3/WMA disc.
→ The disc reading time may exceed 10 seconds due to the large number of songs compiled into one disc.
→ "XX XX" is displayed. XX is the current album number and XX is the current track number.
- 2 Press **ALBUM/TUNING** **◀◀ / ▶▶** to select a desired album.
- 3 Press **PRESET +/-** **◀/▶** (**◀/▶** on the remote) to select a desired track.
→ The album number will change accordingly as you reach the first track of an album by pressing **◀** (**◀** on the remote) or the last track of an album by pressing **▶** (**▶** on the remote).
- 4 Press **▶▶** to start playback.

CD/MP3/WMA Operation

Discs for playback

This system can playback all digital audio CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.

MP3-CDs (CD-ROMs with MP3 tracks)



Supported MP3 disc formats:

- ISO9660, Joliet, UDF 1.5
- Maximum title number: 511 (depending on filename length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bitrates

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback.

REPEAT plays the current track continuously

REPEAT ALL ... repeats the entire disc/programme

SHUF tracks of the entire disc are played in random order

SHUF REPEAT ALL

..... repeats the disc/program continuously in random order

- 1 To select your play mode, press **MODE** before or during playback until the display shows the desired function.
 - 2 Press **▶▶** to start playback if in the STOP position.
 - 3 To return to normal playback, press **MODE** until the various SHUFFLE/ REPEAT modes are no longer displayed.
- You can also press **STOP** ■ to cancel your play mode.

Programming track numbers

Programme in the STOP position to select and store your disc tracks in the desired sequence. If you like, store any track more than once. Up to 20 tracks can be stored in the memory.

- 1 In the STOP position, press **PROGRAM** on the remote control to enter the programming mode.
- 2 Use **PRESET +/-** (◀/▶) (◀/▶ on the remote) to select your desired track number:
 - For MP3/WMA disc, press **ALBUM/TUNING** (◀◀/▶▶) (◀◀/▶▶ on the remote) to select the desired album and title for programming.
→ The selected track number and **PROG** flash on the display panel.
- 3 Press **PROGRAM** on the remote control to confirm the track number to be stored.
- 4 Repeat steps **2-3** to select and store all desired tracks.
- 5 To start playback of your disc programme, press **▶▶**

 
Note:

- If you wish, you can add further tracks to your current programme. Make sure you are in the STOP position, and that you have not exceeded 20 tracks.

Erasing the programme

You can erase the programme by:

- pressing **STOP** ■ once in the STOP mode;
- pressing **STOP** ■ twice during playback;
- opening the CD compartment;
- selecting another sound source
→ **PROG** disappears from the display.

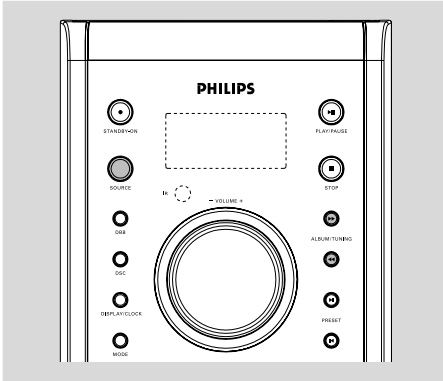

Tuning to radio stations

- 1 Press **SOURCE** or **TUNER** once or more to select the desired waveband : FM or MW.
 - 2 Press and hold **ALBUM/TUNING** ◀▶ until the frequency indication starts to change, then release.
 - The display will show "SEARCH" until a radio station with sufficient signal strength is found.
 - If the FM station is received in stereo, ∞ is shown..
 - 3 Repeat step 2 if necessary until you find the desired radio station.
- To tune to a weak station, press **ALBUM/TUNING** ◀▶ briefly and repeatedly until optimal reception found.

Note:

– The system is equipped with a fixed FM antenna and a built-in MW antenna. For optimal FM reception, fully extend and adjust the position of the FM antenna until the strongest signal is found.

Programming radio stations

You can store up to 40 radio stations (FM:20, MW:20) in the memory.

Automatic programming

- 1 Press **PRESET** +/- ◀▶ to select the desired preset number:
- 2 Press and hold **PROGRAM** until "AUTO" is displayed.
 - All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by MW band.

To stop automatic programming

- Press **STOP** ■.

Note:

– If no preset number is selected, automatic preset will begin from preset (1) and all your former presets will be overridden.

Manual programming

- 1 Tune to your desired radio station (refer to "Tuning to radio stations").
- 2 Press **PROGRAM**.
 - **PROG** starts flashing.

To store the radio station to another preset number

- Press **PRESET** +/- ◀▶ to to select the desired preset number.
- 3 Press **PROGRAM** again to store the radio station.
 - **PROG** disappears
 - 4 Repeat **steps 1–3** to store other radio stations.

To exit manual programming

- Press **STOP** ■.

Tuning to preset radio stations

- Press **PRESET** +/- ◀▶ until the desired preset station is displayed.

External Sources

 
Connecting external equipment

- 1 Connect the audio out terminal of the portable device (i.e. iPod or MP3 player) to the **MP3 LINK** terminal of your system.
- 2 Press **SOURCE** once or more to select **MP3 LINK**.
→ "MP3 LINK" is displayed.

Note:

- All the sound control features (DSC or DBB, for example) are available for selection.
- Refer to the operating instructions for the connected equipment for details.

Clock/Timer

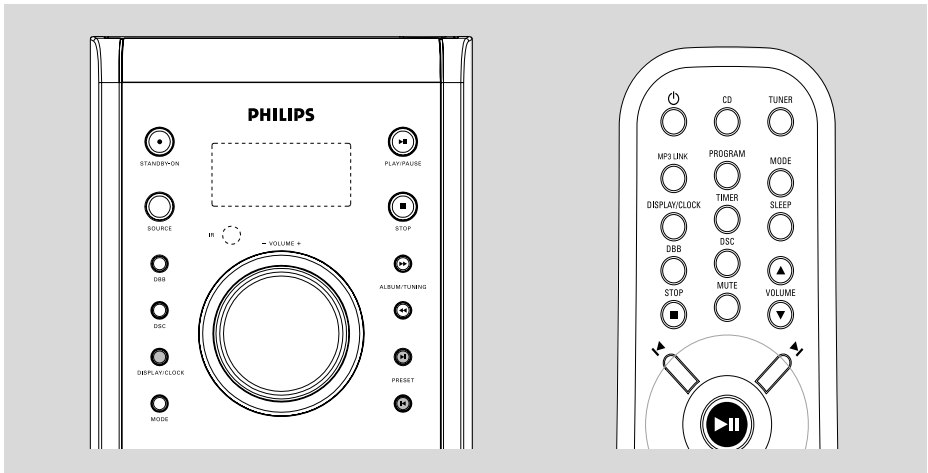

Setting the clock

- 1 In standby mode, press and hold **DISPLAY/CLOCK**.
→ The clock digits for the hours flash.
- 2 Press **PRESET +/-** (|<|/|>) (|<|/|> on the remote) to set the hours.
- 3 Press **DISPLAY/CLOCK**.
→ The clock digits for the minutes flash.
- 4 Press **PRESET +/-** (|<|/|>) (|<|/|> on the remote) to set the minutes.
- 5 Press **DISPLAY/CLOCK** to confirm the time.

Note:

- If the clock has not been set, --:-- will be displayed.

Setting the sleep timer

The sleep timer enables the system to switch off by itself after a set period of time.

- 1 In active mode, press **SLEEP** on the remote control repeatedly until the desired timer option appears.
→ Selections are as follows (time in minutes):
SL P0FF → SL P120 → SL P90 → SL P60
→ SL P45 → SL P30 → SL P15 → SL P0FF
→ Display shows „S" if activated, and disappears if deactivated.
- 2 **To cancel the sleep function**, either press **SLEEP** on the remote control once or more until "SL P0FF" appears, or press **STANDBY-ON** (⏻ on the remote) to switch to standby mode.

To check the remaining length of time after sleep timer is activated


- Press **SLEEP** once.

Setting the timer


- The system can switch on to CD, TUNER, or MP3 LINK mode automatically at a preset time, serving as an alarm to wake you up.

IMPORTANT!

- Before setting the timer, ensure that the clock is set correctly.
- The timer will always be switched on after it has been set.
- The timer will not start if a recording is in progress.
- The volume of the timer will increase gradually from the minimum level to the last tuned volume level (If the last tuned volume level is less than 15, it will increase gradually from the minimum level to 15).

- 1 In active or standby mode, press **TIMER** on the remote control.
→ The last timer setting is shown.
- 2 Press **TIMER** again for more than two seconds.
→ The clock digits for the hours flash.
- 3 Press **PRESET +/-** (◀/▶) (◀/▶ on the remote) to set the hours.
- 4 Press **TIMER** again.
→ The clock digits for the minutes flash.
- 5 Press **PRESET +/-** (◀/▶) (◀/▶ on the remote) to set the minutes.
- 6 Press **TIMER** to confirm the time.
→ The timer is now activated and display shows 

To deactivate the timer,

- Press **TIMER** in active or standby mode.
→  disappears if the timer is deactivated.

Notes:

- When the preset time is reached, the last selected source will be played automatically.
- During timer setting, if no button is pressed within 10 seconds, the system will exit timer setting mode automatically.
- If remote control is used, timer/clock setting is available only in CD and TUNER modes.

Specifications

AMPLIFIER

Total output power 25 W (12.5 W per channel)
 Signal-to-noise ratio ≥ 62 dBA (IEC)
 Frequency response 63 – 16000 Hz, ± 3 dB

CD PLAYER

Frequency range 63 – 16000 Hz
 Signal-to-noise ratio 65 dBA

TUNER

FM wave range 87.5 – 108 MHz
 MW wave range 531 – 1602 kHz

SPEAKERS

1-way Bass Reflex System
 Impedance 8Ω
 Speaker diameter 4"
 Dimensions (w x h x d).....14.6x23.6x18.5 (cm)

GENERAL

AC Power 230 – 240 V;
 50 Hz
 Dimensions (w x h x d) 14.6x23.6x23.9 (cm)
 Weight (with/without speakers)
 6.42 / 2.5 kg

Specifications and external appearance are subject to change without notice.

Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.



Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

Problem	Solution
CD OPERATION	
"No disc" is displayed.	<ul style="list-style-type: none"> - Insert a disc. - Check if the disc is inserted upside down. - Wait until the moisture condensation at the lens has cleared. - Replace or clean the disc, see "Maintenance". - Use a finalised CD-RW, CD-R or MP3 CD.
RADIO RECEPTION	
Radio reception is poor.	<ul style="list-style-type: none"> - Increase the distance between the Micro HiFi System and your TV or VCR.
GENERAL	
The system does not react when buttons are pressed.	<ul style="list-style-type: none"> - Remove and reconnect the AC power plug and switch on the system again.
Sound cannot be heard or is of poor quality.	<ul style="list-style-type: none"> - Adjust the volume. - Check that the speakers are connected correctly. - Check if the stripped speaker wire is clamped.
The left and right sound outputs are reversed.	<ul style="list-style-type: none"> - Check the speaker connections and location.
The remote control does not function	<ul style="list-style-type: none"> - Reduce the distance between the remote control and the system. - Insert the batteries with their polarities (+/- signs) aligned as indicated. - Replace the batteries. - Point the remote control directly toward IR sensor on the front of the system.
The timer is not working.	<ul style="list-style-type: none"> - Set the clock correctly. - Press TIMER in standby mode to switch on the timer. - If a recording is in progress, stop the recording.
The Clock/Timer setting is erased.	<ul style="list-style-type: none"> - Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 Year Free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy it is warranted for the remainder of the warranty of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen size less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology Care Centre for free replacement of faulty accessories.

8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only).
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

Technology Care Centre

1300 363 391

Please record the following information for your records and keep in a safe place.

We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:

Serial number:

Date of purchase:

Retailer:

Philips Consumer Electronics
a division of **Philips Electronics Australia Limited**

ABN 24 008 445 743,

Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after **1st January 2007**

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller

Philips New Zealand Ltd.

✉ **P.O. Box 41.021**

 
Auckland

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**

Meet Philips at the Internet-
<http://www.philips.com>

English

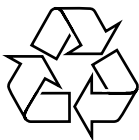

MCM285



Printed in China

PDCC-ZYL-0826