

Register your product and get support at
www.philips.com/welcome

Question?
Contact
Philips



PHILIPS

Contents

1 Important safety instructions 3

2 Your phone 5

- What is in the box 5
- Overview of the phone 5

3 Main menu icons 7

4 Display icons 8

5 Get started 9

- Connect the charger 9
- Insert the supplied batteries 9
- Set the language 10
- Set the date and time 10
- Set the date and time format 10
- Register your handset 10
- Charge the handset 11
- Check the battery level 11
- What is standby mode? 12
- Check the signal strength 12

6 Calls 13

- Make a call 13
- Answer a call 13
- End a call 14
- Adjust the earpiece/speaker volume 14
- Mute the microphone 14
- Turn the speaker on or off 14
- Make a second call 14
- Answer a second call 14
- Switch between two calls 14
- Make a conference call with the external callers 15

7 Intercom and conference calls 16

- Make a call to another handset 16
- Transfer a call 16
- Make a conference call 16

8 Text and numbers 18

- Enter text and numbers 18
- Switch between uppercase and lowercase 18

9 Phonebook 19

10 Call log 20

11 Redial list 21

12 Phone settings 22

- Sound settings 22
- Set the date and time 23
- ECO mode 23
- ECO+ mode 24
- Name the handset 24
- Set the display language 24
- Display settings 24

13 Alarm clock 26

- Set the alarm 26
- Turn off the alarm 26

14 Baby monitor 27

- Activate/Deactivate the baby unit 27
- Send an alert 27
- Set the baby cry level 28

15 Services 29

- Auto conference 29
- Call barring 29
- Call list type 30
- Auto prefix 30
- Network type 30
- Select the recall duration 30
- Dial mode 30
- First ring 31
- Auto clock 31
- Register additional handsets 31
- Unregister handsets 31
- Call services 31

Restore default settings	33
<hr/>	
16 Technical data	34
<hr/>	
17 Notice	35
Declaration of conformity	35
Use GAP standard compliance	35
Compliance with EMF	35
Disposal of your old product and batteries	35
<hr/>	
18 Frequently asked questions	37
<hr/>	
19 Appendix	39
Text and number input tables	39
<hr/>	
20 Index	40

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

When using the phone as a baby monitor



Caution

- Children should be supervised to ensure that they do not play with the appliance.
- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- Take every precaution to make sure that your baby can sleep safely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.



Short user manual



Note

- * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

 
What is in the box



Handset**



Charger**


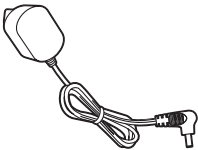


Power adapter**



Guarantee

  Overview of the phone

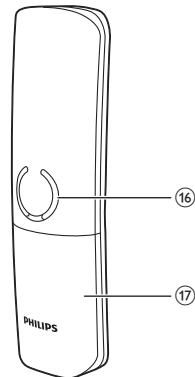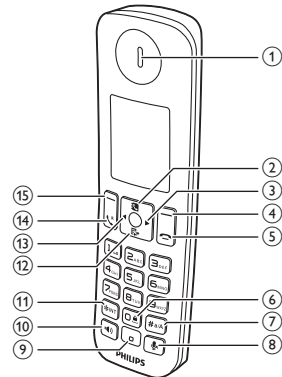

① Earpiece



- Scroll up on the menu.
- Increase the earpiece/speaker volume.



Move the cursor to the right in editing mode.



- Press to delete individual text or digit. Press and hold to remove all text.
- Cancel operation.
- Change the sound profile during a call.
- Select the function displayed on the handset screen directly above the key.



- End the call.
- Exit the menu/operation.



- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.



- Press and hold to enter a pause when editing the contact's name and number.
- Switch to upper/lower case during editing.



Mute or unmute the microphone.

⑨ Microphone



- Turn the speaker phone on/off.
- Make and receive calls through the speaker.



- Set the dial mode (pulse mode or temporary tone mode).



- Scroll down on the menu.
- Decrease the earpiece/speaker volume.



Move the cursor to the left in editing mode.



- Make and receive calls.
- Recall key



- Access the main menu in standby mode.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.








⑩ Loudspeaker

⑪ Battery door

3 Main menu icons

The following is an overview of the menu options that are available in your D600/D605. For detailed explanation of the menu options, see the corresponding sections in this user manual.












Make sure that all the handsets registered to the base station are Philips D60 models in order to have all these icons displaying and features functioning properly.

Icon	Descriptions
	[Phone setup] - Set the date and time, sounds, ECO mode, ECO+ mode phone name, display language, and display settings.
	[Services] - Set the auto conference, auto prefix, network type, recall time, auto clock, call services etc. The services are network and country dependent.
	[Alarm] - Set date and time, alarm, alarm tone etc.
	[Phonebook] - You can access the function through this icon only when you register your handset to D600/D605.
	[Incoming calls] - You can access the function through this icon only when you register your handset to D600.
	[Baby monitor] - You can access the function through this icon only when you register your handset to D600/D605.
	[Answer machine] - You can access the function through this icon only when you register your handset to a D605 base station with an answering machine.

4 Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Make sure that all the handsets registered to the base station are Philips D60 models in order to have all these icons displaying and features functioning properly.

Icon	Descriptions
	<ul style="list-style-type: none">When the handset is off the base station/charger, the bars indicate the battery level (from full to low).When the handset is on the base station/charger, the bars keep scrolling until charging completes.
	
	
	
	<ul style="list-style-type: none">The empty battery icon flashes and you hear an alert tone.The battery is low and needs recharging.
	The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
	This icon indicates missed calls on the standby screen or in the incoming call list. It changes color from red to white after reviewing calls.
	The silent mode is set, but is outside of active period.
	<ul style="list-style-type: none">The ringer is off.The silent mode is set and within active period (the phone does not ring).
	The alarm is activated.
	<ul style="list-style-type: none">It flashes when there is a new voice message.It remains steadily on when the voice messages are already viewed in the call log.The icon is not shown when there is no voice message.

ECO	The ECO mode is activated.
ECO+	The ECO+ mode is activated.

5 Get started



Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

Connect the charger



Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.

 


Note


- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by DSL interference. For further information on DSL filters, contact your DSL service provider.

Connect each end of the power adapter to (for multi handset versions only):

- the DC input jack at the bottom of the extra handset charger.
- the power socket on the wall.

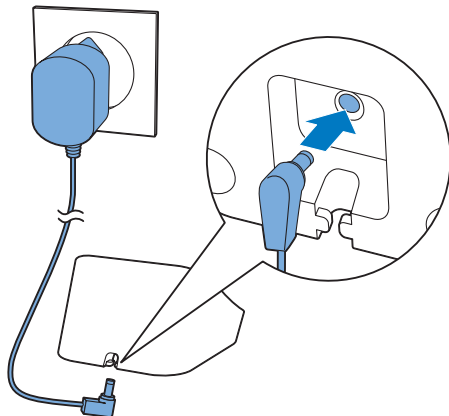

Insert the supplied batteries

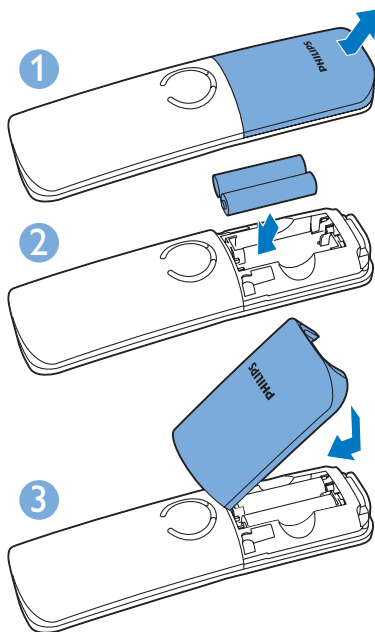 



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.



Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.



Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.



Note

- If the time is in 12-hour format, press ***INT** to select **[am]** or **[pm]**.

4 Press **[OK]** to confirm.

Set the date and time format

- 1 Select **[Menu]** > > **[Date & time]**, then press **[OK]** to confirm.
- 2 Select **[Date format]** or **[Time format]**.
- 3 Press / to select **[DD-MM-YYYY]** or **[MM-DD-YYYY]** as the date display, and **[12 Hours]** or **[24 Hours]** as the time display. Then press **[OK]** to confirm.
↳ The setting is saved.



Note

- The date and time format setting is country dependent.

Set the language

Select your language, then press **[OK]** to confirm.

↳ The language setting is saved.

To re-set the language, see the following steps.

- 1 Select **[Menu]** > > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.
↳ The setting is saved.

Set the date and time

- 1 Select **[Menu]** > > **[Date & time]**, then press **[OK]** to confirm.
- 2 Select **[Set date]/[Set time]**, then press **[OK]** to confirm.
- 3 Press the numeric buttons to enter the date and time.

Register your handset

Register your handset to the base station before use.



Auto registration

Extra handsets of the same model can be auto-registered. Place the unregistered handset on the base station.

- ↳ The handset detects the base station and registers automatically.
- ↳ Registration is complete in less than two minutes. The base station automatically assigns a handset number to the handset.

Manual registration/Pairing

If auto registration fails or if you register a handset of a different model, register your handset manually to the base station.

- 1 Select **[Menu]** >  > **[Register]**, then press **[OK]** to confirm.
- 2 Press and hold  on the base station for 5 seconds.

Note

- For models with an answering machine, you hear a confirmation beep.

- 3 Enter the system PIN/passcode. Press **[Clear]** to make corrections.
- 4 Press **[OK]** to confirm the PIN/passcode.
 - ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN/passcode is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN/passcode is 0000. No change can be made on it.

Charge the handset

Place the handset on the charging cradle to charge the handset. When the handset is placed correctly on the base station, you hear a docking tone (see 'Set the docking tone' on page 23).

 
- ↳ The handset starts charging.

Note






- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.
- Over time, capacity of batteries decreases. This is a normal battery behavior.

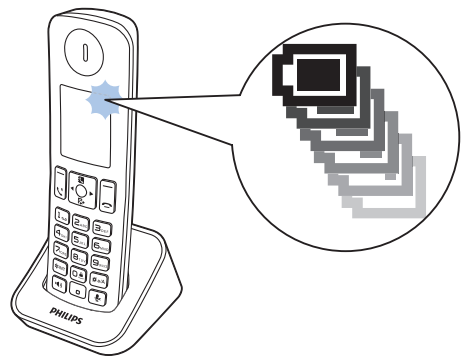Your phone is now ready to use.

Check the battery level



The battery icon displays the current battery level.


	When the handset is off the base station/charger, the bars indicate the battery level (from full to low).
	
	
	When the handset is on the base station/charger, the bars flash until charging is complete.
	The empty battery icon flashes. The battery is low and needs recharging.

If you are on the phone, you hear warning tones when the batteries are almost empty. The handset turns off when the batteries are completely empty.

What is standby mode?

Your phone is in standby mode when it is idle. When the handset is off the charging cradle, the standby screen displays the date and time. When the handset is on the charging cradle, the standby screen displays the time as a screen saver.

Check the signal strength

	The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the connection is.
---	---

- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset closer to the base station.

Note

- When **ECO+** is on, the signal strength is not displayed.

6 Calls

Note

- When the power fails, the phone cannot access emergency services.

Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 12).

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly.

Make a call

You can make a call in these ways:



- Normal call
- Predial call
- Call through the speed dial key

You can also make a call from the redial list, phonebook list and call log.



Tip

- For information of how to make a call from the redial list, phonebook list and call log, see the base station's user manual.

Normal call

- 1 Press  or .
- 2 Dial the phone number:
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Predial call

- 1 Dial the phone number
 - To erase a digit, press **[Clear]**.
 - To enter a pause, press and hold **#0/A**.
- 2 Press  or  to dial out the call.

Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

Call through the speed dial key



If you have already pre-saved a contact in the speed dial key, press and hold the key to make a call.

Tip

- For information of how to set the speed dial keys, see the chapter 'Phonebook', section 'Set the speed dial keys'.

Answer a call

When there is an incoming call, the phone rings and the LCD backlight flashes. Then you can:

- press  or  to answer the call.
- select **[Divert]** to send incoming call to the answering machine (only applied to the D605 model with answering machine).
- select **[Silent]** to turn off the ringer of the current incoming call.

Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.



Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.



Tip

- When there is a missed call, a notification message appears.

End a call

You can end a call in these ways:

- Press ; or
- Place the handset to the base station or charging cradle.

Adjust the earpiece/speaker volume

Press / on the handset to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press during a call.
 - ↳ The handset displays **[Mute on]**.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press again to unmute the microphone.
 - ↳ You can now communicate with the caller.

Turn the speaker on or off

Press .

Make a second call



Note

- This service is network dependent.

- 1 Press during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call



Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press and to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press and to end the current call and answer the first call.

Switch between two calls



Note

- This service is network dependent.

You can switch your calls in these ways:

- Press and ; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
 - ↳ The current call is put on hold, and you are now connected to the other call.


Make a conference call with the external callers



Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press , then **DEF**; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
 - ↳ The two calls are combined and a conference call is established.

7 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers. Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly.

Make a call to another handset

Note

- If the base station only has 2 registered handsets, press and hold ***INT** to make a call to another handset.

- 1 Press and hold ***INT**.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.
↳ The selected handset rings.
- 3 Press **📞** on the selected handset.
↳ The intercom is established.
- 4 Press **[Cancel]** or **📞** to cancel or end the intercom call.

Note

- If the selected handset is busy, **[Busy]** is displayed on the handset screen.

While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold ***INT**.

↳ The current caller is put on hold.

- 2 Select a handset number; then press **[OK]** to confirm.
↳ Wait for the other side to answer your call.

Switch between calls

Press **[Extern]** to switch between the outside call and the intercom call.

Transfer a call

Note

- If the base station only has 2 registered handsets, press and hold ***INT** to transfer a call to another handset.



- 1 Press and hold ***INT** during a call.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.
- 3 Press **📞** when the other side answers your call.
↳ The call is now transferred to the selected handset.

Make a conference call



A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press and hold ***INT** to initiate an internal call.
↳ The external caller is put on hold.
↳ For multi-handset versions, The handsets available for intercom are displayed. Then go to step 2.

- ↳ For two-handset versions, the other handset rings. Then go to step 3.
- 2 Select or enter a handset number; then press **[OK]** to confirm.
 - ↳ The selected handset rings.
- 3 Press **[** on the selected handset.
 - ↳ The intercom is established.
- 4 Press **[Conf]**.
 - ↳ You are now in a 3-way conference call with an external call and a selected handset.
- 5 Press **[** to end the conference call.

Note

- Press **[** to join an ongoing conference with another handset if **[ > [Conference]** is set to **[Auto]**.

During the conference call

- Press **[Int.]** to put the external call on hold and go back to the internal call.
 - ↳ The external call is put on hold.
- Press **[Conf]** to establish the conference call again.

Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

8 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete the character: Press ◀/▶ to move the cursor left and right.
- 3 Press **o** to add a space.



Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press **#** to switch between the uppercase and lowercase letters.

9 Phonebook

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly. For more information, see the base station's user manual.

10 Call log

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly. For more information, see the base station's user manual.

11 Redial list

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly. For more information, see the base station's user manual.

12 Phone settings


You can customize the settings to make it your own phone.

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly.

Sound settings


Set the handset's ringtone

You can select from 15 ringtones.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Ring Tone]**, then press **[OK]** to confirm.
- 2 Select a ringtone, then press **[OK]** to confirm.
↳ The setting is saved.

Set the handset's ringtone volume

You can select among 5 ringtone volume levels.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Ring volume]**, then press **[OK]** to confirm.
- 2 Select a volume level, then press **[OK]** to confirm.
↳ The setting is saved.



Tip


- When you turn the ringtone off,  displays on the screen.


Silent mode

You can set your phone to silent mode and enable it for a specific duration when you do not want to be disturbed. When the silent mode is turned on, your phone does not ring or send any alerts or sound.





Note

- When you press  to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.
- 3 Select **[Start & end]**, then press **[OK]** to confirm.
- 4 Set the time, then press **[OK]** to confirm.
↳ The setting is saved.




Note

- When the silent mode is set to **[On]**,  is displayed.  is displayed during the preset time for the silent mode.

Exclude the contacts from silent mode

You can select the length of ring delay and set the contacts to be excluded from the phonebook. Ring delay is the number of rings that will be muted before the rings become audible on the phone.


- 1 Select **[Menu]** >  > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[Exception]**.
- 3 Select **[On]** to activate, or **[Off]** to deactivate the silent mode, then press **[OK]** to confirm.
- 4 Select **[Ring delay]**, then select an option.
- 5 press **[OK]** to confirm.
↳ The setting is saved.

Note

- If **[Exception]** is set to **[On]** and **[Ring delay]** option is selected, the handset rings only after length of ring delay selected is reached.
- Make sure that the contact under the **[Set exception]** option of the phonebook menu is set to **[On]** before you can exclude this contact from the silent mode.


Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Key tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.


Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Docking tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Set the battery tone

Battery tone is the sound made when the battery is low and needs recharging.


- 1 Select **[Menu]** >  > **[Sounds]** > **[Battery tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Set the ringtone on the base station

Note


- This feature is available only for D605.

You can select from 5 ringtones on the base which is independent from the ringtone on the handset.

- 1 Select **[Menu]** >  > **[Sounds]** > **[Ringtone on base]**, then press **[OK]** to confirm.
- 2 Select a ringtone, then press **[OK]** to confirm.
↳ The setting is saved.

Set the sound profile

You can set the sound in the earpiece or handsfree mode among 3 different profiles.

- 1 Select **[Menu]** >  > **[MySound]**, then press **[OK]** to confirm.
- 2 Select a profile, then press **[OK]** to confirm.
↳ The setting is saved.

Access the sound profile during a call

Press **[Sound]** for once or several times to change the sound profile during a call.

Set the date and time


For further information, see chapter 'Get started', sections 'Set the date and time' and 'Set the date and time format'.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- 1 Select **[Menu]** >  > **[Eco mode]**, then press **[OK]** to confirm.


- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.
 ↳ The setting is saved.
 ↳ **ECO** is displayed in standby mode.



Note

- When **ECO** mode is set to **[On]**, the connection range between the handset and the base station can be reduced.

ECO+ mode

When the **ECO+** mode is activated, it eliminates the transmission power of the handset and base station in standby mode.

- 1 Select **[Menu]** >  > **[ECO+ mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.
 ↳ The setting is saved.


Note

- Make sure that all the handsets registered to the base station are D600/D605 in order to have the **ECO+** feature functioning properly.
- When **ECO+** is activated, the standby time is reduced. This is because in **ECO+** mode the base station is not transmitting any signal in standby mode; therefore the handset needs to "listen" more frequently for signals from the base station to detect incoming calls or other requests from the base station. The time it takes for the handset to access features like call setup, call log, paging, and phonebook browsing is also delayed. The handset will not alert you to link loss in case of power loss or moving out of range.


The following table shows you the current status of the handset screen with different **ECO** mode and **ECO+** mode settings.

ECO mode	ECO+ mode	Handset icon display
[Off]	[Off]	ECO and ECO are off.


[Off]	[On]	ECO is displayed only after the ECO+ mode is activated during standby mode .
[On]	[Off]	ECO is displayed.
[On]	[On]	ECO is displayed and changed to ECO when the ECO+ mode is activated in standby mode.

Name the handset


The name of the handset can be up to 16 characters. It is displayed on the handset screen in standby mode.

- 1 Select **[Menu]** >  > **[Phone name]**, then press **[OK]** to confirm.
- 2 Enter or edit the name. To erase a character, select **[Clear]**.
- 3 Press **[Save]** to confirm.
 ↳ The setting is saved.

Set the display language


Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.


- 1 Select **[Menu]** >  > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.
 ↳ The setting is saved.

Display settings

You can change the display of the phone during standby mode.


Set the brightness

You can set the brightness of the handset screen to different levels.

- 1 Select **[Menu]** >  > **[Display]**, then press **[OK]** to confirm.
- 2 Select **[Brightness]**, then press **[OK]** to confirm.
- 3 Select an option, then press **[OK]** to confirm.


Set the clock display

You can set the clock to digital or analog display.

- 1 Select **[Menu]** >  > **[Display]**, then press **[OK]** to confirm.
- 2 Select **[Clock]**, then press **[OK]** to confirm.
- 3 Select an option, then press **[OK]** to confirm.

Set the backlight of the LCD screen



You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.

- 1 Select **[Menu]** >  > **[Display]** > **[Visual alert]**, then press **[OK]** to confirm.
- 2 Select **[Flashing on]/[Flashing off]**, then press **[OK]** to confirm.
↳ The setting is saved.

13 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

Set the alarm

- 1 Select **[Menu]** > , then press **[OK]** to confirm.
- 2 Select **[On/off]** > **[On]/[Off]**, then press **[OK]** to confirm.
- 3 Select **[Alarm time]**, then press **[OK]** to confirm.
- 4 Enter an alarm time, then press **[OK]** to confirm.
- 5 Select **[Repetition]**, then press **[OK]** to confirm.
- 6 Select an alarm occurrence, then press **[OK]** to confirm.
- 7 Select **[Alarm tone]**, then press **[OK]**.
- 8 Select a tone from options, then press **[OK]** to confirm.
 - ↳ The alarm is set and  is displayed on the screen.



Tip


- Press ***INT** to switch between **[am]/[pm]** (Country dependent).

When the alarm rings

- Press **[Off]** to turn off the alarm.
- Press **[Snooze]** (or any key except **[Off]**) to snooze.
 - ↳ The alarm rings again after 5 minutes. After you snooze it for 3 times, the snooze function is off.

Turn off the alarm

Before the alarm rings

Select **[Menu]** >  > **[Off]**, then press **[OK]** to confirm.

- ↳ The setting is saved.

 
14 Baby monitor

Your phone supports the baby monitor function which sends an alert if the sound level exceeds the set limit.

Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly.

! Caution

- Make sure that you do not leave the handset that has the active monitor in the baby room.
- Make sure the baby unit and the cord are always out of reach of the baby.
- Place the baby unit at least 1 meter/3 feet but not more than 2 meters/6 feet away from the baby.

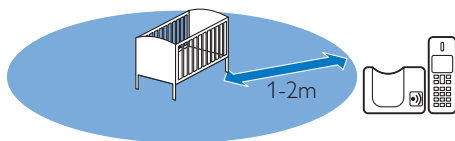

Activate/Deactivate the baby unit

Select **[Menu]** >  > **[Activate]**, then press **[OK]** to confirm.

↳ The baby unit is activated. **[Baby monitor on]** is displayed.

* Tip

- If you have not set the parent unit, a notification message is displayed. Then you are asked to select to where you send the alert: external lines or other handset number. For information, see the next section.
- To exit from the baby monitor menu, press **[Off]**.

≡ Note

- When the baby monitor mode is activated, the baby unit does not ring on incoming calls.


Send an alert

You can send an alert to other handsets within the home or an external line. External line can be a cell phone or another fixed line outside the house.

≡ Note

 
- Make sure that any prefix digits and/or country code are included when you send an alert.

Send to other handsets


- 1 Select **[Menu]** >  > **[Send alert to]** > **[Connected line]**, then press **[OK]** to confirm.
- 2 Select the handset number, then press **[OK]** to confirm.

≡ Note

- Make sure that the distance between the baby unit and the parent unit is at least 1.5 meter away from each other to prevent the howling effect.




Send to an external line

- 1 Select **[Menu]** >  > **[Send alert to]** > **[External line]**, then press **[OK]** to confirm.
- 2 Enter a telephone number, then press **[Save]** to confirm.


≡ Note

- You can still send an alert to the external line even though it is in the barred list.

Send to a contact from the phonebook

- 1 Select **[Menu]** >  > **[Send alert to]** > **[Select number]**, then press **[OK]** to confirm.
- 2 Select a contact from the phonebook, then press **[Save]** to confirm.


Set the baby cry level

- 1 Select **[Menu]** >  > **[Baby cry level]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.
↳ The setting is saved.

15 Services

The phone supports a number of features that help you handle and manage the calls. Make sure that all the handsets registered to the base station are **Philips D60** models in order to have this feature functioning properly.


Auto conference

To join an external call with another handset, press .

Note

- This feature is available only for multi-handset versions.


Activate/Deactivate auto conference

- 1 Select **[Menu]** >  > **[Conference]**, then press **[OK]** to confirm.
- 2 Select **[Auto]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.

Call barring


You can create four sets of numbers with four digits at maximum for each set of numbers. When you make a call that starts with one of these four sets of numbers, the outgoing call is then barred.

Select the barring mode

- 1 Select **[Menu]** >  > **[Call barring]** > **[Barring mode]** then press **[OK]** to confirm.
- 2 Enter the PIN/passcode. The default PIN/passcode is 0000.

- 3 Select **[On]/[Off]**, then press **[OK]** to confirm.
↳ The setting is saved.


Add new number to the barred list

- 1 Select **[Menu]** >  > **[Call barring]** > **[Barring number]**, then press **[OK]** to confirm.
- 2 Enter the PIN/passcode. The default PIN is 0000.
- 3 Select a number from the list, then press **[OK]** to confirm.
- 4 Edit the number; then press **[OK]** to confirm.
↳ The setting is saved.

Note

- The number in the barred list can still be sent as an external line for a baby call (see 'Send to an external line' on page 27).

Change the PIN/passcode

- 1 Select **[Menu]** >  > **[Call barring]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN/passcode, then press **[OK]** to confirm.
- 3 Enter the new PIN/passcode, then press **[OK]** to confirm.
- 4 Enter the new PIN/passcode again, then press **[Save]** to confirm.
↳ The setting is saved.


Note

- If you forget the PIN/passcode, you have to reset your phone (see 'Restore default settings' on page 33).

Call list type

You can set if you can see all calls or missed calls from the call log.

Select the call list type

- 1 Select **[Menu]** >  > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.


Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Set auto prefix

- 1 Select **[Menu]** >  > **[Auto prefix]**, then press **[OK]** to confirm.
- 2 Enter the detect number, then press **[OK]** to confirm.
- 3 Enter the prefix number, then press **[OK]** to confirm.
↳ The setting is saved.


Note

- This is a country dependent feature.
- To enter a pause, press and hold **#+A**.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with * and #.

Network type


Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Select **[Menu]** >  > **[Network type]**, then press **[OK]**.
- 2 Select a network type, then press **[OK]**.
↳ The setting is saved.

Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider:


- 1 Select **[Menu]** >  > **[Recall time]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.
↳ The setting is saved.

Dial mode

Note

- This feature is country dependent and only applies to models that support both tone and pulse dial.


Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

- 1 Select **[Menu]** >  > **[Dial mode]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.
↳ The setting is saved.

First ring

If you have subscribed to the caller ID service with your service provider, your phone can cancel the first ring before the caller ID is displayed on the screen. After the phone is reset, it can detect automatically if there is a caller subscription and start to cancel the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

Turn the first ring on/off

- 1 Select **[Menu]** >  > **[First ring]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, press **[OK]** to confirm.
↳ The setting is saved.

Note


- To reset the first ring status, go to the reset menu (see 'Restore default settings' on page 33).

Auto clock

Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.


It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Select **[Menu]** >  > **[Auto clock]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**. Press **[OK]**.
↳ The setting is saved. .

Register additional handsets

You can register additional handsets to the base station (see 'Register your handset' on page 10).

Unregister handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Select **[Menu]** >  > **[Unregister]**, then press **[OK]** to confirm.
- 3 Select the handset number to be unregistered.
- 4 Press **[OK]** to confirm.
↳ The handset is unregistered.

Tip

- The handset number displays beside the handset name in standby mode.

Call services

The call services are network and country dependent. They apply to models with call services support. Contact your service provider for more information.

Note


- For the call services to work properly, make sure that the activation and/or deactivation codes are correctly entered.

Call forward

You can divert your calls to another phone number. You can select among 3 options:


- [Call forward]:** divert all incoming calls to another number.
- [Call fwd busy]:** divert calls when the line is busy.
- [Call fwd unans]:** divert calls when no one answers.

Activate/Deactivate call forward

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**
- 2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.
- 3 Enter the telephone number.
↳ The setting is saved.

Edit the activation/deactivation code


You can edit the prefix and suffix to the call forward codes.

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**, then press **[OK]** to confirm.
- 2 Select **[Change code]**, then press **[OK]**.
- 3 Then you can either
 - Select **[Activation]** > **[Prefix]/[Suffix]**, then press **[OK]** to confirm; or
 - Select **[Deactivation]**, then press **[OK]** to confirm.
- 4 Enter or edit the code, then press **[OK]** to confirm.
↳ The setting is saved.


Call return

You can check the most recent unanswered call.

Call the return service centre

Select **[Menu]** >  > **[Call Services]** > **[Call return]** > **[Call]**, then press **[OK]** to confirm.
↳ Your call is made to the service center.


Edit the call return service centre number

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call return]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number, then press **[OK]** to confirm.
↳ The setting is saved.


Call back service

The call back service notifies you when a party you have tried to call becomes available. You can cancel this service from the menu after you have activated it from the service provider.

Cancel the call back service

Select **[Menu]** >  > **[Call Services]** > **[Cancel call bk]** > **[Call]**, then press **[OK]** to confirm.
↳ A call is made to the service centre to cancel the call back option.


Edit the cancel call back service number

- 1 Select **[Menu]** >  > **[Call Services]** > **[Cancel call bk]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number, then press **[OK]** to confirm.
↳ The setting is saved.

Hide your identity


You can hide your identity from the caller.

Activate ID withheld

Select **[Menu]** >  > **[Call Services]** > **[Hide my ID]** > **[Activate]**, then press **[OK]** to confirm.


- ↳ When you make a call to your contact, your ID is withheld.

Edit the ID withheld code

- 1 Select **[Menu]** >  > **[Call Services]** > **[Hide my ID]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number; then press **[OK]** to confirm.
 - ↳ The setting is saved.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Select **[Menu]** >  > **[Reset]**, then press **[OK]** to confirm.
 - ↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
 - ↳ All settings are reset.

16 Technical data

General specification and features

- Talk time: 18 hours
- Standby time: 250 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Caller identification standard support: FSK, DTMF

Battery

- Philips: 2 x AAA Ni-MH 1.2V 550 mAh rechargeable batteries

Power adapter

Base and charger

- Philips, MIN-A102-E130, input: 100-240Vac, 50-60Hz 200mA, output: 6Vdc 400 mA
- Philips, S003IV0600040, input: 100-240Vac, 50-60Hz 150mA, output 6Vdc 400 mA

Power consumption

- Power consumption in idle mode: around 0.30W

Weight and dimensions

- Handset: 121 grams
- 160.9 x 46.8 x 27.5 mm (H x W x D)
- Charger: 46 grams
- 46 x 84.5 x 71.1 mm (H x W x D)

17 Notice

Declaration of conformity

Hereby Philips Consumer Lifestyle, declares that the D600/D605 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC.

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in

general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

18 Frequently asked questions

No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Register your Handset]**, put the handset on the base until the signal bar appears.



Tip

- For further information, see 'Register additional handsets' on the Services section.

My handset is in searching status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

If I fail to pair (register) the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

I have chosen a wrong language which I cannot read, what do I do?

- 1 Press to go back to the standby screen.
- 2 Press to access the main menu screen.
- 3 Select , then you see one of the following texts appear on the screen:

Language
Sprache
Langue
Taal
Lingua

- 4 Select it to access the language options.
- 5 Select your own language.

No dialing tone

- Check your phone connections.

- The handset is out of range. Move it closer to the base station.

No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones with the same specifications.

No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.

- The caller's information is withheld or unavailable.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

19 Appendix

Text and number input tables

Key	Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Latvian/Bulgarian) ?
0	Space . 0 , / ; " ' ? ! ; { * + - % \ ^ _
1	1 @ _ # = < > () & € £ \$ ¥ [] { } □ § ...
2	A B C 2 Å Ä Æ Å Æ Ä Å Ä Ç Ç
3	D E F 3 Ê Ë Ì Í Î Ï Æ Δ Φ
4	G H I 4 Ğ Ĩ Ĵ Ĳ Ĳ Ĳ
5	J K L 5 Λ
6	M N O 6 Ñ Õ Ö Ø Ö
7	P Q R S 7 Š Š Š Π Θ Σ
8	T U V 8 Û Ü Ü Ü Ü
9	W X Y Z 9 Ø Ω Ξ Ψ Ž

Key	Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/Swedish)
0	Space . , ; " ' ! ; ? * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	a b c 2 à â ä æ á â ã ä å ä ç ĉ
3	d e f 3 é ê ë è é ě ē Δ Φ
4	g h i 4 ĝ ĥ ĭ ĵ ĩ ĩ Γ
5	j k l 5 Λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 ß š š Π Θ Σ
8	t u v 8 ú û ü ü ū μ
9	w x y z 9 ø Ø Ξ Ψ ž

Key	Upper case characters (for Greek)
0	Space . 0 , / : ; " ' ! ? , * + - % \ ^ _ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ∅ § ...

2	ABΓ2ABCÆÄÅÇ
3	ΔEZ3DEFÉ
4	HΘI4GHI
5	KΛM5JKL
6	NΞO6MNOÑÖ
7	ΠΡΣ7PQRS
8	ΤΥΦ8TUVÜ
9	ΧΨΩ9WXYZØ

Key	Lower case characters (for Greek)
0	Space . 0 , ; ' " ! ? ; * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } □ § ...
2	α β γ 2 a b c ä æ ä ä
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i ì
5	κ λ μ 5 j k l Λ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ ς 7 p q r s β
8	τ υ φ 8 t u v ü ù
9	χ ψ ω 9 w x y z ø

20 Index

A

additional handsets	10
alarm	26
auto clock	31
auto conference	29
auto prefix	30

B

baby monitor	27
battery	9, 11, 34

C

call back service	32
call barring	29
call forward service	32
call list type	30
call return	32
caller ID	31
calling	13
charging	11
conference call	15, 16, 29

D

date setting	10, 31
default settings	33
dial mode	30
display icons	8
display settings	24
disposal	35

E

ECO mode	23
ECO+ mode	24

F

first ring	31
------------	----

G

GAP	35
-----	----

H

hide own call	32
---------------	----

I

intercom	16
internal call	16

L

language setting	
handset	24

M

mute	14
------	----

N

name the handset	24
network type	30

P

phone settings	22
PIN	
calling barring	29
registration	11
power adapter	34

R

recall time	30
register/unregister	10, 31
ringtone	22

S

safety	3
signal strength	12
silent mode	22
sounds	

docking	23
keytone	23
sound profile	23
speaker phone	14
standby mode	12

T

text entry	18, 39
time setting	10, 31
transfer call	16
troubleshooting/FAQ	37
two calls/call on hold	14

V

volume adjustment	14
-------------------	----



CE 0168

Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

UM_D60x_12_EN_V1.0
WK12482

