


# Quick Start Guide

## 1 Charge the built-in battery

Step 1 Switch the **POWER ON / OFF/CHR** slide selector to the **OFF/CHR** position.

Step 2 Connect the supplied AC adaptor to the **DC IN 12V** socket on the DVD Player and to the AC outlet.

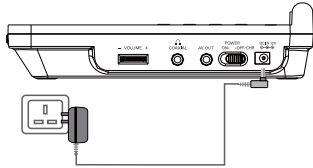

- ✓ The red charge indicator turns on. It takes about 4 hours to fully charge the battery.
- ✓ When the battery is fully charged, the red charge indicator turns off.

### Tip


- You can only charge the battery when the temperature is between 0°C and 35°C.
- When headphones are connected to the DVD Player, the fully charged battery lasts about 2.5 hours.

## 2 Install remote control battery

Step 1 Open the battery compartment.

Step 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.

Step 3 Close the battery compartment.

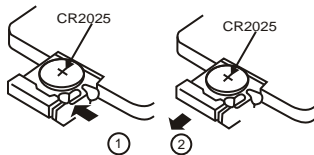

## 3 Play discs

Step 1 Lift the display panel.

Step 2 Switch the **OPEN** slide selector to the right to open the disc compartment.

- (For the first time) Remove the protective card.

Step 3 Insert a disc with the printed side facing up.

Step 4 Push the lid down to close the disc compartment.

- ✓ Disc starts to play automatically. If not, press **OK** or **▶||**.
- ✓ If a menu appears, select an item and then press **OK** to start play.

## 4 Connect a TV

On the DVD Player;

Step 1 Connect the black end of the supplied AV cable to the **AV OUT** socket.

On the TV,

Step 1 Connect the white end to the left audio input socket and the red end to the right audio input socket.

Step 2 Connect the yellow end to the video input socket.

