



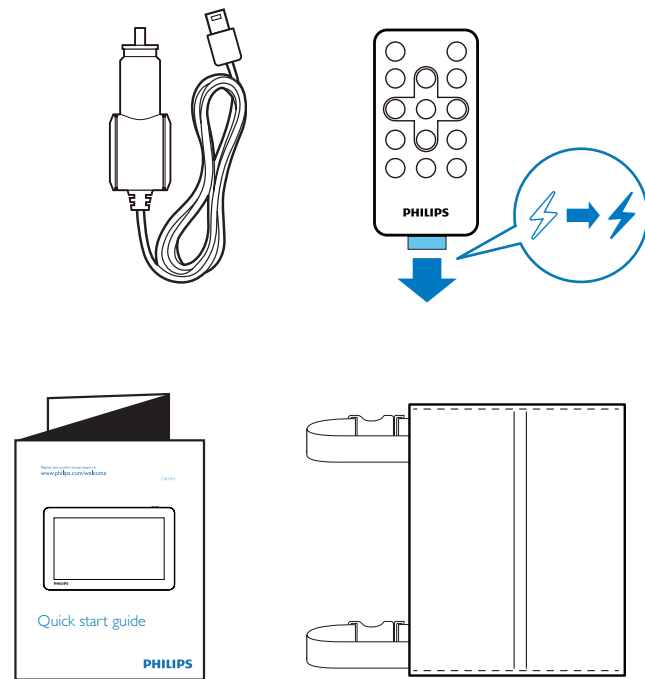


Register your product and get support at
请在以下网站注册您的产品和获取支持
www.philips.com/welcome

PV7005

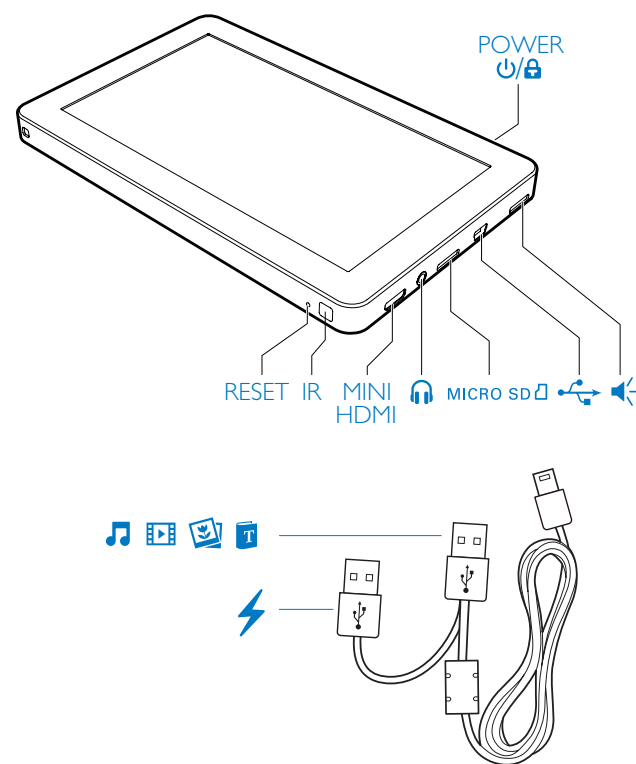

Quick start guide 快速入门指南


PHILIPS

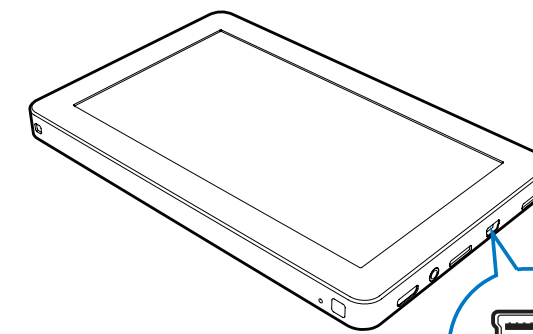




Connector 1: For data transferring
Connector 2: For charging

接头 1: 用于传输数据
接头 2: 用于充电


Tip: insert both connectors for quick charging
提示: 将两个插头同时插入来更快完成充电

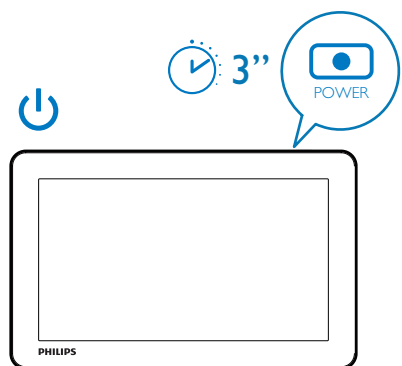

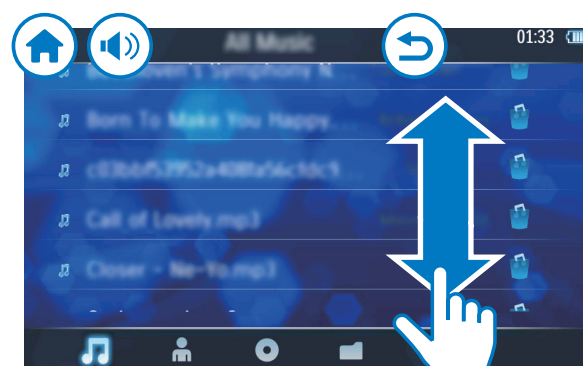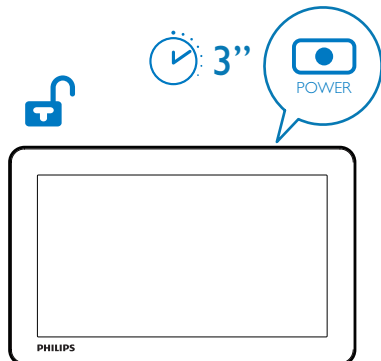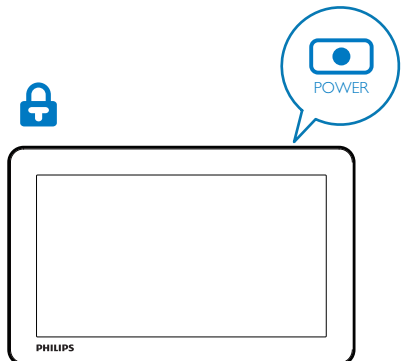

POWER Press and hold to switch on/off;
press to lock/unlock
按住电源键直到播放器打开或关闭。
短按电源键来锁定或解锁播放器。

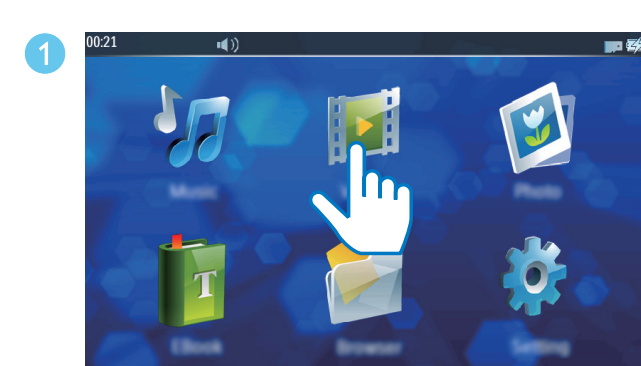


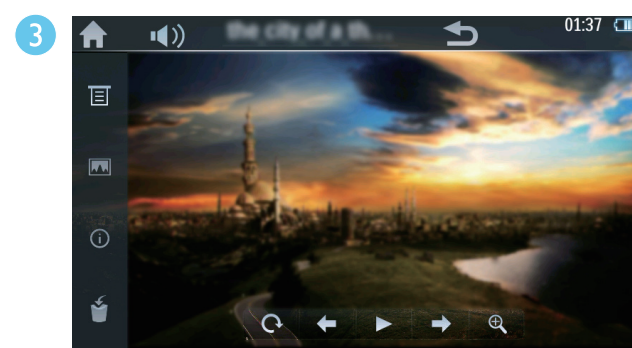
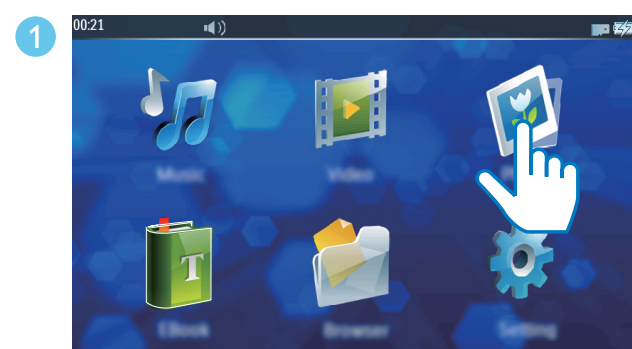
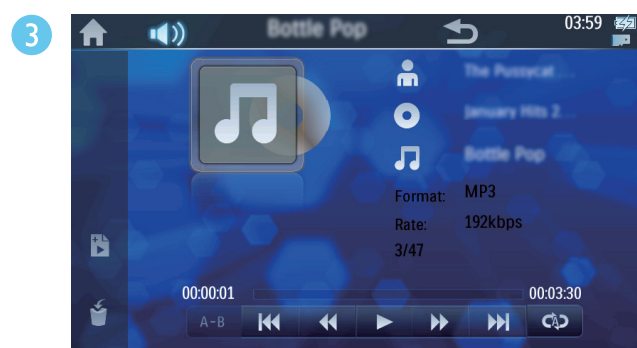
- Tap to go to the Home screen.
轻击以回到主屏幕。
- Tap to adjust the volume.
轻击来调整音量。
- Tap to go to the previous screen.
轻击返回上级菜单。
- Swipe your finger up/down to browse through media files.
用手指上下滑动来浏览媒体文件。


 



 
Tap , and then tap a video to play.
轻击 , 再选择播放视频文件。



Tap , and then tap a song to play.
轻击 , 再选择播放音乐。



Tap , and then tap a photo to play.
Tap  to start a slideshow.

轻击 , 再选择查看照片。
轻击  开始幻灯片播放。

