

AQ1001

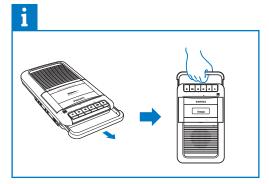

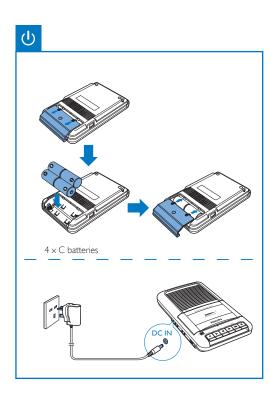







PHILIPS



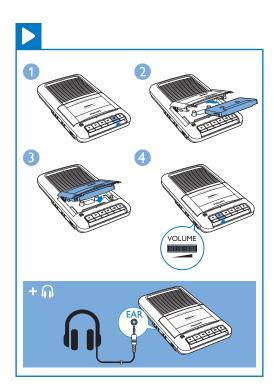

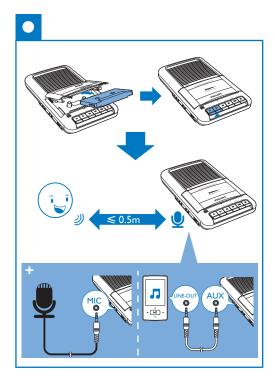

All registered and unregistered trademarks are property of their respective owners.

© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

AQ1001_05_QSG_V1.1



Safety

- Heed all warnings and follow all instructions.
- · Do not use the device near water.
- · Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the device:
 - Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
 - Old and new or different types of batteries should not be combined.
 - Install the battery correctly, + and as marked on the device.
 - Remove battery when the device is not used for a long time.
 - Batteries contain chemical substances, so they should be disposed of properly. The device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

A

Warning

- Never remove the casing of this device.
- Never place this device on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.
- Ensure that you always have easy access to the power cord, plug, or adapter to disconnect this device from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This
 product can produce sounds in decibel ranges that may cause
 hearing loss for a normal person, even for exposure less than a
 minute. The higher decibel ranges are offered for those that may
 have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level'
 adapts to higher volumes of sound. So after prolonged listening,
 what sounds 'normal' can actually be loud and harmful to your
 hearing. To guard against this, set your volume to a safe level

before your hearing adapts and leave it there.

To establish a safe volume level:

- · Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate

 breaks

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1977.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Note

The type plate is located on the bottom of the apparatus.

Specifications	
Amplifier	
Rated Output Power	0.4 W RMS
Frequency Response	125-6300 Hz
Signal to Noise Ratio	>45 dB
Total Harmonic Distortion	<1%
Aux Input	0.6 V RMS 20 kohm
General information	
Power Supply - AC Power Adaptor - Battery	Model: KSAS3R50600050VKD Input: 100-240 V~, 50/60 Hz; 0.15 A Output: 6.0V === 0.5 A 4 x C batteries
Operation Power Consumption	3 W
Dimensions - Main Unit (W x H x D)	144 × 46 × 241 mm
Weight - With Packing - Main Unit	0.83 kg 0.64 kg