



## Docking Entertainment System


DCM250



# Quick start guide


- 1** Connect
- 2** Setup
- 3** Enjoy

## What's in the box

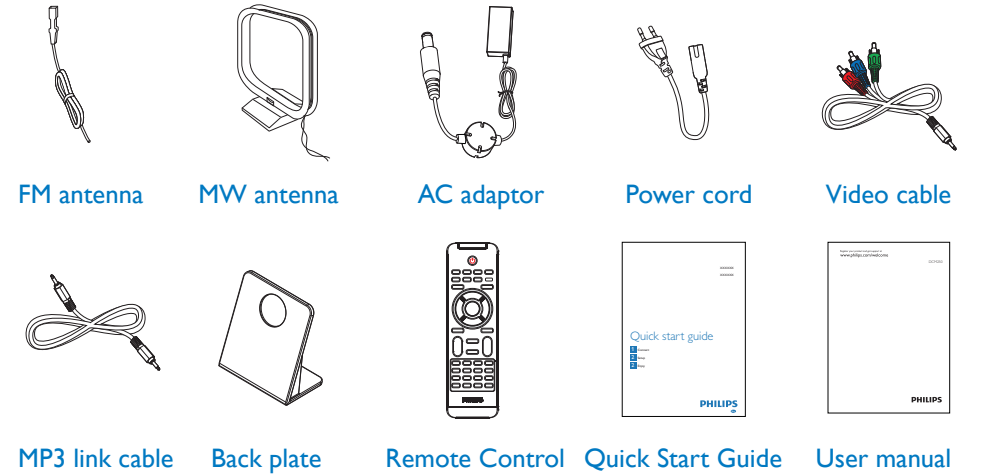


# 1 Connect

**A** Remove the protective tab

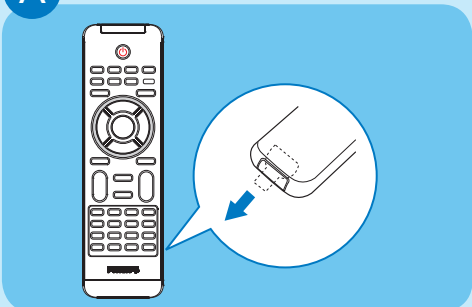


1 Remove the protective tab to activate the remote control battery.

**B** Connect power

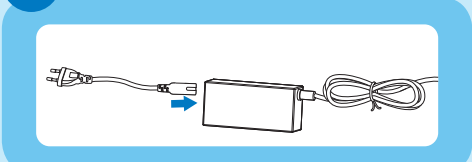


1 Connect the power cord to the AC adaptor.

# 1 Connect

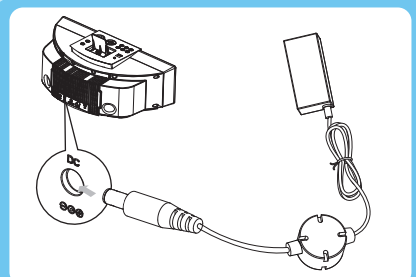

- 2 Connect one end to the DC socket on the main unit.

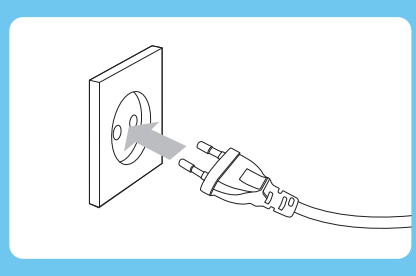


- 3 Connect the other end to the wall socket.

- \* Tip
- See the User Manual for how to connect other equipment to this system.

# 2 Setup

## A Set the clock

- 1 In standby mode, press **PROG** to activate the clock setting mode.  
↳ The 12 hour or 24 hour format is displayed.
- 2 Press **◀▶** to select 12 hour or 24 hour format.
- 3 Press **PROG**.  
↳ The hour digits are displayed and begin to blink.
- 4 Press **◀▶** to set the hour.
- 5 Press **PROG**.  
↳ The minute digits are displayed and begin to blink.

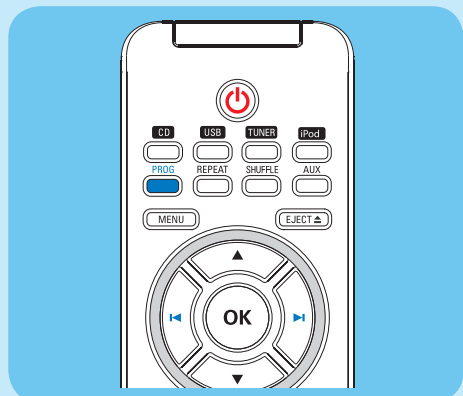


# 2 Setup

- 6 Press **◀▶** to set the minute.
- 7 Press **PROG** to confirm.

# 3 Enjoy


## A Play disc

- 1 Press **CD** to select the disc source.
- 2 Insert a disc into the disc compartment with the printed side facing up.
- 3 Press **▶||** to start play.  
• To stop play, press **■**.

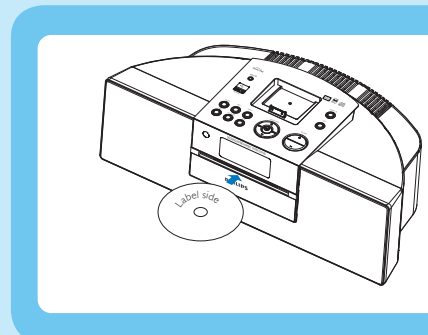

## B Play from USB


- ⓘ Note
- Ensure that the USB device contains playable audio content.
- 1 Connect the USB device into the **↔** socket.
  - 2 Press **USB** to select the USB source.  
↳ The total number of tracks is displayed.
  - 3 Press **▲▼** to select a folder.
  - 4 Press **◀▶** to select a file.
  - 5 Press **▶||** to start play.

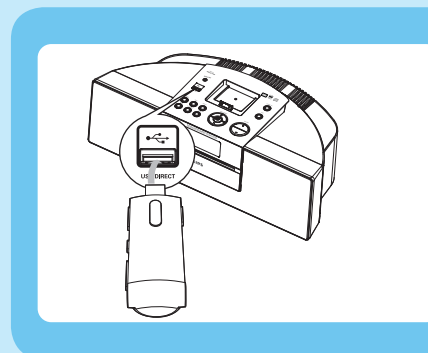

# 3 Enjoy

## C Program and tune to radio stations




- 1 Press **TUNER** to select the tuner source.
- 2 Press and hold **PROG** for 2 seconds to activate automatic program mode.  
↳ [AUTO] (auto) is displayed.  
↳ All available stations are programmed in the order of waveband reception strength.
- 3 Press **◀▶** to select a preset number.

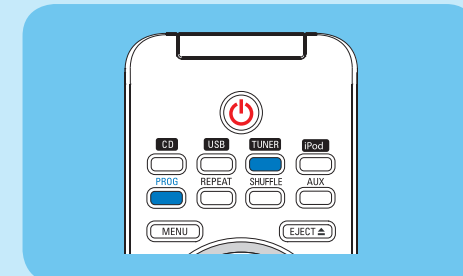

## D Play iPod/iPhone

- 1 Install the supplied back plate, and load the iPod/iPhone in the dock.
- 2 Press **iPod** to select iPod/iPhone source.  
↳ The connected iPod/iPhone plays automatically.

  - To pause/resume play, press **▶||**.
  - To skip to a track, press **◀▶**.
  - To search during play: press and hold **◀▶**, then release to resume normal play.
  - To navigate the menu: press **MENU**, and press **▲▼◀▶** to select, then press **OK** to confirm.

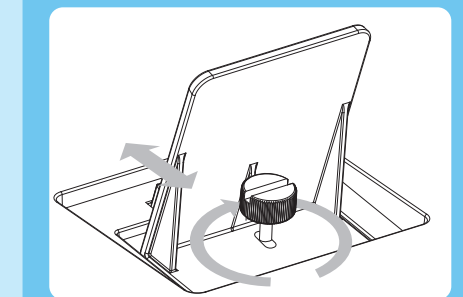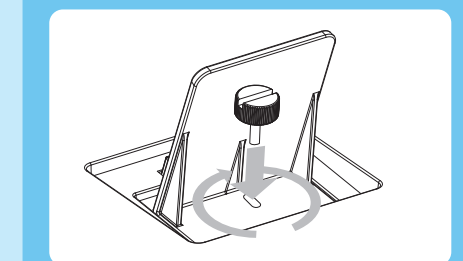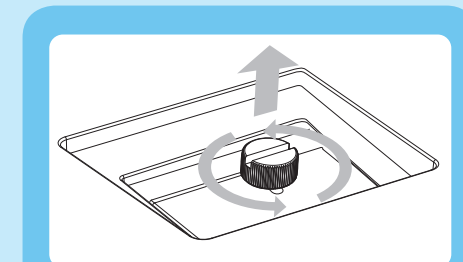

- \* Tip
- Detailed features and additional functions are described in the user manual.