 




User manual

Playing the speakers and subwoofer

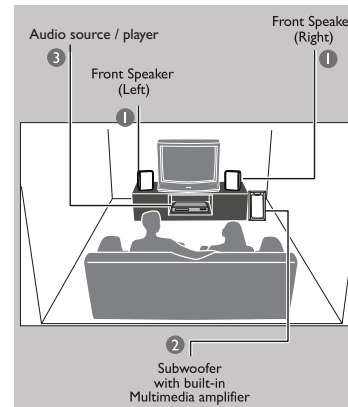

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

For best possible surround sound, all the speakers (except subwoofer) should be placed at the same distance from the listening position.

Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees (horizontal) from the listening position.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

General information

Safety instructions

Please read carefully the safety mark on the back side

Warning: This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Warning: This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.


Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories


Item	Audio cable	Remote control	User manual	power cord
Quantity	1	1	1	1

 Connections

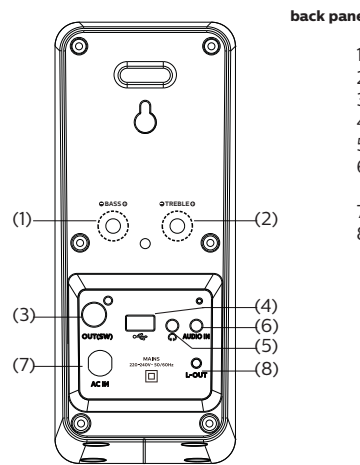

***Do NOT use USB for charging devices which can cause damage to your external devices.thank you.

 
Top panel operation

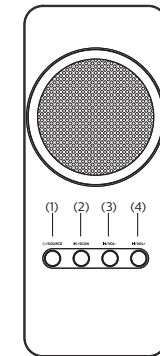

1. SOURCE
2. MUTE
3. VOL-
4. VOL+

1. SOURCE: standby mode, short press SOURCE button to turn on, after turning on: short press SOURCE button to switch to channels, long press SOURCE button would be standby mode.
2. MUTE/SCAN: USB*/BT mode: play/pause; FM mode: long press to auto search and store radio stations. In FM/AUDIO mode, short press to mute.
3. VOL- /VOL+: USB*/BT mode: short press for the previous song, FM mode: short press for previous radio station, All modes: long press to continuously reduce the volume.
4. VOL+ button: USB*/BT mode: short press for the next song, FM mode: short press to for next radio station, All modes: long press to continuously increase the volume.

 Remote controls

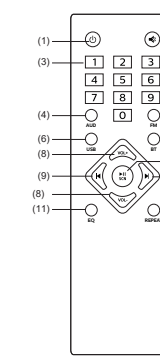

1. SOURCE
2. MUTE
3. 0-9
4. AUD
5. FM
6. BT
7. BT
8. VOL+/-
9. MUTE
10. MUTE/SCAN
11. EQ
12. EQ
13. REPEAT

* AVAILABLE IF CONNECTED

1. SOURCE: standby, short press after turning on mode is standby.
2. MUTE: To mute and unmute the unit. blue & white LED light alternately flash when being muted.
3. 0-9: Numeric keys, with the help of these keys you can select song or track in USB*. In FM, you can key in frequency, i.e. 92.7 for 92.7.
4. AUD: Audio input mode.
5. FM: FM mode.
6. USB: USB* mode.
7. BT: Bluetooth mode.
8. VOL +/-: short press to increase or decrease the volume, long press to continuously increase or decrease the volume.
9. MUTE: Play the previous song by pressing "MUTE" at USB*/BT mode. Choose previous channel by pressing "MUTE" at FM mode.
10. PLAY/ PAUSE/ SCAN: USB*/BT mode: play/pause, FM mode: long press for automatic search and store radio station, FM/AUDIO mode: short press to mute.
11. MUTE: Play the next song by pressing "MUTE" at USB*/BT mode. Choose next channel by pressing "MUTE" at FM mode.
12. EQ: NORMAL, POP, ROCK, JAZZ, CLASSIC, COUNTRY.
13. REPEAT: USB* mode can set the current USB* playback mode to single loop mode or full loop play mode.



Register your product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



总尺寸: 660x173mm

成品正面:



工艺: 风琴折 105G铜版纸 双面印刷

成品尺寸: 110x86.5mm

成品背面:



Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. BT not working.	Reduce the distance or device is not paired.

Warranty

This Philips 2.1 Multimedia Speaker System is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty. **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited, undertake to repair the apparatus FREE OF CHARGE at any of its Authorized Service Center in India.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by persons other than Philips authorized service centre.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. For detailed Terms and Conditions applicable, please refer www.philips.com/support.

Model No. _____ Product Sl. No. _____

Invoice Number _____ Date of Purchase: ___/___/_____

Customer's Name and address: _____

PIN: [] [] [] [] [] [] [] [] [] []

Always there to help you!
Visit us at www.support.philips.com
Helpline: 1800 425 6396
Email: india.callcentre@tpv-tech.com
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:



Product specifications*

Total system power	25W RMS
Treble speaker power	7.5W x 2 RMS
Bass speaker power	10W RMS
Separation	≥40db
SNR	≥55db
Audio input socket	Audio cable
Power consumption	6.8 W
Subwoofer speaker	1 Way
Speaker size	4 inches
Impedance	4 Ohm
Frequency range	40Hz - 120Hz
Dimension (mm) W x H x D	220 x 267 x 140
Weight	1.50kg

Satellite speaker power	2 Way
Speaker size	3 inches
Impedance	4 Ohm
Frequency range	120Hz - 20KHz
Product Dimension (mm) W x H x D	90x 220 x 89
Net Weight	0.52 kg
BT version	V5.0
BT range	Up to 10 meters
USB max capacity	Up to 32GB
playability	MP3 track

*Specification subject to change without prior notice. Measured under specific conditions.