


QUICK START GUIDE

HTS3500S
12nc: 3139 246 17451

1 what's in the box




2 connect TV

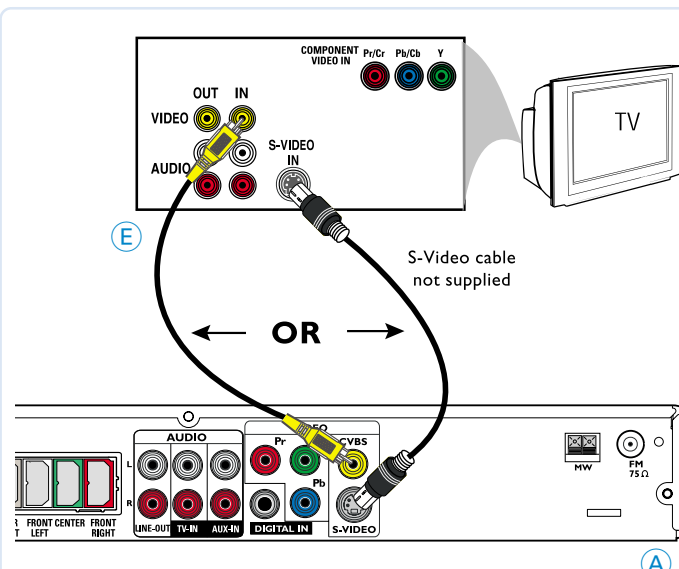

Note: For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed set up.

3 connect subwoofer, speakers and antennas

3a Placement of speakers

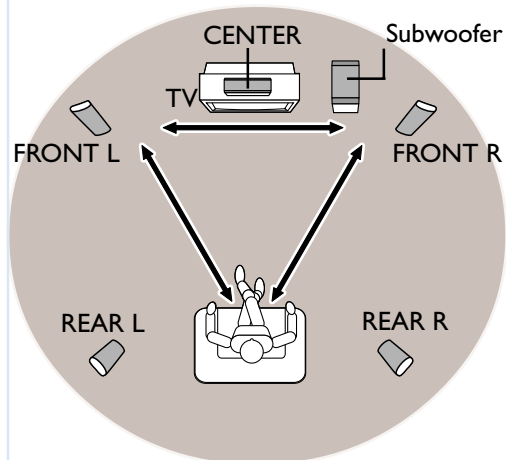


3b Connect the speakers and subwoofer to the DVD system

(refer to the user manual for "Individual speaker volume adjustment")

3c Connect the FM and MW antennas

3d Connect the mains cord to the power supply

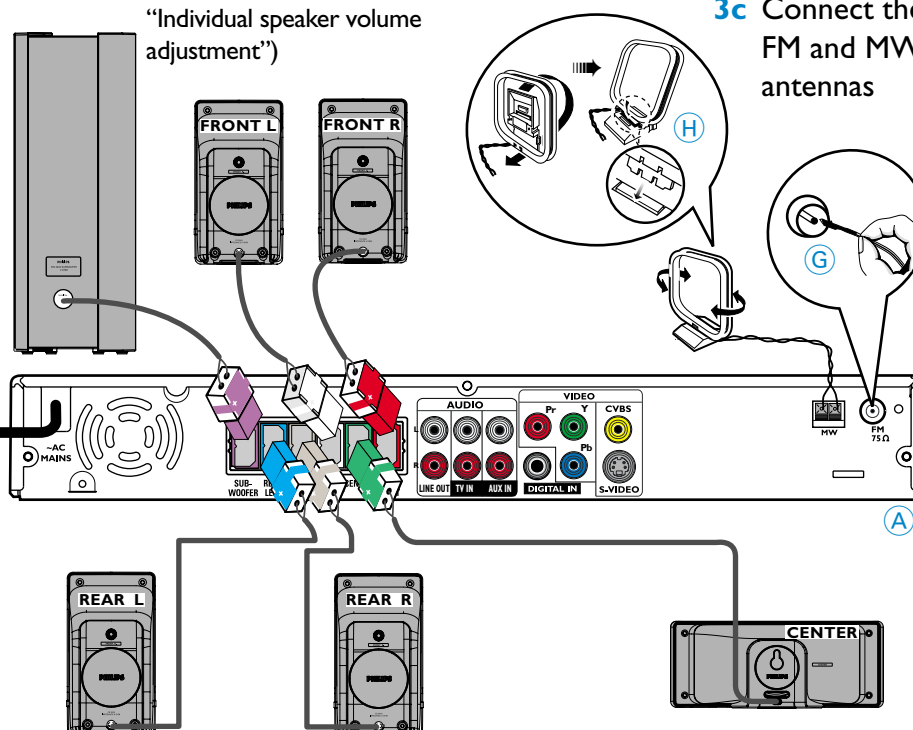


4 play a disc




4a Press DISC.

Point the remote control towards the DVD system.

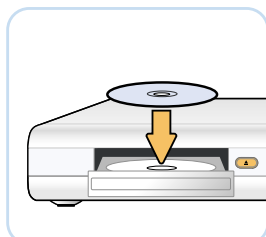

4b Load in a disc

Press OPEN CLOSE to open and close the disc tray.

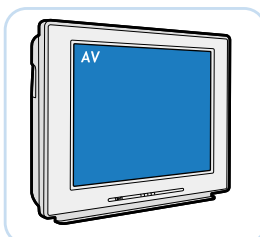


4c Select correct AV In channel

Switch to the correct input source by using the TV remote control.

GET PICTURE


- Check the connection of the DVD system to TV is in place (see 2 Connect TV).
- Check the AV mode on TV. It may be called FRONT, A/V IN, or VIDEO. Choose the different modes using TV remote control.
- Or, use the TV remote control to select Channel 1 on TV, then press Channel down button until you get the picture.
- See your TV manual for more details.

More settings and features

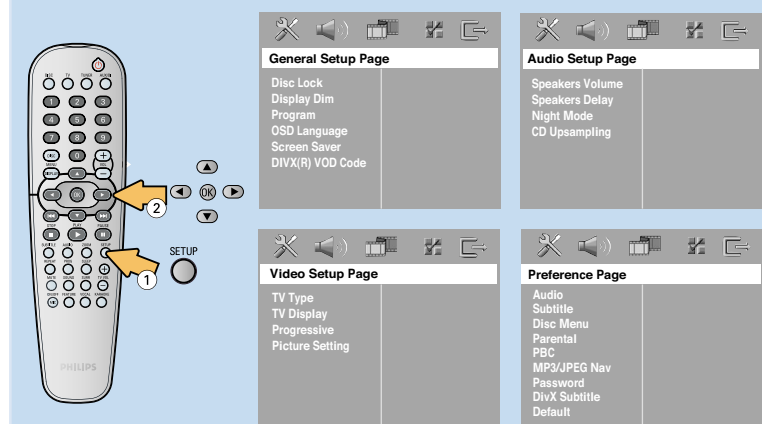

Refer to chapter "DVD Setup Menu Options" in the user manual for detailed descriptions.

GET SOUND

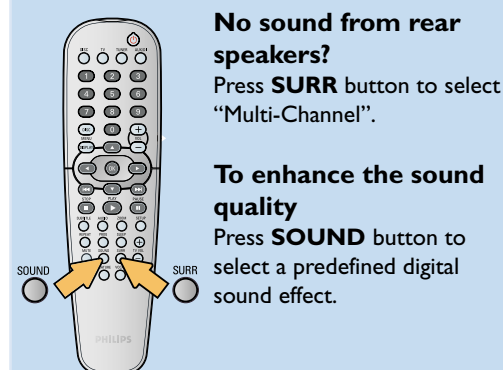

No sound from rear speakers?


Press **SURR** button to select "Multi-Channel".

To enhance the sound quality

Press **SOUND** button to select a predefined digital sound effect.

Detailed playback features and additional functions are described in the user manual.

5 programme radio stations

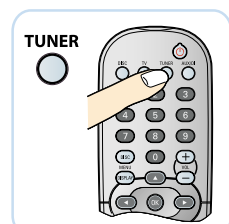


5a Press TUNER.

AUTO INSTALL PRESS PLAY

Note: This feature is only available for first time setup.




5b Press and hold PLAY ► until "START ..." appears. It will start to programme all available radio stations.

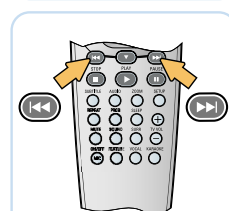

5c Once complete, use ◀▶ to select a preset radio station.


6 optional - connect VCR

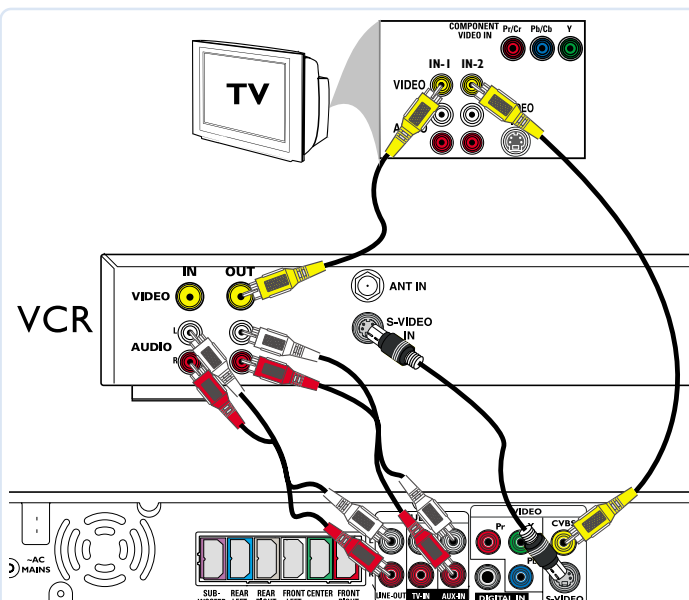

Note: LINE OUT will output sound only when the speakers volume are reduced to level 1 and below.

NEEDS HELP? Visit our website www.philips.com/support

 www.philips.com/support
This document is printed on chlorine free produced paper
Data subject to change without notice



12nc: 3139 246 17451

PHILIPS