

Troubleshooting

No reaction to the remote control.

- Connect the product to the power outlet.
- Point the remote control at the product.
- Insert the batteries correctly.
- Insert new batteries in the remote control.

Cannot play back a disc.

- Make sure that the product supports the disc.
- Make sure that the Blu-ray Disc player supports the region code of DVD or BD (BD: A, DVD: All or 3).
- For DVD±RW/±R, make sure that the disc is finalised.

No video signal on the display device.

- Turn on the TV.
- Set the TV to the correct external input.
- Select the correct video resolution using **OUTPUT** on the front panel.
- Press and hold ► on the front panel for 5 seconds to change the setting back to its default.

No 5.1-channel audio from the loudspeakers of the audio system.

- Does the disc contain 5.1-channel audio? The 5.1-channel audio is not available when the disc does not contain it.
- Does the audio system support 5.1-channel audio? The 5.1-channel audio is not available when the audio system does not contain it.
- In the settings menu, set **[HDMI Audio]** to **[Off]**.

Need help?

User Manual

See the user manual that came with your Philips Blu-ray disc player.



2008 © Philips Consumer Lifestyle
All rights reserved.
Printed in China
E5J13PD
IVMN26828 ★★★★★

Register your product and get support at
www.philips.com/welcome

BDP7200



- 1 Connect
- 2 Set up
- 3 Enjoy

Quick Start Guide


What's in the box?




Blu-ray Disc Player




Remote Control
and 2 batteries

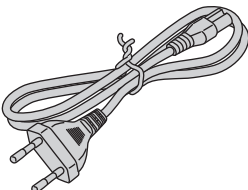


Power cable

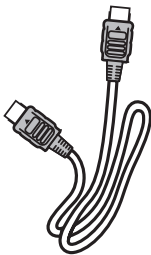


HDMI cable
(high speed)

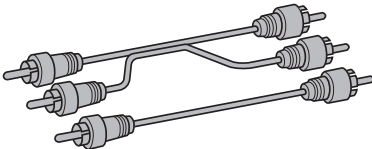

RCA Audio/
Video cables

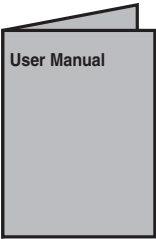

User Manual

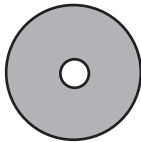


User Manual
in CD-ROM

PHILIPS

1 Connect

Connect to TV

A Option 1: Use HDMI (best quality)

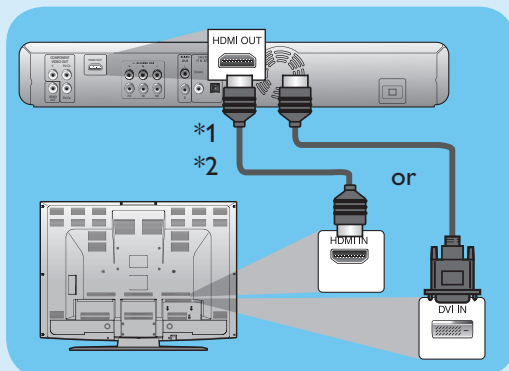


- If your TV supports HDMI, connect the HDMI cable or HDMI-DVI cable (not supplied) to the **HDMI OUT** socket on this unit and the **HDMI** or **DVI** input socket on your TV.

Note


- *1) This unit is compatible with the progressive scan system. The feature provides you with higher quality pictures than traditional output system does. To utilise this feature, a component or an HDMI connection is required.
- *2) Analogue audio connection is not required for this type of connection.

Option 2: Use Component Video (better quality)

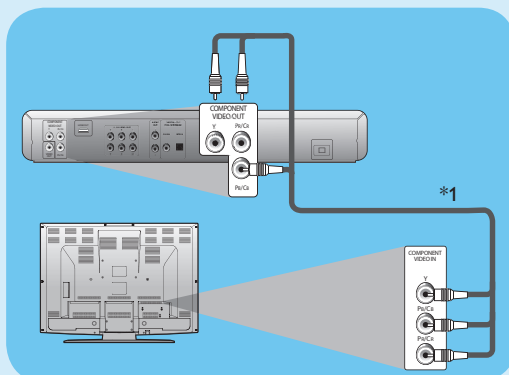


- Connect the component video cable (not supplied) to the **COMPONENT VIDEO OUT** socket on this unit and the component video input socket on your TV.

Option 3: Use Composite Video (standard quality)

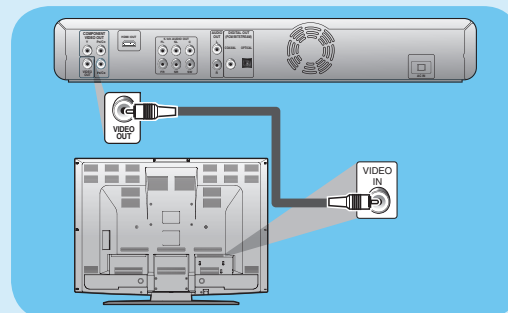


- Connect the RCA video cable to the **VIDEO OUT** socket on this unit and the composite video input socket on your TV.

B Connect audio

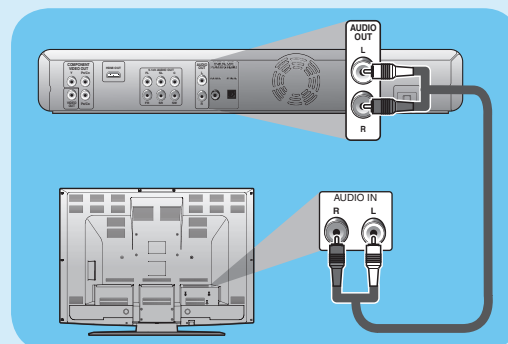

- Connect the RCA audio cable to the **AUDIO OUT (L/R)** socket on this unit and the analogue audio input socket on your TV.

 C Connect power cable




- After you made all the necessary connections, connect the power cable from the **AC cord** to the AC outlet.

Note Refer to the user manual for the possible connections and important safety instructions.

2 Set up


Find the viewing channel

- 1 Press **POWER** to turn on this unit.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

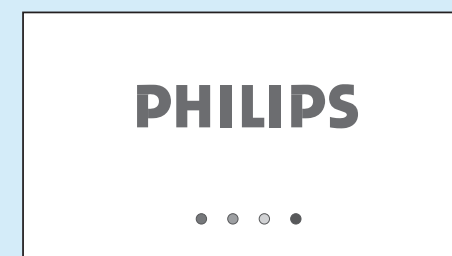

Note To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **CH** button) until you see the Video In channel.


- If a certain amount of time has passed since you turned on the unit, you may see the home menu instead of the PHILIPS splash screen.

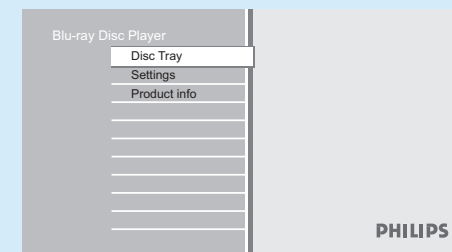

3 Enjoy

Start disc play

- 1 Press **OPEN/CLOSE** to open the disc tray.
- 2 Place the disc on the disc tray with its label side facing up.

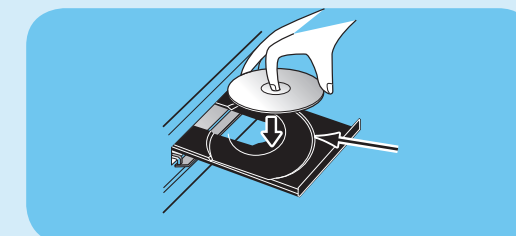

- Make sure the disc is compatible with this unit.

| | |
|-----------|--|
| BD-video | |
| DVD-video | |

- 3 Press **OPEN/CLOSE** to close the disc tray.
 - It may take a while to load the disc.
- 4 Playback may start automatically. If not, press **PLAY**.

To pause playback:

- Press **PAUSE**.

To return to the normal playback:

- Press **PLAY**.

To stop playback:

- Press **STOP**.

