

Quick Start Guide




Step A **Connect**

Step B **Setup**


Step C **Enjoy**

What's in the Box?


You should find these items upon opening the box.

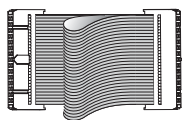



Control Cable

 

 Composite video and audio cables
(yellow, white, red)




Remote control with two
AAA batteries

 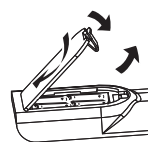

FM and MW antennas



 Quick start guide



User manual


PHILIPS

Step A *Connect*

Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.


- 1 Connect the speaker cables.
- 2 Connect the MW and FM antennas.
- 3 Connect the control cable.
- 4 Connect the composite video and audio cables to a TV.
- 5 Connect the power cords of the system and TV.

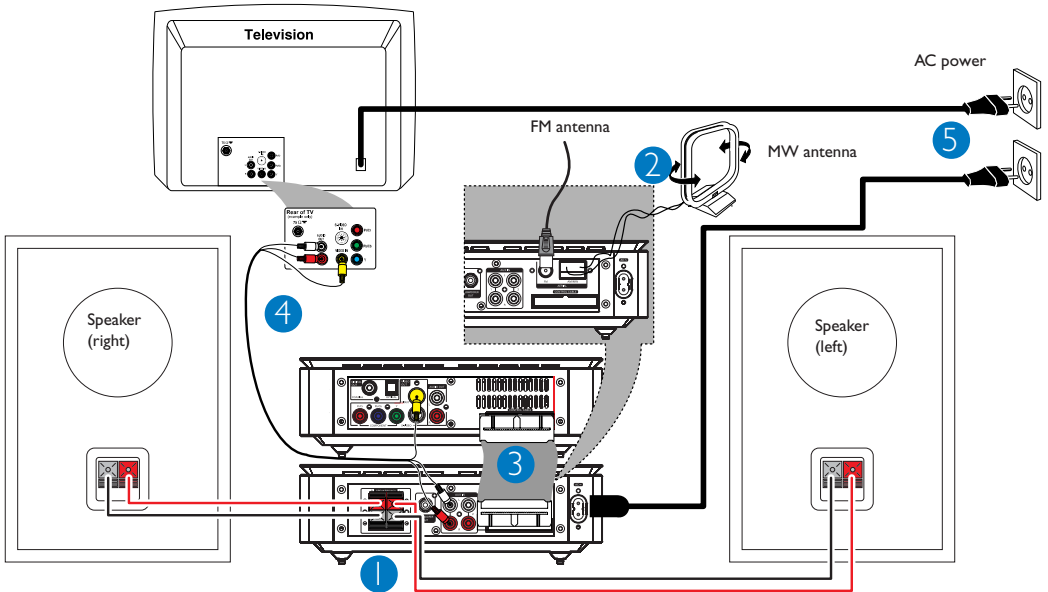

Step B *Setup*



Setting up the TV

- 1 Press **SOURCE (DISC)** on the remote to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

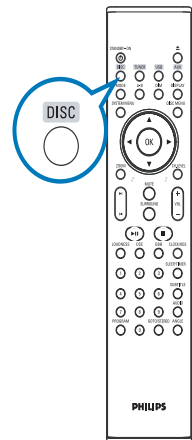

Step C Enjoy

Playing a disc

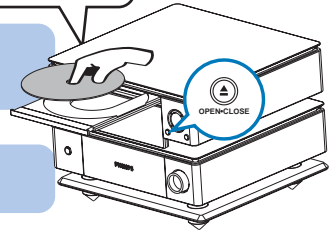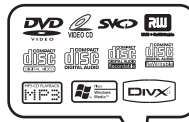

- 1 Press **OPEN •CLOSE ▲** (▲ on the remote) to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press ►||.

- 3 To stop playback, press **PRESET-■** (■ on the remote).

Programming and tuning to radio stations


- 1 Press **SOURCE (TUNER)** on the remote to select tuner source.

- 2 Press **PROGRAM** on the remote for more than two seconds to program all available stations in order of waveband.

- 3 Press **PRESET+/-** (◀ / ▶) on the remote) until the desired preset station is displayed.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.

- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.

- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Tip
Detailed playback features and additional functions are described in the accompany owner's manual.

Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (►||, ◀, ▶) for example).

