

# Quick Start Guide










Step A **Install**

Step B **Prepare**

Step C **Enjoy**

## What's in the Box?


You should find these items upon opening the box.

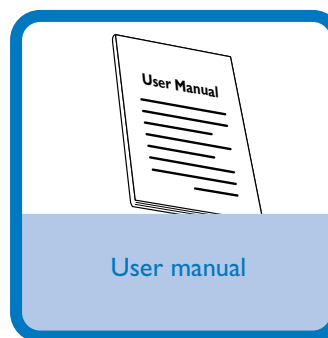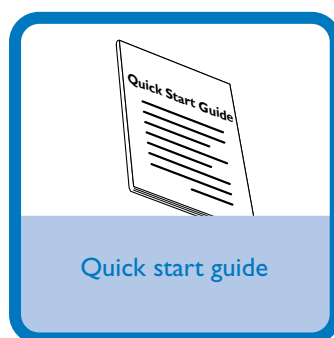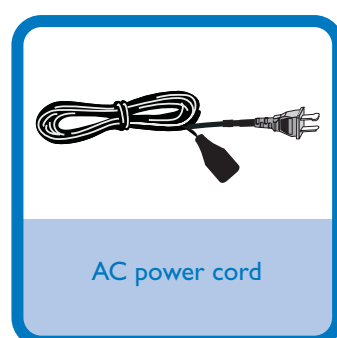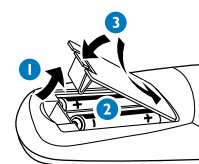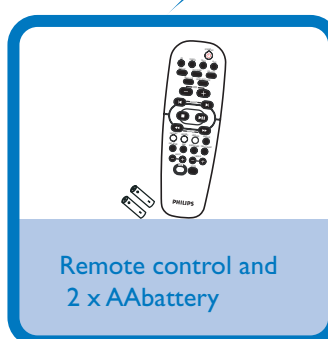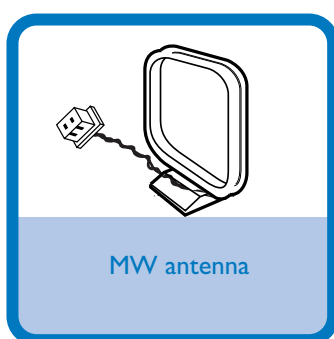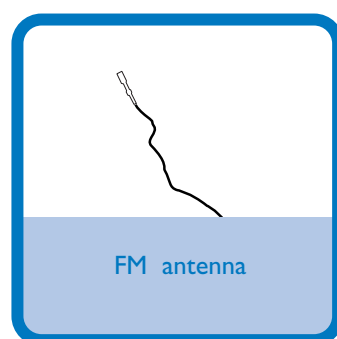


# Step A *Install*

## To deactivate the \**Demonstration Mode*


\*The Demonstration Mode displays various features of MCM760.

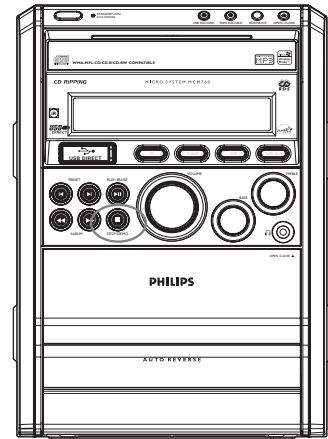

1

Press and hold  on the set until **DEMO OFF** appears

## Rear connections

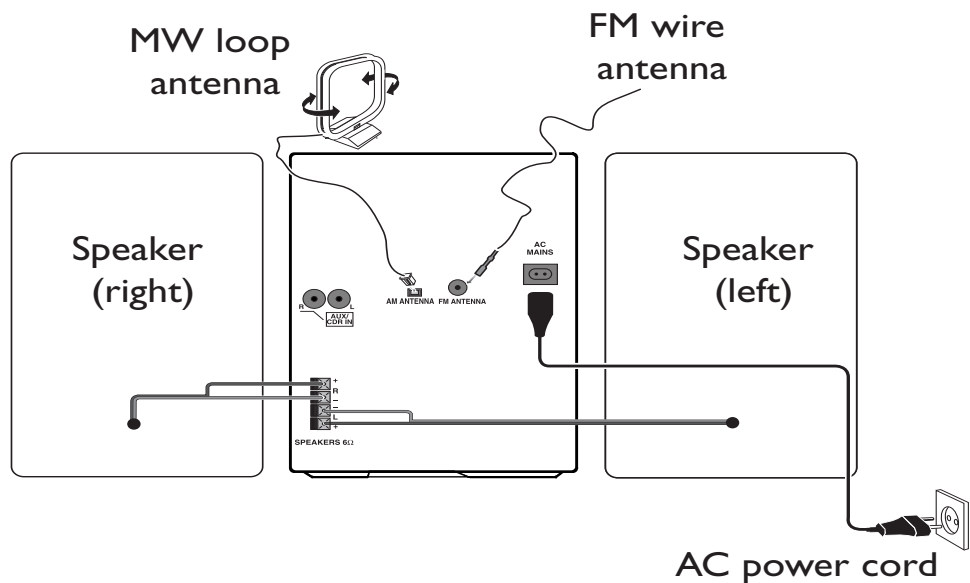

1

Connect the cable of the left speaker to **L +/-** (red and black) and the cable of the right speaker to **R +/-** (red and black)

2


Extend the wire antenna and fit it to **FM ANTENNA**

3

a. Assemble the loop antenna  
b. Fit the plug of the loop antenna to **AM (MW) ANTENNA**

4

Connect the AC power cord to the wall socket

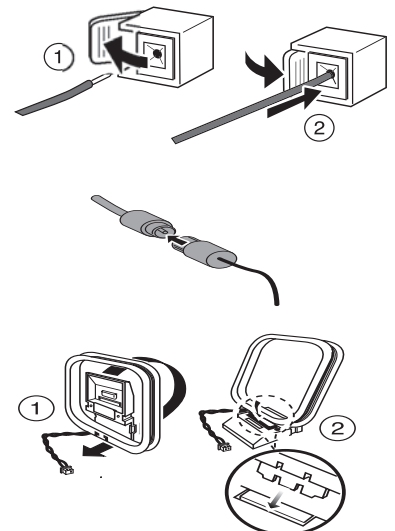


## Step A *Install*

### Tuner: Plug & Play

Plug & Play allows you to store all available radio stations automatically (up to 40 stations).

- 1 Connect the set to the power supply  
→ **AUTO INSTALL – PRESS PLAY** appears
- 2 Press **▶||** on the set to start installation  
→ **INSTALL TUNER AUTO** appears  
→ After all stations are stored, the last preset station will then be played
- 3 Press the **◀** or **▶** buttons once or more until the desired preset station is displayed

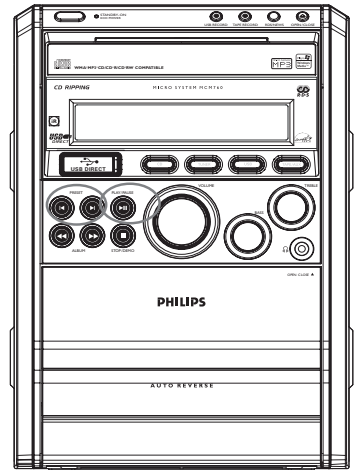


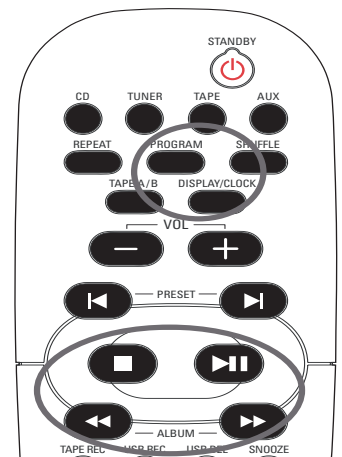
#### Helpful hints:

– If the first preset is a RDS station, it will proceed to clock setting. If RDS station does not transmit RDS time within 90 seconds, “NO RDS TIME” will appear and the program will exit automatically. See **Tuner: RDS** in the **User Manual**.

## Step B *Prepare*

### Setting the clock

- 1 On the remote control, press and hold **DISPLAY/CLOCK** until the clock time starts flashing
- 2 Press **PROGRAM** repeatedly to change between 12-hour and 24-hour clock mode
- 3 Press **◀** or **▶** repeatedly to set the hour
- 4 Press **▶||** to change to minutes setting, then press **◀** or **▶** repeatedly to set the minutes
- 5 Press **DISPLAY/CLOCK** again to store the setting
- 6 To view the clock time,
  - a. During playback, press **DISPLAY/CLOCK** on the remote control
  - b. In **ECO POWER** mode (power-saving mode), press and hold **STANDBY-ON/ ECO POWER**  to switch the set to standby mode



#### Notes for remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (**DISC** or **TUNER**, for example).
- Then select the desired function (**▶||**, **◀**, **▶** for example).


#### Helpful hints:

- To learn how to set the timer, see the chapter **Timer** in the **User Manual**.
- In standby mode, pressing **DISPLAY/CLOCK** button will switch the system to **ECO POWER** mode.

## Playing discs


With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)


- 1 Press **CD** to select **CD** source
- 2 Press **OPEN/CLOSE ▲** to open the CD compartment
- 3 Insert a disc with the printed side facing up. Press **OPEN/CLOSE ▲** again to close the compartment
- 4 Press **▶ ||** to start playback
- 5 To stop playback, press **STOP ■**

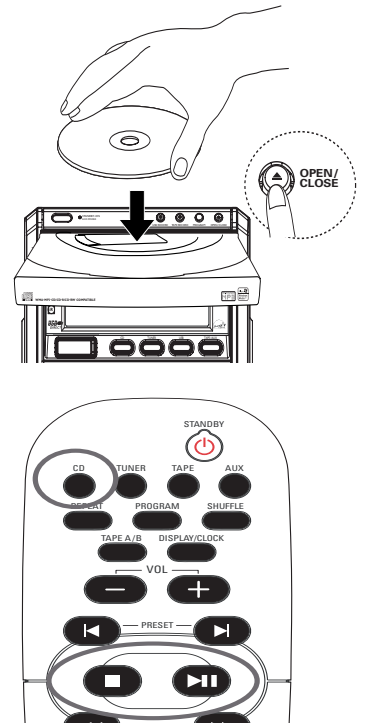

## Playing a USB mass storage device



With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).




- 1 Insert the USB device's USB plug into the socket  on MCM760
- 2 Press **USB** to select **USB** source
- 3 Play the USB's audio files as you do with the albums/tracks on a CD

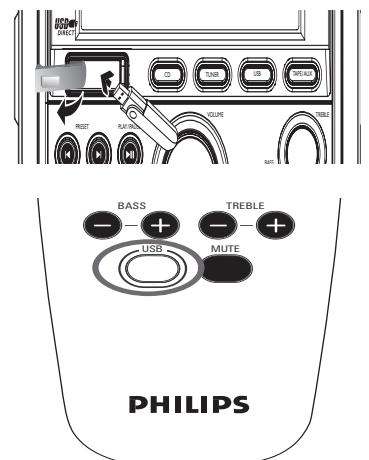

## Recording to a USB mass storage device

 With MCM760, you can record your favorite CD music to a USB mass storage device. Carry your favorite songs wherever you go.

- 1 Insert the USB device's USB plug into the socket  on MCM760
- 2 Press **CD** to select **CD** source
- 3 Insert a disc with the printed side facing up. Press **OPEN/CLOSE**  again to close the compartment
- 4 Press **◀** or **▶** once or repeatedly until the desired track number appears in the display  
or  
Program your desired tracks (see **User Manual, CD: Programming tracks**)  
- Make sure you press **■** after finishing programming
- 5 Press **USB RECORD** once or more to select your recording options:  
*RECORD TRACK* – record the selected track to the USB mass storage device  
*RECORD ALL* – record the whole disc/program to the USB mass storage device  
→ A default folder name, e.g. F001, is assigned
- 6 Press **■** to stop recording

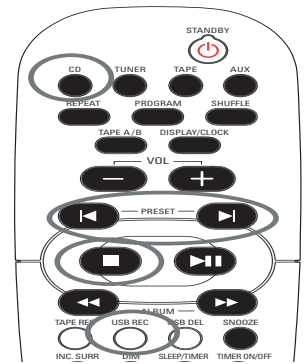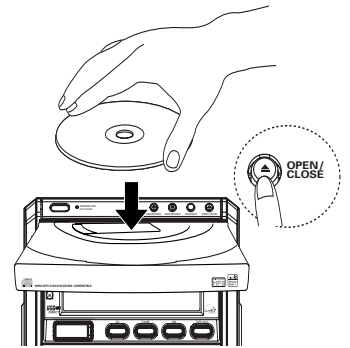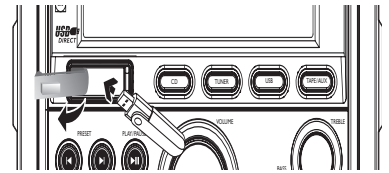

## To find your recorded tracks





You can find and playback the ripped tracks in the album **\_PHILIPS**




- 1 Press **USB** to select **USB** source
- 2 Press **◀◀ / ▶▶** and **◀ / ▶** to select the desired album and tracks  
→ The audio CD files have been converted to MP3 format and named as **FXXX TXXX.MP3** (where "FXXXX" denotes folder name, and "TXXX" track name)  
→ For MP3/WMA files, the track information are retained

### Helpful hints:



- MCM760 only supports the filenames in English.
- Only the completely ripped MP3/WMA file can be found and played by MCM760.

## Playing a tape

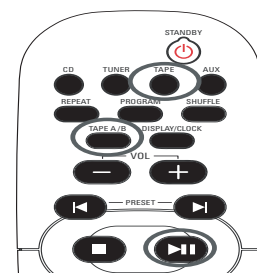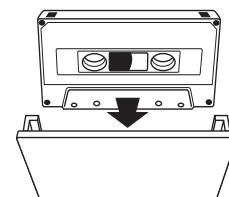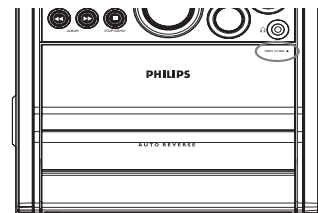- 1 Press **TAPE/AUX** once or more to select **TAPE** (or **TAPE** on the remote control)
- 2 Press **OPEN/CLOSE**  to open the tape deck door
- 3 Insert a recorded tape and close the tape deck door  
→ Load the tape with the open side downward and full spool to the left
- 4 Press **▶||** to start playback
- 5 Press **TAPE A/B** on the remote control repeatedly to select the different playback modes
  -  : plays one side of the tape
  -  : plays both sides once
  -  : plays both sides repeatedly (up to 10 times)



## Recording to a tape

- 1 Press **TAPE/AUX** once or more to select **TAPE** (or **TAPE** on the remote control)
- 2 Load a recordable tape into the tape deck.
- 3 Press **TAPE A/B** on the remote control repeatedly to select a recording mode:
  -  for recording on one side only
  -  for recording on both sides
- 4 Select the recording source: **CD, TUNER, USB** or **AUX**
- 5 Start playback of the selected source
- 6 Press **TAPE RECORD**  
→ **REC** starts flashing
- 7 To stop recording, press **■** on the set

