Always there to help you

Register your product and get support at www.philips.com/welcome



ORD7100



User manual



Register online at www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. **Register online at www.philips.com/welcome** to ensure:

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer.

*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special moneysaving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to register online at:

www.philips.com/welcome

Know these **safety**symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

PHILIPS

Visit our World Wide Web Site at http://www.philips.com/welcome

Contents

1	Safety	2
	Know these safety symbols Important Safety Instructions	2
	important salety instructions	
2	Your docking system	4
	Introduction	4
	What's in the box	4
	Overview of the system	5
3	Connect the FM antenna and	
	power cord	6
4	Power on and select a source	7
5	Set the clock	7
6	Use the dock	8
•	Compatible iPod/iPhone models	8
	Enjoy audio through the dock	8
	Charge your iPod/iPhone	9
	Undock your iPod/iPhone	9
	Orladek your ii oa/ii fiorie	
7	Listen to FM radio	9
	Search for a radio station automatically	9
	Search for a radio station manually	9
	Store radio stations automatically	9
	Store radio stations manually	10
8	Listen to an external device	10
9	Adjust the volume	11
10	Use the remote control	11
	Activate the battery	11
	Control play	11
	Replace the battery	12
11	Troubleshooting	13

12	Product information	14
	Amplifier	14
	FMTuner	14
	Speakers	14
	General information	14
13	Notice	15
	Compliance	15
		15 15
	Compliance	
	Compliance Care of the environment	15

Safety

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 
WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert the plug.

Important Safety Instructions

- Read these instructions.
- (2) Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- (5) Do not use this apparatus near water.
- (6) Clean only with dry cloth.

- (7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- (8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- (9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- (10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (11) Only use attachments/accessories specified by the manufacturer.
- (12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- (15) Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install the battery correctly, + and as marked on the unit.
 - Remove the battery when the unit is not used for a long time.
 - Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/ hazardouswaste/perchlorate.
- (6) Apparatus shall not be exposed to dripping or splashing, keep it away from direct sunlight, naked flames or heat.
- (7) Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- (18) Risk of swallowing coin battery!
 - The device may contain a coin/button type battery, which can potentially be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
 - If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.

- When you change the batteries, always keep all new and used batteries out of reach of children. Make sure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer;

A

Warning

- · Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Risk of overheating! Never install this apparatus in a confined space. Always leave a space of at least four inches around this apparatus for ventilation. Ensure curtains or other objects never cover the ventilation slots on this apparatus.

Information about the use of batteries:



Caution

- Risk of leakage: Only use the specified type of batteries.
 Observe correct polarity. Remove the battery from products that are not in use for a longer period of time.
 Store batteries in a dry place.
- Risk of injury: Wear gloves when handling leaking batteries. Keep batteries out of reach of children and pets.
- Risk of explosion: Do not short circuit batteries. Do not expose batteries to excessive heat such as sunshine, fire or the like. Do not throw batteries into the fire. Do not damage or disassemble batteries. Do not recharge non-rechargeable batteries.
- Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.



Note

• The type plate is located on the back of the product.

2 Your docking system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

 
Introduction

With this system, you can:

- enjoy audio from an iPod/iPhone or external device,
- charge your iPod/iPhone, and
- listen to FM radio stations

What's in the box

Check and identify the contents of the package:


















- 1 Docking speaker
- (2) Remote control
- (3) User manual
- (4) AC power cord
- (5) MP3 link cable
- (6) FM antenna

Overview of the system

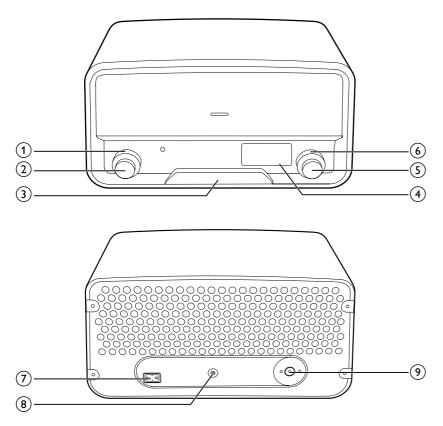

1 SOURCE

- Turn to select a source.
- Turn to switch the system from standby mode to normal mode.

2 POWER VOLUME

- Press to switch the system between standby mode and normal mode.
- Turn to adjust the volume.
- (3) Dock for iPod/iPhone
- (4) LCD screen
- (5) SELECT
 - In radio mode, turn to search for a radio station manually.

- In radio mode, press and hold to activate the automatic search for and storage of radio stations.
- For a compatible iPod/iPhone, press to pause or resume music play.
- For a compatible iPod/iPhone, press and hold to switch it to sleep mode, or press to wake it up.

6 PRESET


• Turn to select a preset radio station.

7 AC MAIN~

• Connect to the AC power cord.


- (8) MP3-LINK
 - Connect to an external player by an MP3 link cable.
- (9) Socket for FM antenna
 - Connect to an FM antenna.

3 Connect the FM antenna and power cord

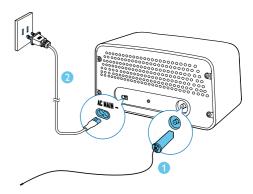

- 1 Connect the FM antenna to the product.
- 2 Connect the AC power cord to the AC MAIN~ socket and then to the wall outlet.

4 Power on and select a source

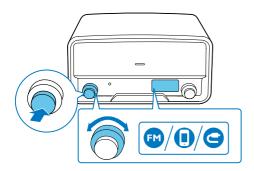

To power on the product,

- press the value knob,
- turn the **SOURCE** knob on the product, or
- press O on the remote control.
 - → The product switches to the last selected source.
 - To switch the product to standby mode, press the value knob or \bullet again.

To select a source.

- turn the **SOURCE** knob on the product, or
- press the SRC button on the remote control repeatedly.
 - FM radio: is highlighted, and the frequency of the current FM radio station is displayed.
 - iPod/iPhone: ① is highlighted, and ... Pad ... PHONE scrolls.

5 Set the clock

- 1 In standby mode, press and hold the knob for two seconds.
 - → **24H** is displayed with **24** blinking.
- $2 \quad \text{Turn the} \xrightarrow{\text{SRLET}} \text{knob to select a time format,} \\ \text{and then press the} \xrightarrow{\text{SRLET}} \text{knob to confirm.}$
 - 24H : 24-hour time format
 - 12H: 12-hour time format
 - → The hour digits blink.
- Turn the knob to set the hour, and then press the knob to confirm.
 - → The minute digits blink.
- 4 Turn the *** knob to set the minute, and then press the *** knob to confirm.
 - → The set time is displayed.



Гір

 Once your iPod/iPhone is connected and recognized, the clock on the product is synchronized with the iPod/ iPhone

6 Use the dock

You can enjoy audio from a compatible iPod/ iPhone through this product.

An application **Philips HomeStudio** is available on Apple App Store for this product. To enjoy full features, download and install the application to your iPod/iPhone.



Note

- During play, no audio signals are transferred through the headphone socket of your iPod/iPhone.
- Once your iPod/iPhone is connected and recognized, the product synchronizes its clock with the iPod/iPhone automatically.

Compatible iPod/iPhone models

 
This product supports the following iPod and iPhone models.

Made for

- iPod touch (2nd, 3rd, and 4th generation)
- iPod classic
- iPod nano (2nd, 3rd, 4th, 5th, and 6th generation)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G

Enjoy audio through the dock


- 1 Switch the source to P a d = P H D H E.
- 2 Push the dock tray to eject it.



3 Connect your iPod/iPhone to the dock.



4 Play a track on your iPod/iPhone.

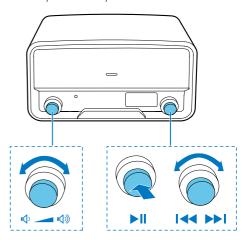

- To start, pause. or resume play, press the ** knob.
- To skip to a track, turn the ♣ knob.
- To switch the iPod/iPhone to sleep mode or wake it up, press and hold the
 knob.

Charge your iPod/iPhone

Once the iPod/iPhone is docked and recognized, the charging starts.

Undock your iPod/iPhone



Note

- Risk of damage to the dock or your iPod/iPhone: Do not twist or shake your iPod/iPhone.
- Disconnect the iPod/iPhone from the dock.
 Push the dock tray inwards until you hear a "click" to store it.

7 Listen to FM radio



Note

- For optimal reception, fully extend the antenna and adjust its position, or connect an outdoor antenna.
- This system does not support MW (medium wave) radio reception.
- You can store up to 20 stations for each band.

Search for a radio station automatically

Turn the *** knob clockwise or anti-clockwise, and then press the *** knob in two seconds.

- → 5 [H is displayed, and then the radio frequency changes until a strong station is detected.
- To stop the search, press the ^{SELET} knob again.

Search for a radio station manually

Turn the knob until the frequency of target radio station is displayed.

Store radio stations automatically

Press and hold the $\stackrel{\text{SELET}}{\longleftrightarrow}$ knob until HUL is displayed.


- → After the search is complete, the first stored radio station is broadcast.
- To tune to a stored radio station, turn the PRESET knob until its sequence number is displayed.

Store radio stations manually

- **1** Tune to the target radio station.
- After two seconds, press the select knob.
 - → PXX is displayed with XX blinking (XX indicates the sequence number).
- 3 Turn the **PRESET** knob to select a sequence number.
- 4 Press the *** knob to confirm.
- 5 Repeat steps 1-4 to store more radio stations.
 - To overwrite a preset radio station, store another station with its sequence number.
- To tune to a stored radio station, turn the PRESET knob until its sequence number is displayed.

8 Listen to an external device

You can also listen to an external audio device, for example, MP3 player, through this product.

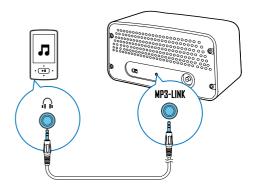

- 1 Switch the source to HUH.
- 2 Connect the MP3 link cable between
 - the MP3-LINK socket on the back panel of this product, and
 - the headphone jack on the external device.
- Play audio on the external device (refer to its user manual).

9 Adjust the volume

Turn the VOLUME knob.

10 Use the remote control

During use, you can use the remote control to control play.

Activate the battery

For the first time use, pull the protective tab out from the battery compartment.

Control play

During play, follow the instructions below to control play.

FM mode

Buttons	Functions
	To tune to a specific radio station, press repeatedly until its frequency is displayed.
 ◀◀ / ▶▶	To tune to the previous or next strong radio station, press and hold to start scanning.
PRESET +/-	To tune to a preset radio station, press repeatedly until its sequence number and frequency are displayed.
PROG	 To program radio stations, Tune to the radio station that your want to store. Press PROG to activate the programming. Press PRESET +/- to select a sequence number. Press PROG to confirm. Repeat the steps 1-4 to program more radio stations.
DISP	To display the clock or current frequency, press it.


DOCK mode

Buttons	Functions
▶11 OK	To start, pause, or resume play, press it.
►11 OK	To switch the iPod/iPhone to sleep mode or wake it up, press and hold it.
	To skip to a track, press repeatedly.
	To rewind a track or search forward fast, press and hold.
MENU	To select a track from the library, 1 Press MENU to access the iPod/Music (iPod/Music) menu of your iPod/iPhone.
	 2 Press MENU repeatedly to toggle through the categories. 3 Press I ◄ ✓ / ▶►I to toggle through sub-categories or select a track. 4 Press IX to enter lower-level menu or start the selected track.

Volume

Buttons	Functions
VOL+/	To increase or decrease the volume,
VOL-	press repeatedly.
MUTE To mute the product or release it	
	from mute status, press the button.

Replace the battery

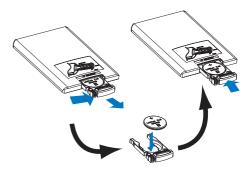

- Pull out the battery tray and then remove the flat battery.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Insert the battery tray.

11 Troubleshooting



Warning

· Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this product, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the product is nearby and the model number and serial number are available.

Problem	Solution
No power	Make sure that the AC power cord is connected properly.
'	Make sure that there is power at the AC power outlet.
	If a connected iPod/iPhone stays inactive for 15 minutes when it
	is selected as the source, the system switches to standby mode
	automatically.
No sound or poor sound	Adjust the volume.
	Press MUTE to release the speakers from mute status.
No response from the	Reconnect the AC power cord, and then turn on the product again.
product	If a connected iPod/iPhone stays inactive for 15 minutes when it
	is selected as the source, the system switches to standby mode
	automatically.
Remote control does not work	Before you press any function button, select the correct source with the
	remote control instead of the system.
	Reduce the distance between the remote control and the system.
	Insert the battery with its polarity (+/– signs) aligned as indicated.
	Replace the battery.
	Aim the remote control at the iR sensor on the front panel of the
	system.
Poor radio reception	Increase the distance between the product and other electrical
	appliances.
	Fully extend the antenna.
	Connect an outdoor FM antenna instead.
Clock is erased	Power has been interrupted or the AC power cord has been
	disconnected.
	Reset the clock.

12 Product information

Note

• Product information is subject to change without prior notice.

Amplifier	
Frequency Response	60 Hz - 16 kHz, ±3 dB
Signal to Noise Ratio	> 70 dBA
Aux Input	0.5 V RMS 10 kOhm

FM Tuner	
Tuning Range	87.50 - 108.00 MHz
Tuning grid	100 kHz
Total Harmonic	< 2%
Distortion	
Signal to Noise Ratio	> 50 dBA
Number of preset radio	20
stations	

Speakers	
Speaker Impedance	6 Ohm
Speaker Driver	2 X 3" full range
Sensitivity	> 82 dB/m/W

General information		
AC Power Rating	100-240 V~,	
	50/60 Hz	
Operation Power	15 W	
Consumption		
Dimensions		
(Main Unit)	$325 \times 175 \times 167 \text{ mm}$	
Weight (Main Unit)	3.5 kg	

13 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Compliance

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Care of the environment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot had disposed of with perpend household waste.

Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by

a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Copyright

2012 © Koninklijke Philips Electronics N.V. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at: 1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking) 1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 10313 Stamford, CT 06904

3140 035 50201



Specifications are subject to change without notice © 2012 Koninklijke Philips Electronics N.V. All rights reserved.

