 
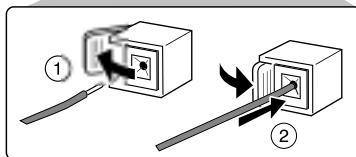 
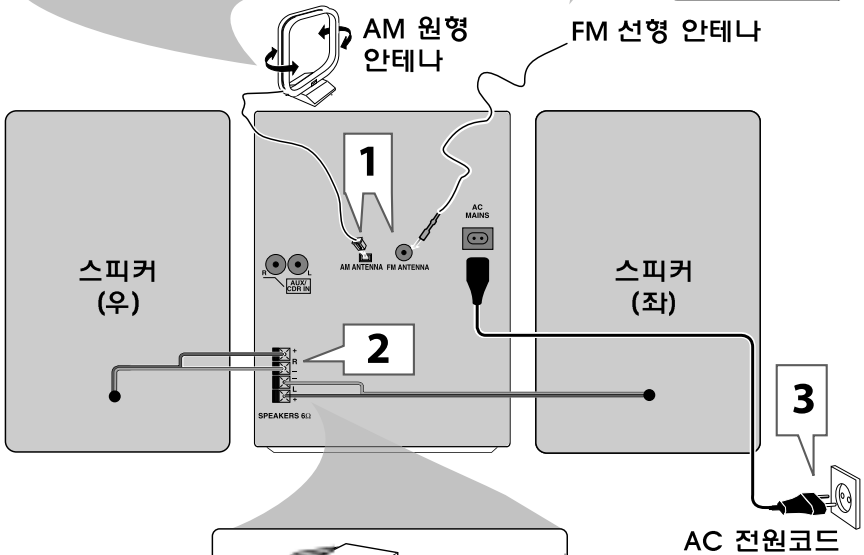 
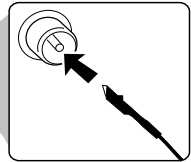 


Quick Use Guide

PHILIPS

MCM9 MCM11

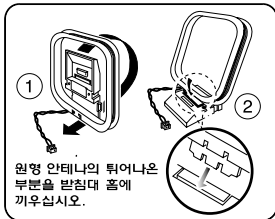

◇ 라디오 방송국 청취하기

처음 전원이 켜지면

1 "AUTO INSTALL PRESS PLAY"가

2 BK

3

• << >> /
• <<< >>> (G F)
가)

◇ CD/MP3-CD 청취하기

1 CD/MP3/WMA CD

2 <<< >>>

(<< >>)

3 BK

• / <<< >>> .(G F)

4 L

◇ 시간설정

1 CLOCK

2 PROGRAM 12- 24-

3 << >> " " " "

(G F)
• BK (00:00) (00:00)

4 CLOCK

데모모드를 해제하려면

1 " DEMO OFF "(DEMO

STOP L



자세한 재생기능 및 추가 기능들은 사용자 설명서에
기술되어 있습니다.