

CD cont.

SHERWOOD	0769 0570
SHURE	0471 0272 0587
SHURE	0670
SONY	0372 0880 0081 0680
SIS	0491
SYMPHONIC	0572
SYLVANIA	0268
SYMPHONIC	0572
TEAC	0269 0570 0571
TECHNICS	0572 0672 0772 0287
TECHNICS	0273 0974 0683 0887
THETA DIGITAL	0774
TOSHIBA	0773
VICTOR	0869
YAMAHA	0972 0704 0286
ZENITH	0269 0674
ZENITH	0577 0080 0686

AUDIO

AIWA	0585 0885 0786 0687	CABLE	
APEX	0245	ABC	0747 0947 0048 0148 0248
APPLE IPOD	0190	ADELPHIA	0852 0752
BOSE	0868 0079 0179	ALLEGRO	0054 0154
CARVER	0184	AMERICAST	0354
CENTRIOS	1107 0087	ANTHONY	0454
CITIZEN	0284	ARCHER	0448 0548 0648 0748
CRITERION	0446	ARLT	0752
DENON	0981 0383 0886	BELL SOUTH	0354
DELPHI	0472	CABLEVISION	0154
FISHER	0083 0783	CABLEVIEW	0446
GOLDSTAR	0278	CABLEVISION	0252
HARMAN KARDON	0082 0483	CITIZEN	0748
IPOD	0090	CITIZEN	0748
JVC	0680 0982 0583	COGECO	0752
KENWOOD	0969 0482 0283	COLOR VIBE	0848 0948
KOSS	0143	COMCAST	0752
MAGNAVOX	0281 0083 0193 0277	COMTEC	0249
MARANITZ	0470 0804	DIGITAL MUSIC EXPRESS	0053
MITSUBISHI	0389	EASTERN	0349
NEO	0773 0575 0174	EQUEST	0049
NAD	0174	GARRARD	0748
NEXXTECH	1107 0679 0879 0480	GE ELECTRONICS	0548
NORCENT	0494	GEMINI	0255 0549
ONKYO	0182 0782 0882 0199	GE	0556
OPTIMUS	0368 0376 0476 0576	GENERAL INSTRUMENT (GI)	0556
OPTIMUS	0776 0876 0777 0980	0747 0148 0752 0952 0453	
PARANSONIC	0780 0682 0183 0983	0654 0754 0053 0048 0947	
PARANSONIC	0987 0088 0099 0696	HAMILIN	0747 0649 0749 0849
PHILIPS	0177 0083 0983	HITACHI	0054
PHILIPS	0084 0184 0277 0377	ILICO	0252
PIONEER	0385 0288	JASCO	0748
RADIO SHACK	0388 0489 0299	JEROLD	0552 0747 0148 0483
RADIO SHACK	0272 0770 0270	MAGNAVOX	0947 0048 0654 0154
REAR	0382 0188 0288 0388	MEMOREX	0250
REAR	0485 0470 0088 0188	MOTOROLA	0552 0148 0952 0453
RCMA	0373 0274 0779 0181	0747 0148 0048 0752 0272 0272	
0384 0186 0288 0388 0688 0683		MOVIE TIME	0752
0888 0189 0489 0589 0546 0793		MOVIE TIME	1106
REALISTIC	0883	NAC	0354
RIO	0142 0380	NASC	0850
SABA	0593	OAK	0249 0550 0550 0550 0550