# Quick Start Guide



Step A Connect


Step B Setup

Step C Enjoy

#### What's in the Box?

You should find these items upon opening the box.



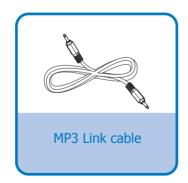








# Step A Connect

- Connect the speaker cables.
- Connect the AC power cord to the wall socket.

Tip
See the User Manual for how to
connect other equipment to this
system.

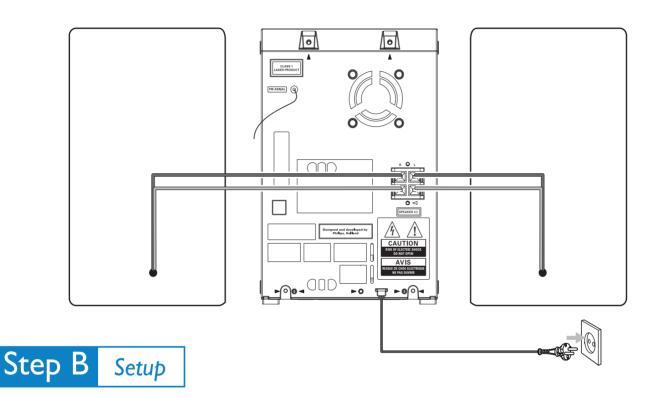

#### Set clock

#### Important!

 In Eco Power Standby mode, press CLOCK to show clock first, then press and hold CLOCK to proceed clock setting.

- In standby mode, press and hold CLOCK on the main unit.
- Press on the main unit to select 12 hour or 24 hour format.
- 3
- Turn VOLUME +/- to set the hour.
- Press CLOCK to confirm.


  The minute digits are displayed and begin to blink.
- Turn **VOLUME** +/- to set the minute.
- Press CLOCK to confirm.





# Play disc


- Press CD to select the disc source.
- Press **\( \)** to open the disc tray.
- Insert a disc with the printed side facing up, then close the disc tray.
- To pause/resume play, press II.
- To stop play, press .

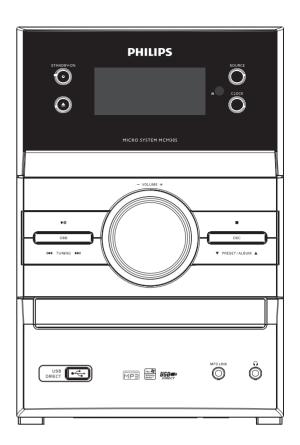

## Play form USB

With the micro system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this micro system).

- Insert the USB device's USB plug into the socket 🚓 on the main unit.
- Press **USB** repeatedly to select the USB device source.
- Play the USB's audio files as you do with the albums/tracks on a CD.

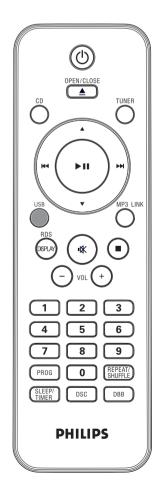



## Program and tune to radio stations

Press TUNER repeatedly to select FM or MW.

Press **PROG** for more than two seconds to program all available stations in order of wave-band

Press ▲▼ to select a preset number.

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.





