

CLASS 1

LASER PRODUCT

Be responsible

说明书会随时修改,恕不另行通知。商标归荷兰皇家飞利浦电子股份有限公司

及其相应所有者所有

2006 © 荷兰皇家飞利浦电子股份有限公司。版权所有

飞利浦(中国)投资有限公司

上海天目西路 218 号办公楼 22 楼

邮编 200070

企业标准令代号:Q/320412 GBKC143-2005

顾客服务热线: 4008 800 008 http://www.philips.com

中国印刷

Respect copyrights

PHILIPS



本装置使用提供的交流天适配器、汽车适配器或可充电电池组。 • 确定交流电适配器的输入电压与当地电压相符。否则,可能损坏交 流电适配器和本装置。 • 湿手切勿触摸交流电话配器以防电击。

功能概述

..屏幕显示开/关

☆ 使用 ◀ ▶ (左、右) 键调节亮度

⇔ 使用 ◀ ▶ (左、右) 键调节颜色

□ 使用 ◀ ▶ (左、右) 键调节屏幕为

..显示菜单页

16:9 或 4:3

.确认选择键

开始 / 再继续播放

.按两次停止播放

➡ (**上一 / 下一**)......上一 (➡) 或下一 (➡) 章、轨道或标题

⑧ ▲ OPEN (打开).............打开光盘门来插入或者移除光盘

(音频 / 视频输入 / 输出) - 音频 / 视频或超级视频输出

⑤ ▲, ▼, ◀, ▶ (**上、下、左、右**)上/下/左/右箭头

⑥ VOLUME +/- (音量)....音量控制

.视频格式选项

- 音频 / 视频输入 (AUX)

主要单元控制键(见图 1)

① OSD (屏幕显示).......

② MENU (菜单)...

(3) MONITOR

(监视器)

(4) AV IN/OUT

OK (确认)..

▶ (播放)

■ (停止)

• 与汽车电源(点烟器)适配器连接时,确定适配器输入电压与汽车 电源电压一致 • 长时间不使用本装置时从电源插口拔出交流电适配器或移除电池。 • 握住插头来断开交流电适配器。切勿拉电源卡。

• 激光射线对眼睛有害,切勿拆开本装置。 如果液体或杂物进入本装置内部,拔掉交流电适配器切断电源。

小心勿摔著本装置或使其遭受强烈震动,这样会导致故障。切勿暴露在过热场所,如加热设备附近或遭受阳光直接照射 • 本装置不防水:切勿将您的播放器浸入水中。播放器中进水会造成 严重损害 • 切勿使用任何含有酒精、氨水、苯或研磨剂的清洁剂,这些可能损

害播放器 • 设备不能受到液体滴洒。切勿放置任何可能导致危险的物体于设备 上(如盛满液体的物体、点燃的蜡烛)。 切勿触摸镜头!

注意:长时间使用播放器,其表面会发热,这是正常现象。

准备

切勿在光盘上粘贴纸条或胶带。

光盘避免直接阳光照射或远离热源 播放后存放光盘于光盘盒(套)中 使用柔软、不含麻的乾净布从里向外清洁

...电源,充电显示灯和远程感应器

关于液晶屏幕的使用

露或其他不安全操作

播放器正面(见图 1)

9 POWER/CHG.IR.

播放器左侧(见图 1)

播放器右侧(见图 🔟)

⑭ COAXIL(同轴插孔)

10 ON . POWER . OFF (开、电源、关)........开关播放器

② AV OUT (音频 / 视频输出)...音频 / 视频输出插孔

(13) AV IN (音频 / 视频输入).......音频 / 视频输入插孔

個 DC IN 9V (直流输入9V)......电源插座

.耳机插孔

(电源/充电)

(11) PHONE 1 & 2...

液晶屏幕为高精科技产品。然而您可能会看见黑点连续地出现在液 晶屏幕上。这是制造过程的正常结果,并不表明这是故障。

不同于这里的控制键或调整程序可能会导致危险的辐射暴

我们已经最大限度地减少包装材料并使其能易于分成单一材料:纸 板、PS(聚苯乙烯)、PE(聚乙烯)和 PET(聚酯)。 您的装置由可回收材料(如果由专业公司分解)组成如果由专业公 司分解。请遵守当地法规来处理包装材料、废旧电池和旧设备。

打开屏幕显示设置

置打开播放器

按OK(确认)键。

装载光盘和打开开关

3 轻轻关上门。

MUTE (静音)

REPEAT (重复)

0 000 N

"DivX, DivX" 经过认证,相关标志为 DivXNetworks, Inc. (DivX) 网 络有限公司商标,未经许可不得使用 所有其他品牌和产品名称为其相应公司或组织的商标。 未经授权对任何从互联网下载记录或对CD / VCD / DVD的复制是违 反版权法规和国际条约的行为。

Windows Media 和 Windows 标识是 Microsoft 公司在美国和 / 或其他国家的商标或注册商标。

任何没有获得许可而对有版权保护的内容(包括电脑程序、文件 广播和录音等)进行的抄录行为可属版权侵犯,并构成刑事责任。 本设备不应当被用于以上行为。

基本功能

英语是您的播放器屏幕显示默认语言。您或许会选择使用英语、法

语、西班牙语、德语、简体中文或者繁体中文作为您的屏幕显示语

屏幕显示语言选项

英语、法语、德语

滑动 POWER(电源)到 ON (开)位

选择 GENERAL SETUP(一般设置)并

2 按 SET UP(设置)键可进入设置菜单。

4 滚动选择 OSD LANG(屏幕显示语言) 并报 ▶(播放)键从 OSD 语言选项中选

5 选择您首选的语言然后按 OK (确认) 键。

此)。确定光盘在正确的凹座 适当地放置。

1 按 OPEN (打开) 键打开光盘门。

播放过程中会有正常的机械噪音。

按 MUTE (静音)键一次使播放器静音。

重复按 REPEAT (重复)键可得如下重复选项:

VCD 操作

重复音轨

取消重复

再按 MUTE (静音)键一次取消静音。

DVD 操作

全部重复取消重复

➡ AB 出现在屏幕上,重复序列开始。

REPEAT (重复) A > B

英语、法语、西班牙语

英语、繁体中文、简体中文

2 标签一面向上插入您选择的光盘(双面 DVD 光盘插入时也如

4 滑动 POWER (电源) 开关到 ON (开) 位置打开播放器。

OK(确认) .确认选择

遥控键(见图 2) ① ▲, ▼, ◄, ▶ (上、下、左、右)......上 / 下 / 左 / 右箭头

② VOL+/-(音量增大/减小) ..音量控制 ③ H4 / ► (上- / 下-) 上一 (◄) 或下一 (▶) 章、轨道 Ⅲ(暂停 暂停播放

● (播放) 开始 / 恢复播放 按两次停止播放 ■.(停止) ← / ▶ (向后 / 向前) 向后搜索 (◄) 或向前搜索 (▶▶) ④ OSD (屏幕显示 .屏幕显示开/关

▶ (慢动作) .慢动作 ⑤ AUDIO (音频 .音频语言选择 放大视频图像

.重复或循环标题中的一个次序 PLAY-MODE (播放-模式)... 选择播放顺序选项 .数字键盘 (7)0-9.播放器静音 ® MUTE (静音)

REPEAT(重复 .重复章 / 标题 / 光盘 适用于 VCD 菜单页 ANGLE(角度) ..选择 DVD 镜头角度

..字幕语言选择 ⑩ SUBTITLE (字幕 .语言选择 LANGUAGE(语言 显示 MENU(菜单)页面 ⑪ MENU(菜单

.进入 SETUP(设置) 菜单

③ Infra Red port(红外端口)

使用交流 / 直流适配器

适配器连接本设备和主电源

(如图所示)。

使用汽车适配器

电源电压一致。

池爆炸

播放DVD光盘

播放音频或视频CD光盘

按▶键开始播放。

www.divx.com/vod

• 注册代码会出现。

Play modes(播放模式)

Volume control(音量控制)

• 使用本设备右侧的旋转开关。

减小音量,或者

忽视的东西。

没有声音

₩ 提示

给您的遥控器提供能量

⑭ BATTERY COMPARTMENT (电池盒)

避免损坏播放器,在插入或拔出交流电适配器前先关播放器。

• 避免损坏播放器, 在插入或拔出汽车适配器前先关播放器。

- 电池的不当使用会导致电解液泄漏并腐蚀电池盒或者导致电

开机之后,插入光盘关闭光盘门,播放自动开始。屏幕显示加载的光盘的类型。光盘可能会要求您从菜单选择一个条目。使用 ▲, ▼, ◀, ▶

注意:因为 DVD 电影在世界的不同地方不同时间发布是很正常的,

所有的播放器都有地区代码以及光盘可有一个可选的地区代码。如

果您加载一个与您得播放器地区代码不同的光盘,您在屏幕上会看 见地区代码提示。光盘不会播放,必须取消加载。

开机以后,插入光盘,屏幕显示加载的光盘类型和光盘内容信息。

当播放带有 MTV/Karaoke(卡拉 OK)的 VCD 时,按数字键(0-9)

选择轨道,按 ▶ (播放)键或 OK (确认)键播放该轨道。按 RETURN (返回)键回到选择菜单。

• 飞利浦提供允许您使用 DivX® VOD服务购买或租赁视频的 DivX®

• 在 www.divx.com/vod上使用注册代码从 DivX® VOD 服务购买或者

租赁视频。遵从说明,下载视频到只读光盘,用于在这个播放器上

一般特徵

所有从 DivX® VOD 下载的视频只能在这 DVD 播放器上播放

重复按 PLAY-MODE (播放-模式)键可得如下播放次序选项:

VOD(Video on Demand) 注册代码。更多信息请访问

• 在 SETUP(设置)菜单选择DivX® VOD。

(上、下、左、右)键突出显示您的选择,并按 OK (确认)键。

提供的汽车适配器连接本设备和汽车点烟器外接口。

1 打开电池盒。移除保护塑料片(仅第一次使用时)。

2 插入 1 枚 3V 锂电池,型号 CR2025,然后

- 电池包含化学物质,请妥善处置。

- 长时间不使用时请取出电池

装配和更换电池组*

(000000)

1 关闭本设备。如图所示装配电池组 2 连接电源适配器到主电源盒本设置(如图 所示)。充电直到红色指示灯熄灭(关机

• 播放器应放置在稳固、平坦的表面

一直保持光盘门关闭避免灰尘进入。

• 远离家用加热设备及避免直接阳光照射

您的便携式 DVD 播放器

(也取决于光盘),都包括在内。

便携式DVD播放器汽车适配器 (12V)

• 可充电电池组 • 保修单

,遥控器 • 交流电适配器

音频 / 视频电缆

您的便携式 DVD 播放器播放符合通用 DVD 视频标准的数字视频光

如果播放器不能正确读 CD/DVD, 在送去维修之前尝试使用一般可用到的清洁 CD/DVD 清洁镜头。其他清洁方法可能会损坏镜头。

• 镜头在播放器突然由冷的环境带到温暖环境的时候会凝结云状水 珠。在这种情况下,不能播放 CD/DVD。将播放器放置在温暖环境

盘。拥有它,您可以享受完全长度的真实影院画面质量、立体声或

多声道(取决于光盘和您的播放设置)的电影。

首先检查和识别您的包裹的目录,如下所列

后开始充电大约 4.5-6.5 小时)。 提示

• 充电过程中电池组变热是正常的。

• 使用电池电源时 💶 显示在屏幕上。 卸下电池组

1 关掉本设置。 • 与汽车电源(点烟器)适配器连接时,确定适配器输入电压与汽车 2 拔掉交流电适配器。

3 倒转播放器

4 按下电池组锁开关。(如图所示❶

5 如图所示 ② ③滑出电池组。

播放 WMA/ MP3 光盘

夹。按 OK (确认)键播放。

 
播放 JPEG 光盘

您不能播放有复制保护的 WMA 文件。

• 使用 ◀,▶ (左、右)键旋转图像。 使用▲ (上) 键上下翻转图像。

• 使用 ▼ (下) 键左右翻转图像。

•按■ (停止)键进行批量预览。



基本功能

下面的特徵可用于 WMA/MP3 光盘。更多信息请参见相应部分。

使用 ▲, ▼, ◀, ▶ (上、下、左、右)键突出显示您选择的音乐文件

使用 ▲, ▼, ◀,▶ (上、下、左、右)键突出显示您选择的图片文件

 
夹。按 OK (确认)键。然后播放器会自动进入幻灯片显示模式。

使用整个显示器屏幕一张张地显示位于所选当前文件夹 的其他

• 放映幻灯片时,按 MENU(菜单)键返回到文件夹屏幕。

注意:除非另作说明,所有描述的操作都基于遥控器操作。

音量控制、轨道跳转、搜索、重复、随机、等等。




连接您的耳机到您的设备的 PHONE 1 插孔

• 您可以连接播放器到电视机或扩音器来享受 DVD 或卡拉 OK。





(视频) (音频 · 左) (音频,右)

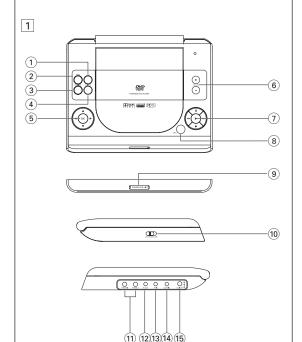

Digital Audio Out(数字音频输出)

₩ 提示 • 您也可以利用同轴插孔进行数字音频输

• 关于连接的更多信息请参阅您的附加设备

•播放器支持 NTSC/PAL/AUTO 电视机。 一般说明

关于本手册

WK6291

本手册提供了操作本 DVD 播放器的基本说明。但是一些 DVD 光盘 播放时需以特殊方式操作或只允许有限的操作。在这些情况下,播 放器可能不会响应所有的操作命令。这类情况发生时,请参照光盘 说明。当屏幕上出现 ○ 图标时,播放器或光盘不允许该操作。

• 除非另作说明,所有的操作均可通过遥控器进行。遥控器总是直接 对著播放器,确定红外线光路上没有障碍物。

• 主要设备上有相应键时,也可以使用这些键。

• 您的播放器有一个直觉菜单导航系统引导您的各种设置和操作。

,按 OK (确认)键确认您的选择。

• 使用 ▲, ▼, ◀, ▶ (上、下、左、右) 键浏览菜单。

• 使用功能键激活 / 取消相关操作。

慢动作 按 ▶ (慢动作)键一次或更多次可得如下慢放选项 x 1 1/2 x 5* 1/2 x 向后

一般特徵

改变音频输出

重复按 AUDIO (音频)键可得如下音频选项。

左声道 x 2 右声道 混合声道 立体声

图像缩放功能允许您缩放视频图像以及放大图像恢复到全景。重复 按 ZOOM(缩放)键来选择如下选项。 Zooming options (缩放选项)

Zoom x 2 3X Zoom x 1 2X Zoom x 3 4X Zoom x 4 1/2 Zoom x 6 1/4 Zoom x 5 1/3

 
Zoom x 7 正常

x 2 1/4 x 6* 1/4 x 向后 x 3 1/8 x 7* 1/8 x 向后 x 4 1/16 x 8* 1/16 x 向后

按 OK (确认)键或 ▶ (播放)键恢复正常播放。

*仅限于 DVD

AUDIO



• 退出该序列按 A > B 键。

及显示模式(正常或全屏)。

Monitor (监视器)(在主设备上)



使用 (0-9) 和 OK (确认)键输入具体设置。

按遥控器上的 +/- (增大 / 减小)键增大或

重复按 MONITOR (监视器)键并使用 ◀ (左) 和 ▶ (右) 键调节亮度、颜色以



特别的 DVD 特徵

查看 DVD 视频光盘内容: Menus (菜单)。 光盘上可能包括标题或章的选择菜单。DVD 菜单特徵允许您从这些 菜单中选择。按相应的数字键;或使用 ▲, ▼, ◀, ▶ (上、下、左、右) 键突出显示您的选择并按 OK (确认)键。

按 MENU(菜单)键。菜单会列出,例如 镜头角度、对白语言和字幕选项,以及标题的章节



重复按 ANGLE (角度) 键直到得到您想要的观 重复按 ANGLE(角度)键直到没有与角度相关 的信息显示在屏幕上时,恢复到正常观看角度。

改变语言

无法播放光盘

播放器不响应遥控器

按 LANGUAGE (语言) 键。如果当前光盘有 不同语言选项,就会显示在屏幕上。 重复按 LANGUAGE (语言) 键直到得到您期

按 SUBTITLES (字幕)键。如果当前光盘有不 同字幕选项,就会显示在屏幕上。 重复按 SUBTITLES (字幕) 键直到获得您期望



当光盘有不只一个标题或轨道时,您可转换到 另一个标题/轨道/章如下 •播放时短按 ➡(下一)键来选择下一题目 /

重复按 ◄ (向后) 键可得如下向后搜索选项 2 X 回放 4 X 回放 8 X 回放 8 X 前进

正常速度

除了使用遥控器的键,您也可以使用屏幕显示改变光盘播放选项。

文件时间 键入文件播放时间开始点 标题时间 键入标题播放时间开始点

时间显示 选择时间显示选项 3 使用(0-9)键入特殊的设置。

4 按 ◀ (左)键中止当前的设置或回到前一个菜单。 5 按 OSD (屏幕显示) 键退出。

LANGUAGE

ANGLE

8.7 x 6.9 x 1.3 英寸 0.94 kg / 2 lb DC 9V 1.8A

视频输出 输出水平: 1Vp - p ± 20% 负载阻抗 75Ω

可播放光盘格式 除了 DVD 视频光盘,您也可以播放所有的 VCD 和音频 CD (包括 CDR, CDRW, DVD \pm R 和 DVR \pm RW)。

DivX 是由 DivX 公司开发的受欢迎媒体技术。DivX 媒体 文件含有高度压缩、高画质的视频,但保持了较小的文件

时亮点的允许量为零。选择带有 Philips Zero Bright Do (飞利浦零亮点)保单的便携式 DVD 播放器能保证理想的屏幕质量。 保修服务因地区而异。如需更多详细信息,请联系您当地的飞利浦代表。

连接附加装备

• 在连接任何附加装备前先关掉您的设备。

AV OUT(音频视频输出) 在 DVD 播放器面板上按 AV IN/OUT



播放时短按 ◄◄ (上一) 键会退到上一题目 / 轨道 / 章。

按 ■ (暂停) 键一次或更多次可得如下静止图像或步进帧选项

屏幕显示 Ⅲ▶ 出现 Ⅲ (慢动作)图标后,重复按 Ⅱ (暂停)键来一帧一帧播放。

按 OK (确认)键恢复正常重放。

重复按 ▶ (向前)键可得如下向前搜索选项

• 使用 ▲, ▼, ◀,▶ (上、下、左、右)键突出显示预览图像并获取屏

正常速度

按 OK (确认) 或 ▶ (播放) 键恢复正常播放。

屏幕显示操作

接边时拉 OCD (尼草日二) 牌,日二件佛刊丰

键入章节播放时间开始点 章节时间 重复播放 选择重复选项

处理废旧产品

请了解当地有关电气和电子产品收集的专属制度。 请遵守当地的规定,不要将废旧产品与一般家庭废品一起 处理。 正确处理您的废旧产品,利于防止对环境和人类健康产生

品受第 2002/96/EC 号《欧洲规章》的保护。

2

量之前,先调校至一个安全的水平,并维持该音量。 设置安全的音量: 先将音量设置在一个低水平。

• 长时间暴露在声音环境下,即使是正常「安全」的音量,也会损害 ,请务必适度使用您的设备,并适时暂停休息。 使用耳机时务必遵守以下规范。

身处有潜在危险的场所时,请小心或暂停使用耳机。

成交通意外,而且这在许多国家都属违法行为。

您的产品是由可以再生利用的优质材料和组件设计、制造而成的。 如果某一件产品上贴有交叉轮状回收箱标志,则表示该产品严重。2007年1月

听觉安全 聆听时音量要适中。 • 耳机音量高会损害你的听力。即使暴露在此音量下的时间不 超过一分钟,所产生的声音分贝强度可能会损害正常人的听

觉。较高的分贝范围是提供给听力已有所受损的人士。 并且会损害您的听力。为了预防这个问题,请在听觉适应一定的音

• 然后慢慢提高,一直调校到您听起来舒服清晰、而且完全没有失真

• 进行驾车、骑单车、玩滑板等活动时,请勿使用耳机,否则可能酿

合理节制聆听的音量及时间。 请勿于听觉正在适应音量时调校音量 • 请勿将音量调得太高,而使自己听不到周围的声音。

使用 SETUP(设置)键细微地调节您的设置,可以得到最好的播放 体验。使用 ▲▼▼ ▶ (上、下、左、右)键突出显示您的选择,并 按OK(确认)键。

1 按 SETUP (设置)键。显示功能列表。

2 使用▲▼ (上、下)键突出显示您的选择

音频设定 初期设定 选择重放参数 密码设定 选择密码选项 3 按 ◀ (左)键中止当前的设置或回到前一个菜单。

General Setup (通用设定) 当光标突出显示这些设置,按 OK (确认)键进入: 电视机类型 选择外接电视的视频标准 显示语言 选择屏幕显示语言

数字音频 选择数字音频选项 隐藏字幕 选择字幕选项 屏幕保护 选择屏幕保护选项 按 ◀ (左)键中止当前的设置或回到前一个菜单。

Audio Setup(音频设定)

扬声器设定

密码开关

密码改变

杜比数码设定

)衡器设定	选择均衡器选项
绕声处理	选择环绕声选项
₹ ◀ (左)键中止当前	前的设置或回到前一个菜单。
Preferences(初期	月设定)
i 光标突出显示这些设	是置,按 OK(确认)键进入:
音	选择音频语言选项
·幕	选择字幕语言选项
片选单语言	选择光盘菜单语言选项
龄控制	选择父母选项
ivX [®] 注册码	VOD 获得 DivX® ID

选择杜比声选项

设置操作

当光标突出显示这些设置,按 OK (确认)键进入: 选择扬声器选项

ェ)键中止当前	前的设置或回到前一个菜单。	症状
nces(初期]设定)	没有电源
出显示这些设	置,按 OK(确认)键进入:	
	选择音频语言选项	
	选择字幕语言选项	
吾言	选择光盘菜单语言选项	
	选择父母选项	画面失真
册码	VOD 获得 DivX [®] ID	
	使用电池播放时激活省电模式	
直	恢复工厂设定	
)键中止当前	前的设置或回到前一个菜单。	

疑难解答 如果 DVD 视频播放器有故障,请先参照这张检验表。这可能是曾被

效。如果发生故障,在送去维修之前,首先检查所列的要点。如果您 不能通过下列的提示解决问题,那么向您的经销商或服务中心请教。 - 检查电源软线的两个插头是否适当地 - 插入另外一个设备检查交流电外接口 是否有电。

在任何情形下您都不得尝试自己修理本装置,因为这样会使保单失

	– 检查电池组是否正确插入。
画面失真	– 检查汽车适配器时候正确连接。
	检查光盘上是否有指纹并用软布从中 心到边缘擦拭清洁光盘。
	有时少量图像失真可能发生。这不是 故障。
完全失真的图像 / 电视屏幕完全没有颜色	NTSC/PAL设置可能处于错误状态。使您的电视设置与您的播放器设置匹

· 检查音频连接。如果使用 HiFi 扩音

器,尝试另一个声源。

本装置符合欧盟的无线电干扰要求。

数字输出口无音频 检查数字连接 检查 SETUP(设置)菜单确定数字连 接设置为on(开)。 光盘不允许这些操作。 播放时播放器不响应 参见光盘的说明。 播放器发热 播放器长时间使用后,表面会变热。 这是正常的。 拔下 AC 插头后 装置正在省电,以确保电池达到更长 的播放时间这是正常现象。可以使用 MONITOR(显示器)功能调节亮

疑难解答

清洁光盘

DVD图像失真或黑白图像 – 只使用依照电视机使用而格式化的光

盘(PAL/NTSC)。

- 确保光盘标签朝上。

用遥控器直接瞄准在播放器前的感应

器。消除所有对光路的干扰。检查或

修理

取决于光盘上的内容(电影、视频片断、系列剧等等),这些光盘或许有一个或更多的标题,每个标题可能有一个章节或更多章。为使访问方便简单,您的播放器允许您在 视频的独特特徵,如选择声道和选择字幕语言、选择不同镜头角度 标题间以及章节间移动 此外,父母锁让您决定您的孩子可以看哪些光盘。有了屏幕显示和 播放器显示屏与遥控器的结合,您会发现您的播放器使用起来非常

DivX视频光盘

Video CD(VCD 视频光盘) 取决于光盘上的内容(电影、视频片断、系列剧等 等),这些光盘或许有一个或更多的轨道,每个轨道可能有一个索引或更多索引(如光盘盒所示)。为使访问方便

附有 JPEG 文件的光盘 您也可以在播放器上观看 JPEG 静止照片

 
寺),这些元益或许有一个或更多的轨道,每个轨道, 有一个索引或更多索引(如光盘盒所示)。为使访问方 简单,您的播放器允许您在轨道间以及索引间移动。 音频光盘 / MP3 / WMA 光盘

大小。DivX 文件还可以包含高级媒体功能,例如菜单、字幕和交替音轨。许多 DivX 媒体文件都可以在线下载,您也可以使用您的个人内容和来自 DivX.com 的易用工具创建您自己的媒体文件。

 
Zero Bright Dot™(零亮点) 享受最高质量的图像(LCD 显示屏上没有烦人的空白 点)。LCD 显示屏通常有缺陷,被 LCD 行业称为 'bright dots'(亮点)。有限数量的亮点曾被认为是 LCD 大规模生

 
产不可避免的副作用。在你的便携式 DVD 播放器里使用了飞利浦严格的质量控制程序,我们的 LCD 显示屏生产

或 PHONE 2 插孔。









I 播放的按 USL)(屏幕並亦)健。並亦特倒列衣。
2 使用 ▲ ▼ (上	:、下)键突出显示您的选择。
当光标突出显示这	些设置,按 OK(确认)键来:
文件	键入期望文件编号
标题	键入期望标题编号
章节	键入期望章节编号
声音	选择音频选项
字幕	选择字幕选项
角度	选择镜头角度选项



切举	30VV
工作温度范围	0 - 50°C (32 ~ 122°F)
激光波长	650nm
视频系统	NTSC / PAL / AUTO
频率特性	20Hz ~ 20KHz ± 1dB
信噪比	≥ 85dB
音频失真 + 噪音	\leq -80(1KHz)
声道间隔	≥ 85dB
动力范围	≥ 80dB
输出	
音频输出(模拟音频)	输出水平: 2V ± 10%
负载阻抗:	10ΚΩ

的权利失效。

- 尝试另外一张盘,检查光盘是否损坏。

飞利浦保留为改进产品而改变其设计和规格的权利,恕不事先 用户如未经制造商授权擅自修改产品,可能会使其操作本设备

保留所有权利。

设置选项

当光标突出显示这些设置,按 OK (确认) 键进入 通用设定 选择显示和其他选项 选择音频选项

4 按 SETUP(设置)键退出。

智能节电 出厂设定值 按 ◀ (左)键 注意:母选项仅当口令模式停用时可选。

打开/关闭密码

改变现有密码(默认:99999)

当光标突出显示这些设置,按 OK (确认)键进入:

按 ◀ (左)键中止当前的设置或回到前一个菜单。

(11) (12)(13)(14) (15

FUNCTIONAL OVERVIEW

Main unit controls (see figure 1)

① OSD. ..On Screen Display on / off ② MENUDisplay MENU page **3 MONITOR**Selection display

> ☼ To adjust the brightness with ◀ ▶ ☐ To adjust the screen of 16:9 or 4:3 with ◀ ▶

(4) AV IN/OUT Selection video format A/V or S--VIDEO 0U1

A/V IN (AUX) (5) ▲, ▼, ◀, ▶.....Up / down / left / right cursor ...Confirm selection 6 VOLUME +/-.....Volume control

.Pause playback ..Start / resume playback Press twice to stop playback.

..For previous (◄) or next (►) chapters, tracks or titles **|44 / ▶**▶|.. (8) ▲ OPEN. ...Open disc door to insert or remove disc

FUNCTIONAL OVERVIEW

Front of player (see figure 1)

(9) **POWER/CHG. IR** Power, charging indicator and Remote sensor

...Power supply socket

Left of player (see figure 1)

 ${\color{red}\text{\tiny{10}}}$ ${\color{red}\text{\bf ON}}$. ${\color{red}\text{\bf POWER}}$. ${\color{red}\text{\bf OFF}}$ Switch the player on / off

Right of player (see figure 1) ① PHONE 1 & 2..... Headphones jack

12 AV OUT . Audio/Video output iack (13) AV IN Audio/Video input jack (14) COAXIL ..Digital audio output jack

CAUTION

15 DC IN 9V.

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation

Remote controls (see figure 2)

 ▲, ▼, ◀, ►.....Up / down / left / right cursor .Confirms selection

② VOL+ / -..Volume control (3) |◀◀ / ▶▶| ..For previous (◄◄) or next (►►) chapters, tracks or titles Pauses playback

.Starts / resumes playback Press twice to stop playback

Search backward (◄◄) or search forward (▶▶) (4) OSD ..On Screen Display on / off

(5) AUDIO .Audio langauge selector ZOOM ..Enlarges video image (6) A > B. ..To repeat or loop a sequence in a title

PLAY-MODFSelects play order options (7) O - 9... ..Numeric keypad

® MUTE. ..Muting player volume ..Repeats chapter / title / disc REPEAT ...For VCD menu page **9 RETURN**

ANGLE Selects DVD camera angle 10 SUBTITLE ...Subtitle language selector LANGUAGELanguage selector 11) MENU.. ...Displays MENU page

12 SETUP ...Enters SETUP menu (13) Infra Red por

14 BATTERY COMPARTMENT

surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

• The lens may cloud over when the player is suddenly moved from cold to warm

Your portable DVD player plays digital video discs conforming to the universal

DVD Video standard. With it, you will be able to enjoy full-length movies with

true cinema picture quality, and stereo or multichannel sound (depending on the

The unique features of DVD-Video, such as selection of soundtrack and subtitle

languages, and of different camera angles (again depending on the disc), are all

What's more, parental lock lets you decide which discs your children will be able

Remote Control

AC power adaptor
 User Manual

· Audio / Video cable

to see. You will find your player remarkably easy to use with the On-Screen

Display and player display in combination with the remote control

First check and identify the contents of your package, as listed below:

Placement

Car adaptor (12V)
 Rechargeable battery pack

Unpacking

Warranty

Travel bág

• Portable DVD player

Your portable DVD player

disc and on your playback set-up).

• Place the player on a firm, flat surface.

· Keep away from domestic heating equipment and direct sunlight. If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be

repaired. Other cleaning methods may destroy the lens. Always keep the disc door closed to avoid dust on the lens.

You can also view JPEG still photos on this player.

Titles, and also between Chapters.

Audio CD / MP3 / WMA CD

DVD-Video

Video CD

CD with JPEG files

you move between tracks and between indexes.

1 Switch off the set. Attach the battery pack

✓ TIP

during charging.

is running low.

1 Switch off the set.

settings.

Detaching the battery pack

2 **PHILIPS**

PREPARATIONS

Connections

AV OUT

AV IN

to select A/V OUT.

to select A/V IN (AUX).

track / chapter.

play frame by frame.

Search

2 X backwards

4 X backwards

8 X backward:

6 X backwards 32 X backwards

Hearing Safety

Listen at a moderate volume:

Connecting headphones

PHONE 2 jack of your set.

Connect the headphones into the **PHONE 1** or the

. Turn off your set before connecting to any additional equipment

You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke

000000

Audio (right)

Audio (Left)

Connecting additional equipment

On the DVD player panel, press AV IN/OUT

On the DVD player panel, press AV IN/OUT

Moving to another title / track / chapter

move to another title/track/chapter as follows:

number using the numerical keys (0-9).

Still picture and step frame

Press **OK** to resume normal playback

Press **OK** or ▶ to resume normal playback.

When a disc has more than one title or track, you can

Press
 in briefly during play to select the next title/

Pause / Still picture

After the icon **II▶** is displayed, press **II** repeatedly to

Press ▶ repeatedly for the following forward search options:

Press

repeatedly for the following backward search options:

Press ◄◄ briefly during play to step back to the previous title/track/chapter

• To go directly to any title, track or chapter, enter the corresponding

Press II once or more for the following still picture and step frame options:

INTRODUCTION Playable disc formats

About DivX

DivX is a popular media technology created by DivX, Inc. DivX DIVX media files contain highly compressed video with high visual quality that maintains a relatively samll file size. DivX files car also include advanced media features like menus, subtitles, and alternate audio tracks. Many DivX media files are available for download online, and you can create your own using your personal content and easy-to-use tools from DivX.com.

Digital Audio Out

You can also make use of the COAXIAL jack

• Please refer to the user manuals of your additional

equipment for more information about connection

Players support NTSC/PAL/AUTO television sets.

for digital audio output.

✓ TIP

Zero Bright Dot™ Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD displays commonly have imperfections, termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality Warranty service varies from region to region. Contact your local Philips representative for more detailed information

Power Sources This unit operates on a supplied AC adaptor, car adapter, or a rechargeable

Make sure that the input voltage of the AC adaptor is in line with the local

 Make safe that the light voltage of the AC adaptor is in line with the lot voltage. Otherwise, the AC adaptor and unit may be damaged.
 Do not touch the AC adaptor with wet hands to prevent electric shock.
 When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
Unplug the AC adaptor from the outlet or remove the battery pack when

the unit is not used for long periods of time.

• Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes.
 Any service should be done by qualified service personnel.
 Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may • Do not expose to excessive heat caused by heating equipment or
- direct sunignt. This product is not waterproof: do not allow your player to be submersed
- in water. Water entering the player may cause major damage
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
 Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the appartus (e.g. liquid filled objects, lighted candles)

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

Copyright information

About this manual

Remote control operation

various settings and operations.

• Use ▲, ▼, ◀, ▶ to browse through menus.

• Press **OK** key to confirm your selection.

Menu navigation

or the disc.

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes

GENERAL EXPLANATION

This manual gives the basic instructions for operating this DVD player.

Some DVD discs however are produced in a way that requires specific

• Unless otherwise stated, all operations can be carried out with the

remote control. Always point the remote control directly at the player,

making sure there are no obstructions in the path of the infrared beam.

• When there are corresponding keys on the main unit, they can also be used.

Your player has an intuitive menu navigation system to guide you through

GENERAL FEATURES

VCD actions

repeats track

• Use the function keys to activate / disable relevant operations.

the screen, the operation is not permitted by the player

operation or allows only limited operation during playback. In these cases

the player may not respond to all operating commands. When this occurs,

please refer to the instructions in the disc inlay. When a $\, \oslash \,$ appears on

GENERAL INFORMATION

Handling discs

- Do not attach paper or tape to the disc. Keep the disc away from direct sunlight or heat
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.

On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points that continuously appear on the LCD. This is a normal result of

ental information

the manufacturing process and does not indicate a malfunction.

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET.

Your set consists of material which can be recycled if disassembled by a

specialized company. Please observe the local regulations to dispose of

packaging, exhausted batteries and old equipment Copyright information

"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license All other brand and product names are trademarks of their respective companies

Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties. Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

BASIC FUNCTIONS

choose to use English, French, Spanish, German, Simplified Chinese or Traditional

English, Tradtional Chinese, Simplified Chinese

SETUP

English is the default language of your player's on screen display. You may

OSD Language Options

English, French, German

English, French, Spanish

2 Insert your chosen disc. label side up (also when a double sided

Press PLAY-MODE repeatedly for the following play order options

4 Slide the **POWER** switch to **ON** to switch on the player.

A normal mechanical noise is heard during playback.

DVD disc is inserted). Make sure it is sitting properly in the correct recess.

GENERAL FEATURES

Switching on for OSD language setup

1 Slide the POWER switch to ON to switch on the

2 Press SET UP for the set up menu

3 Select GENERAL SETUP and press OK.

select from OSD language options.

Loading discs and switching on

1 Press OPEN to open the disc door.

3 Gently push to close the door.

Shuffle

Program

Use (0-9) and OK to key in specific settings.

• Press + / - to increase or decrease playback volume

. Use the rotatary switch on the right side of the unit.

Play modes

Volume Control

in the Remote Control or

4 Scroll and select **OSD LANG** and press ▶ to

5 Select your preferred language and press OK.

Chinese for your player's on screen display.

European

PREPARATIONS

Power supply Using the AC / DC adaptor Connect the supplied adapter to the set and

Using the car adapter

(0.00000) e main power supply (as shown).



Connect the supplied car adapter to the set and the car cigarette lighter outlet.

When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.

. To avoid damage to the player, switch off before plugging or unplugging the car

Powering your remote control

Open the battery compartment. Remove the protective plastic tab (first time users only)

Insert 1 x lithium 3V battery, type CR2025, then close the compartment



'~ (B)

CAUTION - Batteries contain chemical substances, so they should be disposed of

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.

Remove the batteries if the set is not to be used for a long time

BASIC FUNCTIONS Playing a DVD disc

automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the \blacktriangle , \blacktriangledown , \blacktriangleleft keys to highlight your selection, and press **OK**. Note: Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play,

After switching on, inserting the disc and closing the door, playback starts

and should be unloaded. Playing an audio or video CD disc

- After switching on, inserting the disc and closing the door, the screen shows the type of disc loaded as well as information about the disc's contents. Press ▶ to start playback.
- While playing VCD with MTV/Karaoke, press number keys(0-9) to select the track and press ► or **OK** to play the track. Press **RETURN** to go back to menu

Playing DivX[®] disc

- Philips provide you the DivX® VOD(Video on Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit www.divx.com/vod. • Selection the DivX® VOD on the SETUP menu
- The registration code will appear.
- Use the registration code to purchase or rent the videos from DivX® VOD service at www.divx.com/vod. Follow the instructions and download the video onto a CD-R for playback on this DVD player.

₹ TIP

led videos from DivX® VOD can only be played back on this DVD

For titles and chapters, selection menus may be included on the disc. The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key; or use the A, V, I, beys to highlight your selections and prese Very

selection, and press **OK**.

PLAY-MODE

Disc menu Press **MENU**. The menu may list, for example, camera angles, spoken language and subtitle options, and chapters for the title.

Checking the contents of DVD-Video discs: Menus



Camera angle

If the disc contains sequences recorded from different camera angles, the angle icon appears, showing the number of available angles, and the angle being shown. You can then change the camera angle if you wish.

Press **ANGLE** repeatedly until you have reached your desired 1/4



Press LANGUAGE. If the current disc has different

your desired language option Subtitles



LANGUAGE

Changing the language

your desired subtitles option.

Disc can't be played

Display goes dimmer when

AC is unplugged

langauge options, this now appears on the screen. Press LANGUAGE repeatedly until you have reached

Press **SUBTITLES**. If the current disc has different

Press SUBTITLES repeatedly until you have reached



3 Use (0-9) to key in specific settings. 4 Press ◀ to abort current setting or go back to previous menu level.

5 Press OSD to exit.

REPEAT

 
TIME DISP.

DISPOSAL OF YOUR OLD PRODUCT

4 X forward

16 X forward

32 X forward



Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment

 Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel range are offered for the at the transfer. minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal can actually be loud and harmful to your hearing. To guard against this, set

To establish a safe volume level: Set your volume control at a low setting Slowly increase the sound until you can hear it comfortably and clearly, Listen for reasonable periods of time:

our volume to a safe level before your hearing adapts and leave it there

Prolonged exposure to sound, even at normally "safe" levels, can also cause Be sure to use your equipment reasonably and take appropriate breaks Be sure to observe the following guidelines when using your headpho
 Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts.

 Do not turn up the volume so high that you can't hear what's around you.
 You should use caution or temporarily discontinue use in potentially hazardous. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas

Slow	motion				
Press 🕨	once or	more for the	following	slow play opti	ons:
x 1	1/2	x 5*	1/2	x backward	
x 2	1/4	x 6*	1/4	x backward	
x 3	1/8	x 7*	1/8	x backward	

Press **AUDIO** repeatedly for the following audio options.

The Zoom function allows you to enlarge the video image and to pan

through the enlarged image. Press **ZOOM** repeatedly to select the following

SETUP OPERATIONS

To maximize your playback experience, use **SETUP** to fine tune your settings.

Use the $\blacktriangle, \blacktriangledown, \blacktriangleleft, \blacktriangleright$ keys to highlight your selection, and press **OK**.

Press ◀ to abort current setting or go back to previous menu level

Press SETUP. A list of features is shown.

2 Use the ▲ ▼ keys to highlight your selection

When the cursor highlights these settings, press **OK** to:

When the cursor highlights these settings, press **OK** to:

Zoom x 4 1/2

1/4

select display and other options

select playback preferences

select password options

select audio options

select display ratio

select video standard of external TV set

select on screen display language

select digital audio options

select screen saver options

select captions options

Press **OK** or ▶ to resume normal playback

Changing the audio output

Mixed mono

*for DVDs only

Z00M

zooming options.

Zoom x 3 4X

GENERAL SETUP

AUDIO SETUP

PREFERENCES

PASSWORD SETUE

General Setup

TV DISPLAY

TV TYPF

SPDIF

OSD LANG

CAPTIONS

SCREEN SAVER

4 Press SETUP to exit.

7oom x 7 normal

Zoom x 1 2



Mono right

00000

Yellow

O AESCO IN

 


Press REPEAT repeatedly for the following repeat options:

DVD actions repeats chapter

MUTE

REPEAT



Audio Setup

SPEAKER SETUP

3D PROCESSING

Preferences

AUDIO

SUBTITLE

DISC MENU

PARENTAL

DivX® VOD

DEFAULT

PW MODE

PASSWORD

 
POWER SAVING

Password Setup

DOLBY DIGITAL SETUP

CHANNEL EQUALIZER





SETUP OPERATIONS

select speaker options

select dobly sound options

select surround sound options

select audio language options

select parental options

Restore factory settings

switch password on / off

get DivX ID for VOD

plavback[']

Note: Parental options are only selectable when password mode is deactivated

Press ◀ to abort current setting or go back to previous menu level

Press

to abort current setting or go back to previous menu level

When the cursor highlights these settings, press OK to:

select subtitle language options

select disc menu language options

activate power saving mode when using battery

change existing password (default: 99999)

select equalizer options

When the cursor highlights these settings, press **OK** to:

Press

to abort current setting or go back to previous menu level

When the cursor highlights these settings, press ${f OK}$ to:

repeats title repeats all cancels repeat

To exit the sequence, press A > B.

Press MUTE once to mute player volume.

Press MUTE again to disable.

REPEAT

A>B Monitor (on the main unit)

the TV screen

Press **MONITOR** repeatedly and use ◀ / ▶ to adjust brightness, color and display mode (normal or full screen).



WARNING Under no circumstances should you try to repair the set yourself as this

Symptom	Remedy
No power	 Check if both plugs of the mains cord are properly connected.
	 Check if there is power at the AC outlet by plugging in another appliance.
	 Check if battery pack is inserted appropriately.
	 Check if car adaptor is connected appropriately.
Distorted picture	 Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge.
	 Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted	- The NTSC/PAL setting may be in the wrong

TROUBLESHOOTING If it annears that the DVD-Video player is faulty, first consult this checklist

will invalidate the guarantee. If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre

ito power	properly connected.
	 Check if there is power at the AC outlet by plugging in another appliance.
	 Check if battery pack is inserted appropriately.
	 Check if car adaptor is connected appropriately.
Distorted picture	 Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge.
	 Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture / no colour in	The NTSC/PAL setting may be in the wrong status. Match your TV's setting with the

player's setting.

- Check audio connections. If using a HiFi

amplifier, try another sound source.

TROUBLESHOOTING

Clean the disc.

another disc

- Ensure the disc label is upwards.

- Check if the disc is defective by trying

Remedy

The player does not respond to the remote control	Aim the remote control directly at the sensor on the front of the player. Avoid all obstacles that may interfere with the signal path. Inspect or replace the batteries.
Distorted or B/W picture with DVD	 Use only discs formatted according to the TV-set used (PAL/NTSC).
No audio at digital output	Check the digital connections. Check the SETUP menu to make sure that the digital output is set to on.
Player does not respond to all operating commands during playback	Operations are not permitted by the disc. Refer to the instructions in the disc inlay.
Player feels warm	When the player is in use for a long period of time, the surface will be heated. This is normal.

This set complies with the radio interference requirements of the

Weight Power supply Power Consumption Operating temperature range Laser wavelength Video system Frequency response Signal/noise ratio Audio distortion + noise Channel separation Dynamic range

 
Load impedance: 75Ω PHILIPS reserves the right to make design and specification

authority to operate this device.

a drama series, etc.) these discs may have one or more Titles. and each Title may have one or more Chapters. To make access

 
All rights reserved.















You cannot play WMA files that are copy protected

BASIC FUNCTIONS

Using the full display screen, this shows the rest of the JPEG files, one-by-one, Use the ◀. ▶ to rotate the picture

Note: Unless stated otherwise, all operations described are based on remote

 
2 Use the ▲ ▼ keys to highlight your selection. When the cursor highlights these settings, press **OK** to: key in desired file number

TITLE key in desired title number CHAPTER key in desired chapter number AUDI0 select audio options SUBTITLE select subtitle options ANGLE select camera angle options FILE TIME key in starting point for file play time TT TIME key in starting point for title play time **CH TIME** key in starting point for chapter play time

select repeat options

select time display options





TECHNICAL DATA

 
≥ 80dB Audio out (analog audio) Output level: 2V ± 10% 10KΩ Load impedance Video out Output level: 1Vp - p ± 20%

changes for product improvement without prior notice. Modifications not authorized by the manufacturer may void users

Playable disc formats In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CDR, CDRW,DVD±R and DVR±RW).

Depending on the material on the disc (a movie, video clips,

easy and convenient, your player lets you move between







 


 














Playing a JPEG discs Use the \blacktriangle , \blacktriangledown , \blacktriangleleft . keys to highlight your selected picture folder. Press **OK**. The player will then automatically enter the slide show mode.

Use the ▲ to filp up/down.
Use the ▼ to flip left/right. • During the slide show, press **MENU** to go back to folder screen.

Press ■ to go to group preview.
 Use the ▲, ▼, ◄, ▶ to highlight the preview picture and access the

In addition to using remote control keys, you can also change disc playback options from OSD. 1 Press **OSD** during disc playback. A list of features is shown



20Hz ~ 20KHz ± 1dB ≥ 85dB $\leq -80(1KHz)$ ≥ 85dB

- The unit is saving power to ensure longer

Adjust the brightness using MONITOR

playtime with battery. It is normal

Output

2 Unplug the AC adapter 3 Turn the player upside down 4 Press down the battery pack lock switch 1