

Always there to help you

Register your product and get support at
www.philips.com/support

AE3000



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	3

2	Your Pocket Radio	4
	What's in the box	4
	Introduction	4
	Overview of the main unit	4

3	Get started	6
	Install batteries	6
	Turn on	6

4	Listen to radio	7
	Select FM/MW band	7
	Tune to a radio station	7
	Store your favorite three radio stations manually	7
	Select a favorite radio station	7

5	Other features	8
	Adjust the volume level	8
	Listen through a headphone	8

6	Product information	9
	Amplifier	9
	Tuner	9
	General information	9

7	Troubleshooting	10
----------	------------------------	-----------

1 Important



Warning

- To prevent possible hearing damage, do not listen at high volume levels for long periods.

Safety

- Make sure that there is enough free space around the product for ventilation.
- Only use attachments or accessories specified by the manufacturer.
- Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the batteries correctly, + and - as marked on the product.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove the batteries when the product is not used for a long time.
 - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Use only power supplies listed in the user manual.
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).

Hearing safety

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.



The maximum output voltage of headphone is not greater than 150 mV.

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.

- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Notice for the European Union



Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and

never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Note

- The type plate is located on the back of the apparatus.

2 Your Pocket Radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box


Check and identify the contents of your package:

- Pocket radio
- Headphone
- Detachable FM antenna
- Printed materials

Introduction

With this pocket radio, you can listen to FM/MW radio stations on the go.

Overview of the main unit

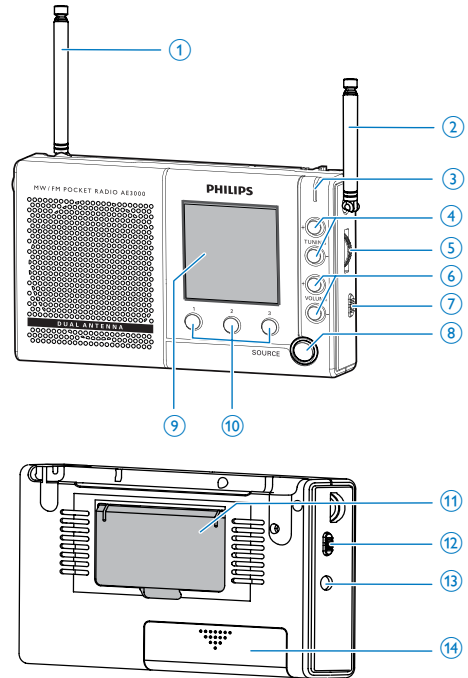

- ① **Fixed FM antenna**
 - Fully extend to improve radio reception.
- ② **Detachable FM antenna**
 - When the reception is poor, attach and fully extend to enhance radio reception.
- ③ **Signal indicator**
- ④ **+ TUNING -**
 - Press and hold to tune to the next/previous radio station with strong signal strength automatically.
 - Press to tune to a radio station step by step.

- ⑤ **FINETUNING**
 - Fine tune a radio station for better reception.
- ⑥ **+VOLUME -**
 - Adjust volume.
- ⑦ **OFF/ON switch**
 - Turn on or off the radio.
- ⑧ **SOURCE**
 - Select a radio waveband (source): MW, FM mono, or FM stereo.
- ⑨ **Display panel**
 - Show the radio information, such as the current source, radio frequency, signal strength, low battery, speaker/headphone output etc.
- ⑩ **Numeric keys 1 - 3**
 - Save a radio station as one of your favorites.
- ⑪ **Table support**
- ⑫ **🔊 / 🎧 switch**
 - Switch between speaker and headphone output.
- ⑬ **🎧**
 - Headphone socket.
- ⑭ **Battery compartment**

3 Get started

! Caution


- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Install batteries

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of product damage! When the apparatus is not used for long periods, remove the battery.
- Batteries contain chemical substances, so they should be disposed of properly.

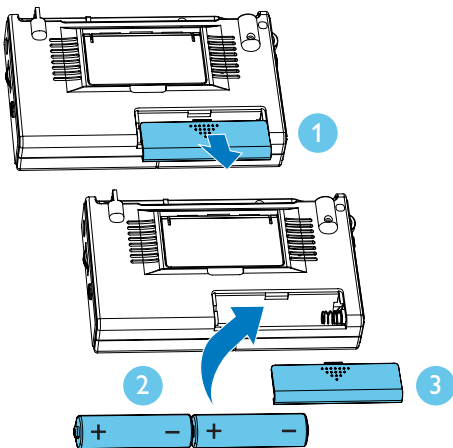

- 1 Open the battery compartment.
- 2 Insert two 1.5V AA/UM3/LR6 batteries (not supplied) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Turn on

- Slide the **OFF/ON** switch to the **ON** position.
↳ The radio switches to the last selected band.
- Slide the **OFF/ON** switch to the **OFF** position to turn off the radio.

4 Listen to radio

Select FM/MW band

- 1 Turn on the radio.
- 2 Press **SOURCE** to select a radio waveband: MW, FM mono, or FM stereo.

Tune to a radio station

To tune to a radio station:

- In FM/MW mode, press and hold **+ TUNING -**.
↳ The radio tunes to a station with strong reception automatically.

To tune to a radio station manually:

- In FM/MW mode, press **+ TUNING -** repeatedly until you find the optimal reception.

To fine tune a radio station:

- In FM/MW mode, rotate the **FINE TUNING** knob until you find the optimal reception.

Store your favorite three radio stations manually

- 1 Tune to a radio station.
- 2 Press and hold a numeric key (1 -3) to enter programming mode.
↳ The corresponding number blinks on the display panel.
- 3 Press the numeric key again to save the station to the corresponding number.
- 4 Repeat steps 1 to 3 to store more favorite stations.

Note

- To remove a preset radio station, store another station in its place.

Select a favorite radio station






- 1 Turn on the radio.
- 2 In FM/MW mode, press **1 - 3** to select one of your favorite radio station.

5 Other features

Adjust the volume level


- During radio broadcast, press **VOLUME +/-** to increase/decrease the volume level.

Listen through a headphone

- 1 Slide the  /  switch to the  position.
- 2 Plug a headphone into the  socket on the unit.
 - ↳ The  icon appears on the display panel.



Tip

- When the headphone is disconnected, the  icon appears on the display panel.

6 Product information

Note

- Product information is subject to change without prior notice.

Amplifier

Rated Output Power	200MW RMS at 10%THD
Frequency Response	80 -13000 Hz, ± 3 dB
Signal to Noise Ratio	> 55dBA

Tuner

Tuning Range	FM: 87.50 - 108.00 MHz MW: 531 - 1602 KHz
Tuning grid	FM: 10 KHZ; MW: 1 KHZ
Sensitivity:	
- Mono, 26dB S/N Ratio	8 dBf
- Stereo, 46dB S/N Ratio	14 dBf
Search Sensitivity	13 dBf
Total Harmonic Distortion	< 3%
Signal to Noise Ratio	> 55 dB

General information

Battery	Type AA//UM3/ LR6 batteries x 2 pcs (not supplied)
Battery life	Approx. 38 hours
Speaker Impedance	8 ohm
Speaker Driver	57 mm
Speaker Sensitivity	79 \pm 3 dB/m/W
Dimensions	
- Main Unit (W x H x D)	125.2 x 75.6 x 26.8 mm
Weight (Main unit, without packing)	133 g

7 Troubleshooting



Warning

- Never remove the casing of this apparatus.




To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Make sure that the batteries are inserted correctly.
- Make sure that the batteries are not used up.

No sound

- Adjust the volume.
- If there is no sound output from the speaker, make sure that  /  switch is slid to the  position.
- Disconnect the headphone.

No response from the unit

- Reinstall the batteries and turn on the unit again.

Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the fixed antenna.
- Attach and fully extend the supplied detachable antenna.
- Adjust the position of the antennas.



Specifications are subject to change without notice.
2014 © WOOX Innovations Limited. All rights reserved.
This product was brought to the market by WOOX
Innovations Limited or one of its affiliates, further referred
to in this document as WOOX Innovations, and is the
manufacturer of the product. WOOX Innovations is the
warrantor in relation to the product with which this booklet
was packaged. Philips and the Philips Shield Emblem are
registered trademarks of Koninklijke Philips N.V.

AE3000_UM_12_V1.0

