


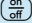



#### Call from the phonebook


1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press .


The call is initiated.


#### Listen to messages recorded on the answering machine (for answering machine phone only)


Press  on the base station to turn on the answering machine (the LED is turned on).


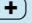
Press  again to turn off the answering machine (the LED is turned off).


Press  on the base station to play phone messages (the last recorded message will be played first).

Press  to skip the current message and play the next message.

Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).


Press   to adjust speaker volume during message playback.

Press  to delete the current message.

Refer to your new phone's User Manual for details about the answering machine function.

## Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem	Solution
<ul style="list-style-type: none"><li>• There's no dialling tone!</li></ul>	<ul style="list-style-type: none"><li>• Check the connections</li><li>• Charge the batteries</li><li>• Use the line cable provided</li></ul>
<ul style="list-style-type: none"><li>• Caller cannot hear me clearly!</li></ul>	<ul style="list-style-type: none"><li>• Move closer to the base station</li><li>• Move the base station at least one metre away from any electrical appliances</li></ul>
<ul style="list-style-type: none"><li>• <b>SEARCHING...</b> is displayed on handset and  icon is blinking!</li></ul>	<ul style="list-style-type: none"><li>• Move closer to the base station</li><li>• Reset your unit and restart the handset registration</li></ul>
<ul style="list-style-type: none"><li>• Caller number is not displayed!</li></ul>	<ul style="list-style-type: none"><li>• Check your subscription with your network operator</li></ul>

## Welcome to Philips!

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

### User Manual

Refer to the User Manual that came with your new phone.

### Online help

[www.philips.com/support](http://www.philips.com/support)

© 2008 Koninklijke Philips Electronics N.V.  
All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: Master



Printed in China



# Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy

# PHILIPS

# What's in the box



Handset



Base station with bracket for your new basic phone  
OR



your new answering machine phone



Battery door



2 AAA rechargeable NiMH batteries



Power supply



Line cord\*



User manual



Warranty card



Quick Start Guide

\*You may find in the box the line adaptor delivered separately from the line cable. **In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.**

 
 
In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

**WARNING** Always use the cables and batteries that came with your phone.

## 1 Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

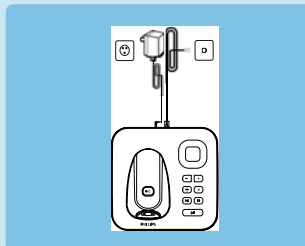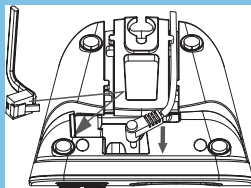


2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.

## 2 Install

 Insert rechargeable batteries and charge

Insert batteries

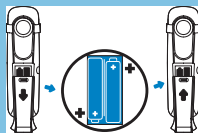

Charge handset for 24 hours



Configure your phone (if necessary)

After charging your phone for a few minutes, a Welcome screen may appear depending on the country where you live. If the Welcome screen appears:

1. Press **OK** to display a list of countries.
2. Scroll **↑** to find your country.
3. Press **OK** to confirm your selection.

Your phone is now ready for use.

## 3 Enjoy

Make a call

Dial the number (maximum 24 digits) and press **☎** key.

OR

Press **☎** key to take the line and dial the number (maximum 24 digits).

Answer a call

When the phone rings, press **☎** key.

End a call

To end a conversation, press **☎** key.

Adjust earpiece volume

During a call, press **🔊** to select from **VOLUME 1**, **VOLUME 2** or **VOLUME 3**.

Set the ring melody

1. Press **☰** key in idle mode, scroll **⬆** to **PERSONAL SET** and press **OK**, scroll **⬆** to **HANDSET TONE** and press **OK**, scroll **⬆** to **RING TONES** and press **OK**.
2. Scroll **⬆** to your desired melody to play the melody.
3. Press **OK** to set the ring melody.

A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

1. Press **☰** key in idle mode, scroll **⬆** to **PHONEBOOK** and press **OK**, press **OK** to enter **NEW ENTRY**.
2. **ENTER NAME** is displayed on the screen.
3. Enter the name of the contact (maximum 12 characters) and press **OK**.
4. Enter the number (maximum 24 digits) and press **OK**.

A validation tone is emitted.

Access the phonebook

1. Press **⬇** in idle mode and scroll **⬆** to browse the phonebook.
2. To view the details, press **OK**.