

MCD 700  
MCL 701  
MCL707

# Quick start guide










Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

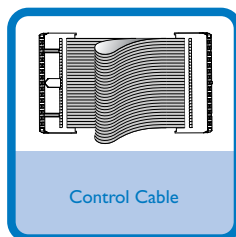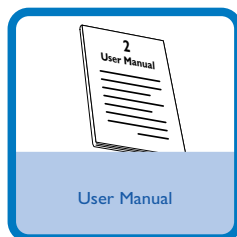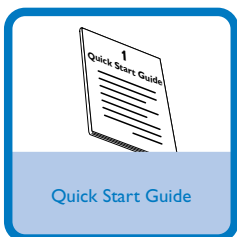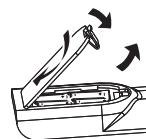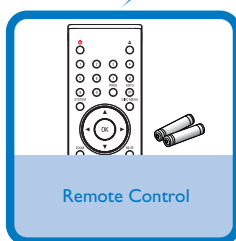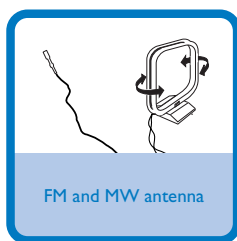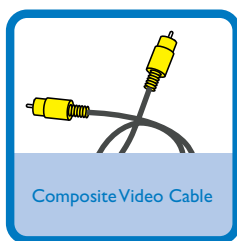

**PHILIPS**


## Step A *Connect*

- 1** Connect the speakers to the **SPEAKERS** (8ohm) terminals with two speaker cables. Right speaker to "R" and left speaker to "L", red wire to "+" and silver wire to "-".
- 2** Connect the supplied **MW loop antenna** and **FM antenna** to the respective terminals. Adjust the position of the antenna for optimal reception.
- 3** Connect the serial port marked **CONTROL CABLE** at the rear of the DVD player to the same port at the rear of the power amplifier with the supplied control cable.
- 4** Connect the **VIDEO OUTPUT** jack at the rear of the DVD player to the video input jack on the TV using the supplied video cable (yellow).

### *Tip*

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.


- 5** Connect the power cord of the DVD system to the AC power outlet.

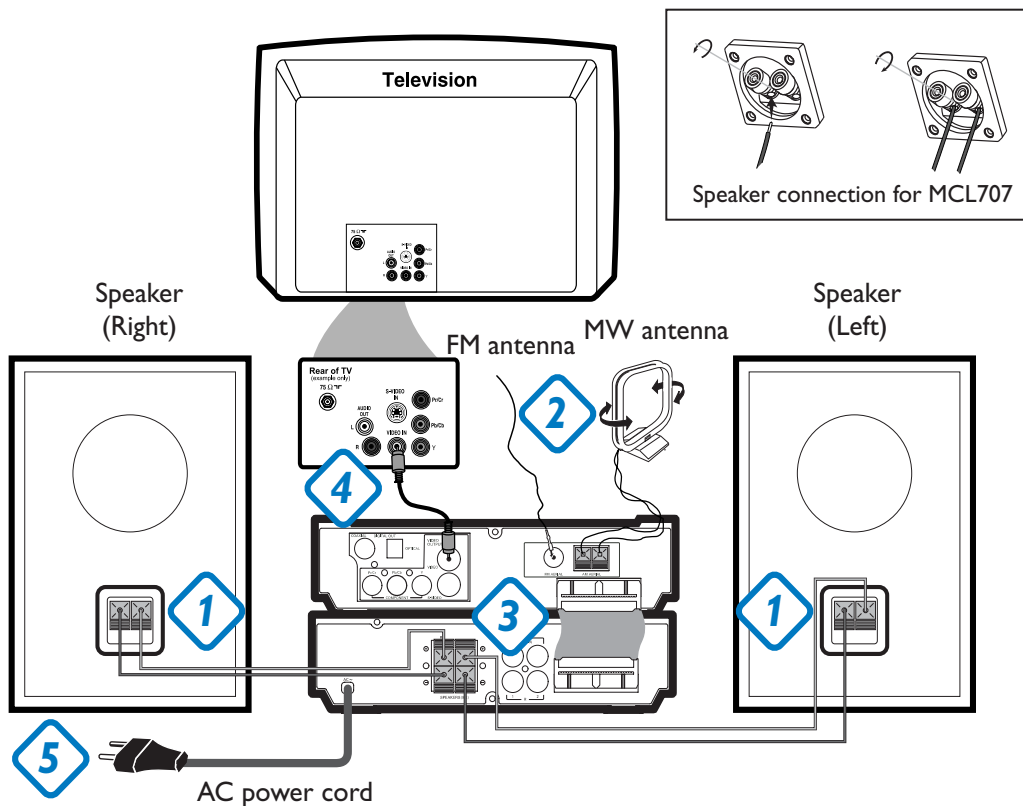

## Step B Setup

### Setting up the TV

- 1 Press **STANDBY ON** on the front panel of the DVD player or **ON** on the remote to switch the DVD system on and then select the disc source.

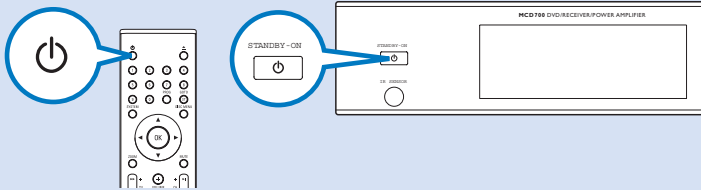





- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

#### Tip

See your TV manual for more details.

### Setting TV type and preferences

- 1 Press **SYSTEM** on the remote to enter the system menu.
- 2 Press **◀▶** on the remote to enter the 'Preference Page'. Then, select the color system matching your TV and the preferred audio, subtitle and disc menu languages using **◀▶▲▼** and **OK** on the remote.
- 3 Press **◀▶** on the remote to enter the 'General Setup Page' and select the preferred OSD language using **◀▶▲▼** and **OK** on the remote.

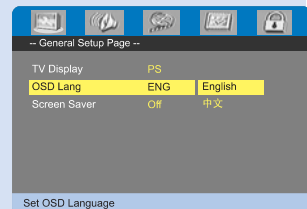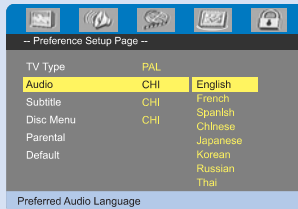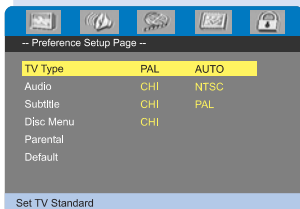
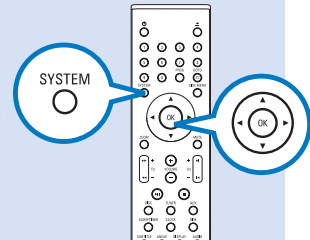


#### Tip

You can enter the 'Preference Page' in full stop mode only.


## Loading a disc

 - 1 Select the disc source, then press **OPEN+CLOSE** at the top of the DVD player or  on the remote.

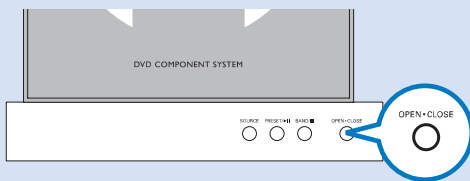





- 2 Load in a DVD disc with the label side facing up.

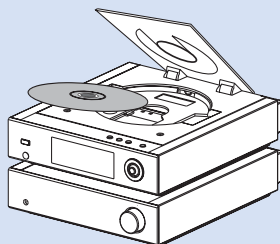- 3 A disc menu pops up.

  

## Playback

- 1 Use , , ,  and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.

### Tip

Refer to the User Manual for playback of other types of discs.

- 2 Press **PRESET/▶||** (or  **||** on the remote) to start playback.



## Types of Discs used on this DVD System

类型	录音	播放	编辑
 DVD+RW	✗	✓	✗
 DVD VIDEO	✗	✓	✗
 VIDEO CD	✗	✓	✗
 Super VCD	✗	✓	✗
 AUDIO CD	✗	✓	✗
 VIDEO CD	✗	✓	✗
 MP3-CD	✗	✓	✗
 WMA	✗	✓	✗

### IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM** on the remote to exit the system menu and then **DISC** and "1" to exit progressive scan.



2005 © Koninklijke Philips Electronics N.V.  
All rights reserved.

[www.philips.com](http://www.philips.com)