

user manual

manual del usuario

manual do usuário



PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA	
	No abrir, riesgo de choque eléctrico	
	ATENCIÓN	
Verifique que el voltaje de alimentación sea el requerido para su aparato		
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

Descripción: **Minisistema de Audio**
Modelo : **MCD109/ 55**
Alimentación: **110–127 / 220–240V~; 50/60 Hz**
Consumo: **30 W**
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
Nº de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

Manufactured under license from Dolby Laboratories.

"Dolby", "Pro-logic" and the double-D symbol are trademarks of Dolby Laboratories.

MANUFACTURED UNDER LICENSE FROM DIGITAL THEATER SYSTEMS, INC. US PAT. NO 5,451,942, 5,956,674, 5,974,380, 5,978,762 AND OTHER WORLDWIDE

PATENTS ISSUED AND PENDING. "DTS" AND "DTS DIGITAL SURROUND" ARE REGISTERED TRADEMARKS OF DIGITAL THEATER SYSTEMS, INC. COPYRIGHT 1996, 2000 DIGITAL THEATER SYSTEMS, INC. ALL RIGHTS RESERVED.

English ----- 4

Español ----- 31

Português ----- 58

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECT TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reserve engineering or disassembly is prohibited.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

AVISO

A utilização de comandos ou ajustes ou a execução de procedimentos de forma diferente daquela aqui indicada poderá resultar numa exposição perigosa a radiações ou noutra operação arriscada.

General Information

Features	5
Supplied accessories	5
Environment information	5
Installation	5
Maintenance	5

Connections

Connecting the right speaker	6
Connecting a TV set	7
Connecting the power cord	7
Connecting additional equipments.....	8

Functional Overview

Controls on the system	9
Remote control	10~11

Getting Started

Step 1: Using the Remote Control	12
Step 2: Setting up the TV	12~14
Selecting the color system that matches your TV set	
Setting up Progressive Scan feature	
To deactivate Progressive manually	
Step 3: Setting language preference	14
Setting the OSD Language	
Setting the Audio, Subtitle and Disc Menu language	

Basic Functions

Switching the system on/off	15
Power saving automatic standby	15
Volume control	15
Sound Control	15
DBB (Dynamic Bass Boost)	
DSC (Digital Sound Control)	

Disc Operations

Playable Discs	16
Region Codes	16
Playing discs	17
Using the Disc Menu.....	17
Using PBC feature (available for 2.0-version VCD only)	
Resuming playback.....	17
Selecting and searching	17~18
Selecting a different track/chapter	
Fast forwarding/reversing	
GOTO	
Different play modes:	
REPEAT, SHUFFLE and REPEAT A-B	18
REPEAT	
SHUFFLE	
REPEAT A-B	
Programming favourite tracks	19
Display information	19
Playing in slow motion	19
ZOOM	20
AUDIO	20
SUBTITLE (DVD only)	20
Camera angle (DVD only)	20
Playing a title (DVD only)	20
Playing MP3/WMA/JPEG disc	21
Playing Kodak Picture disc	21

DVD MENU Operations

Using the menu bar	22
Using the setup menu (user preference settings)	23~25
TV Display	
Screen Saver	
Night Mode	
Test Tone	
Changing the password	
Restricting playback by setting parental level	
Rating explanations	
OSD language (Menu Language)	
Default	

Specifications

Troubleshooting

Glossary

IMPORTANT!

PLEASE NOTE THAT THE VOLTAGE SELECTOR LOCATED AT THE REAR OF THIS SYSTEM IS PRESET AT 220V FROM THE FACTORY. FOR COUNTRIES THAT OPERATE AT 110V-127V, PLEASE ADJUST TO 110V-127V BEFORE YOU SWITCH ON THE SYSTEM.

Features

Your DVD MICRO THEATRE System with 2.0-channel full analog amplifier creates the same dynamic sound qualities that you find in full fledged cinemas and incorporates some of the best features in home theater technology. Other features include:

Additional Component Connections

Lets you connect other audio and audio/visual components to the DVD micro system.

Night Mode

Selects Dynamic ON or OFF cyclically

Parental Control (Rating Level)

Lets you set a ratings level so that your children cannot watch a DVD that has a rating higher than you set.

Supplied accessories

- Remote control with one CR2025 battery
- Two speakers
- AC power cord
- DIN cable
- Composite video cable (yellow)
- User Manual and Quick Start Guide

If any item is damaged or missing, contact your retailer or Philips.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.


Installation

- Place the player on a flat, hard, and stable surface
- In a cabinet, allow about 10cm (4 inches) of free space all around the player for adequate ventilation.
- Do not expose your player to extreme temperatures or humidity.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid such as vase shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, shall be placed on the apparatus.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, et.

Maintenance

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out, in a straight line.
- Do not expose the player, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep the disc tray closed to avoid dust on the lens.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for colour discs.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.



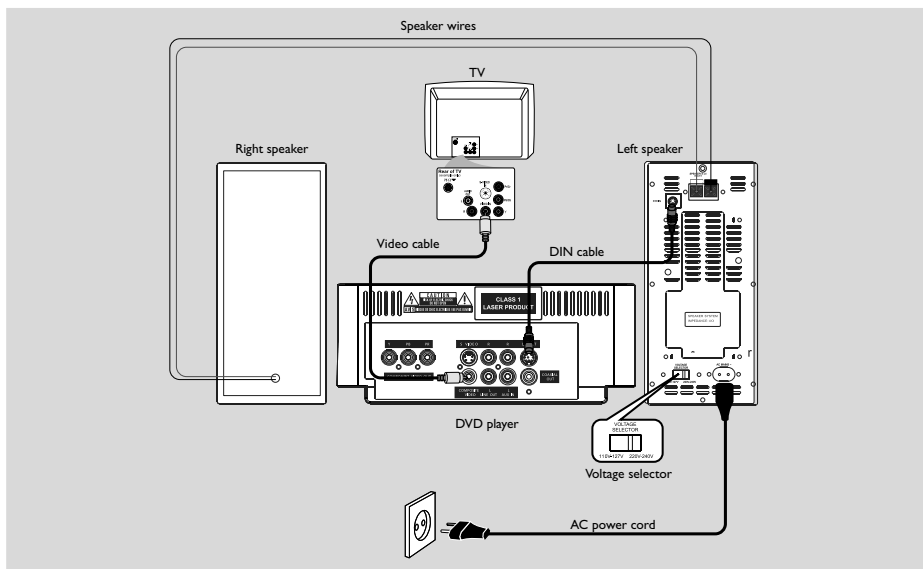


IMPORTANT!

- The type plate is located at the bottom of the system.
- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.
- Never make or change any connections with the power switched on.

Connecting the right speaker

Connect the supplied wires of the right speaker to SPEAKER RIGHT on the left speaker; red wire to red jack ("+"), black wire to black jack ("-"). Fully insert the stripped portion of the speaker wire into the terminal as shown.

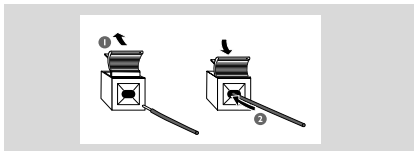

Notes:

- Ensure that the speaker wires are correctly connected. Improper connections may damage the system due to short-circuit.
- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker jacks.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Connecting a TV set

You must connect a TV to your DVD micro system in order to view the playback of DVD/VCD and picture disc.

IMPORTANT!

- There are various ways to connect the system to a TV. You only need to make one of the best connections, depending on the capabilities of your TV system.
- S-Video or Component Video connection provides higher picture quality. These options must be available on your TV set.
- Connect the system directly to the TV set.

- Connect the **COMPOSITE VIDEO** jack to the video input jack on the TV using a video cable (yellow).

OR

Option 1

Connect the **S-VIDEO** output jack to the S-Video input jack on the TV using an S-Video cable (not supplied).


OR

Option 2

Use the component video cables (red/blue/green, not supplied) to connect the DVD micro system's **COMPONENT VIDEO OUT** video output jacks to the corresponding component video input jacks (or labeled as **Pr/Cr Pb/Cb Y** or **YUV**) on the TV.

IMPORTANT!

- The progressive scan video quality is only possible when using **Y Pb Pr** and a progressive scan TV is required. (Proceed to "Setting up the TV for detailed Progressive Scan setup.")

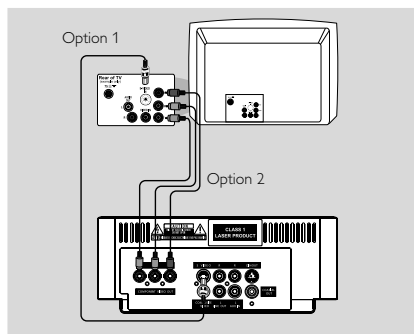


Note:

- To avoid magnetic interference, do not position the speakers too close to your TV.

Connecting the power cord

IMPORTANT!

- If your system is equipped with a **Voltage Selector**, set the **VOLTAGE SELECTOR** (located on the back of the left speaker) to match the local power line.
- Never make or change any connection with the power switched on.
- The DVD player can only be operated after the supplied **DIN** cable is connected.

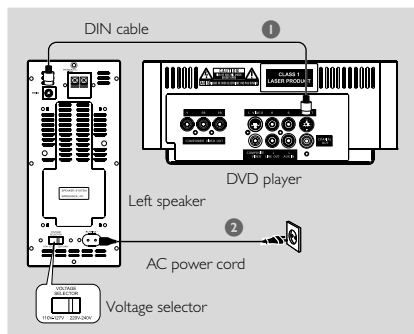


- 1 Connect the supplied DIN cable to DVD player's DIN jack and the left speaker's DIN jack.
- 2 Connect the supplied AC power cord to the left speaker's AC MAINS and the wall socket.

Connecting additional equipments

IMPORTANT!

- Some discs are **copy-protected**. You cannot record the disc through a **VCR** or digital recording device.
- When making connections, make sure the colour of the cable plugs matches the colour of jacks.
- Always refer to the owner's manual of the other equipment for complete connection and usage details.

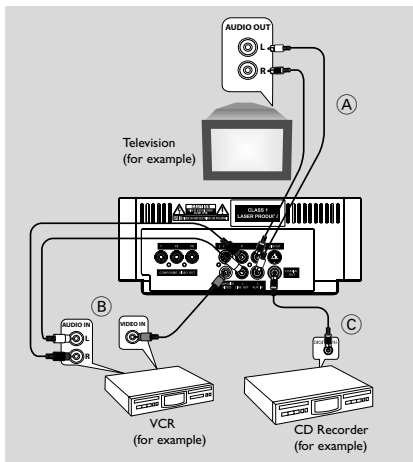

Viewing and listening to the playback of other equipment (A)

- Using the audio cables (red/white, not supplied) Connect the system's **AUX IN (R/L)** jacks to the **AUDIO OUT** jacks on the other audio/visual device (such as a TV, VCR, Laser Disc player or cassette deck).

Before starting operation, press **AUX** on the remote repeatedly in order to activate the input source (**AUX**).


Using the VCR for recording DVDs (B)

- Connect one of the system's **COMPOSITE VIDEO** jacks to the corresponding **VIDEO IN** jack, and **LINE OUT (R/L)** jacks to the **AUDIO IN** jacks on the VCR. This will allow you to make analogue stereo (two channel, right and left) recordings.

Recording (digital) (C)

- Connect the system's **COAXIAL OUT** (digital out) jack to the **DIGITAL IN** jack on a digital recording device (DTS-Digital Theater System compatible, with a Dolby Digital decoder; for example).

Before operation, set **COAXIAL OUTPUT** according to the audio connection.

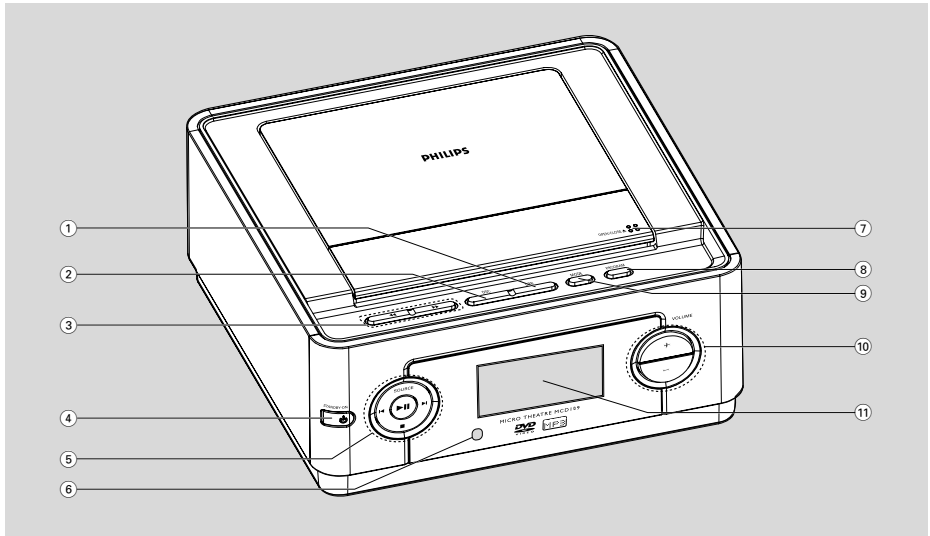

Controls on the system

① **DBB**

- enables or disables bass enhancement.

② **DSC**

- selects different types of preset sound equalizer settings (CLASSIC, POP, ROCK or JAZZ).

③ **◀▶**

- fast searches backward/forward in a disc at different speeds.

④ **STANDBY-ON**

- switches the system on or to standby mode.

⑤ **▶||**

- starts or interrupts disc playback

SOURCE

- selects the respective sound source: DVD or AUX.



- press to skip to the previous/next chapter/title/track.



- stops disc playback or erases a program.

⑥ **iR Sensor**

- point the remote control towards this sensor.

⑦ **OPEN/CLOSE**

- opens or closes the disc door.

⑧ **PROGRAM**

- For VCD/CD only: program the favourite tracks

⑨ **MODE**

- selects various repeat play modes (For VCD with PBC feature, PBC must be turned off.)

⑩ **VOLUME +/-**

- adjusts the volume upward/downward.


⑪ **Display**

- shows the current status of the DVD player.

Functional Overview

Remote control

- ① **Power**
 - switches the system on/ off.
- ② **AUX**
 - selects a connected external source
- ③ **DISC**
 - selects disc playing
- ④ **SUBTITLE**
 - selects a subtitle language.
- ⑤ **SYSTEM MENU**
 - enters or exits the system menu.
- ⑥ **REPEAT**
 - selects variations of continuous playback (For VCD with PBC feature, PBC must be turned off.)

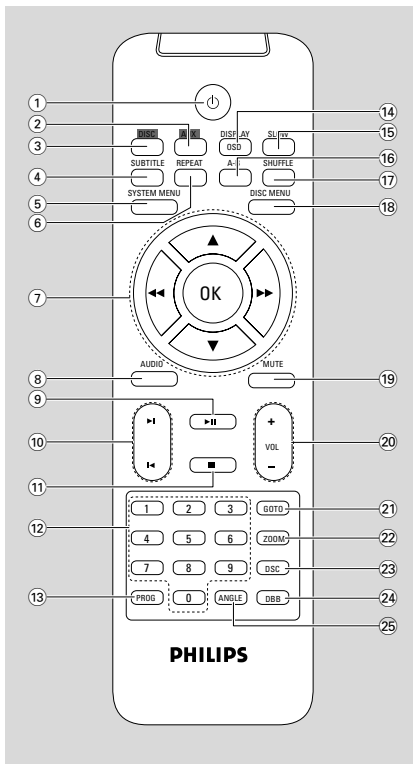

- ⑦ **OK**
 - confirms a selection.
 - selects an item in a menu.
 - moves an enlarged picture down/up/left/right.
- ⑧ **AUDIO**
 - for VCD**
 - sets Left vocal, Right vocal, Mono left, Mono right or Stereo sound mode.
 - for DVD**
 - selects an audio language.
- ⑨ **▶▶**
 - starts or interrupts disc playback.
- ⑩ **◀▶**
 - **Disc:** skips to the previous/next chapter/title/ track
 - For JPEG: selects different zooming rates
- ⑪ **■**
 - stops disc playback or erases a program.
- ⑫ **Numeric Keypad (0-9)**
 - inputs a track/title/chapter number of the disc.
- ⑬ **PROG**
 - **For VCD/CD only:** program the favourite tracks
- ⑭ **DISPLAY (OSD)**
 - displays disc playback time during playback
- ⑮ **SLOW**
 - selects different slow playback modes for a VCD/ SVCD/DVD.
- ⑯ **A-B**
 - repeats playback of a specific section within a chapter of DVD or a track.
- ⑰ **SHUFFLE**
 - **For VCD/CD only:** selects to playback in random order (For VCD with PBC feature, PBC must be turned off.)
- ⑱ **DISC MENU**
 - DVD/VCD: enters or exits the disc contents menu (For VCD with PBC feature, PBC must be turned on.)
 - MP3/WMA/JPEG: switches on or off the album/ picture menu.

⑲ MUTE

- disables or enables sound output.

⑳ VOL +/-

- adjusts the volume upward/downward.

㉑ GOTO

- fast searches in a disc by entering a time, title or chapter (For VCD with PBC feature, PBC must be turned off.)

㉒ ZOOM

- DVD/VCD: enlarges a picture or active image on the TV screen.
- For JPEG: turns on/off the zooming feature

㉓ DSC

- selects different types of preset sound equalizer settings (CLASSIC, POP, ROCK or JAZZ).

㉔ DBB

- enables or disables bass enhancement.

㉕ ANGLE

- selects a DVD camera angle.

Notes for remote control:


- **First select the source you wish to control by pressing one of the source select keys on the remote control (for example DISC, AUX).**
- **Then select the desired function (for example ►, ◀, ▶).**

Getting Started

Step 1: Using Remote Control

IMPORTANT!


- Before using the remote control, remove the insulation plastic tab as shown in the picture below.
- If the remote control does not function correctly or the operating range is reduced, replace the battery with a new (CR2025) battery.

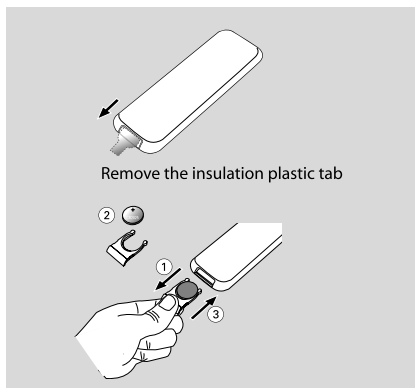

- 1 Push to open the battery tray.
- 2 Replace a new battery according to the indicated polarity.
- 3 Push the battery tray back to close it.

Using the Remote Control to operate the Player

- 1 Aim the Remote Control directly at the remote sensor (IR) on the front panel.
- 2 Select the source you wish to control by pressing one of the source (DISC or AUX) select buttons on the remote.
- 3 Then select the desired function (for example, ►II, ◀ or ►).

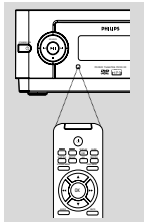

CAUTION!

- Remove the battery if it is exhausted or if the Remote Control is not being used for a long time.
- Batteries contain chemical substances, so they should be disposed of properly.

Step 2: Setting up the TV


IMPORTANT!



Make sure you have completed all the necessary connections. (See “Connecting TV”).

- 1 Switch the DVD system on and then select DISC source. (See “Switching the system on/off”).
- 2 Turn on the TV and set to the correct video-in channel. You should see the blue Philips DVD background screen on the TV.
 - Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.
 - Or, you may go to channel 1 on your TV, then press the Channel up button repeatedly until you see the Video In channel.
 - Or, the TV Remote Control may have a button or switch that chooses different video modes.
 - Or, set the TV to channel 3 or 4 if you are using an RF modulator.

Selecting the color system that matches your TV set

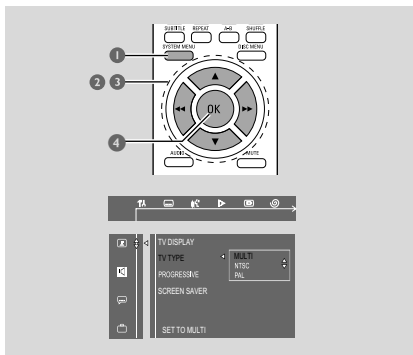This DVD system is compatible with both NTSC and PAL. For the playback of a DVD disc on this DVD system, the color systems of the DVD, TV set and DVD System should match.



- 1 In disc mode, stop playback then press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV screen.
- 2 Select  icon and press ▼.
- 3 Press ◀/▶ / ▼ / ▲ keys on the remote control to navigate in the menu.
→ Move to , and press ▶.
→ Move to "TV TYPE", and press ▶.

MULTI

– Select this if the connected TV set is compatible with both NTSC and PAL (multi system). The output format will be consistent with the video signal of the disc.

NTSC

– Select this if the connected TV set is NTSC system. It will change the video signal of a PAL video disc and output to NTSC system.

PAL

– Select this if the connected TV set is PAL system. It will change the video signal of an NTSC disc and output to PAL format.

- 4 Select an item and press **OK**.
→ The screen messages for further setting confirmation may appear. Follow the on-screen instructions to proceed to confirm the setting or not.

To remove the menu

Press **SYSTEM MENU**.

 

Setting up Progressive Scan feature (for Progressive Scan TV only)


The progressive scan display twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.


IMPORTANT!


Before enabling the progressive scan feature, you must ensure:

- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see "Connecting TV set")

- 1 Turn on your TV.
- 2 Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual).
- 3 Press **STANDBY-ON**  (on the remote) to turn on the DVD player.
- 4 Select the correct Video Input channel.
- 5 Press **SYSTEM MENU** on the remote control.
→ The menu bar will appear across the top of the TV screen.
- 6 Select  icon and press ▼.
→ Playback will pause.

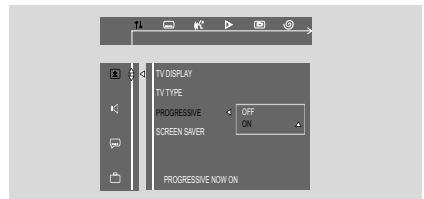

- 7 Press ◀/▶ / ▼ / ▲ keys on the remote control to navigate in the menu.
→ Move to , and press ▶.
→ Move to "PROGRESSIVE", and press ▶.
→ Move to "ON", and press **OK**.
→ The screen message below appears on the TV.

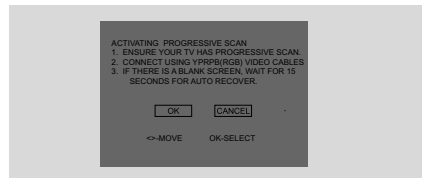

- 8 Press ◀/▶ to highlight OK in the menu and press **OK** on the remote to confirm.
→ The screen message for further progressive scan setting confirmation will appear.
There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.
- 9 Turn on your TV progressive scan mode (refer to your TV user manual).
- 10 In the confirmation menu, press ◀/▶ to highlight OK in the menu and press **OK** on the remote to confirm.

Getting Started

- Progressive scan is now set on. TV screen comes to the system menu.
 - If distorted picture still appears, it indicates that your TV doesn't support progressive scan. In this case, turn off progressive scan as described in **"To deactivate Progressive manually"**.
- 1 Press **SYSTEM MENU** on the remote to exit the system menu.
 - The setup is complete now and you can start enjoying the high quality picture.

To deactivate Progressive manually

- **When the distorted sign still appears on the TV**, it may be because the connected TV does not accept progressive signals, and progressive is set by mistake. You must reset the unit to interlace format.
- 1 Turn off your TV progressive scan mode or turn on to interlaced mode (refer to your TV user manual).
 - 2 Turn off progressive scan by selecting "OFF" under PROGRESSIVE menu, then press **SYSTEM MENU** on the remote to exit the system menu.
 - To turn off progressive scan, you may also first open the disc door; then hold down **▶** on the front panel, and press **numeric key "1"** on the remote.
 - Progressive scan is turned off.

Step 3: Setting language preference

You can select your own preferred language settings. This DVD system will automatically switch to the selected language whenever you load a disc. If the language selected is not available on the disc, the disc's default language will be used instead. The OSD language in the system menu will remain once selected.

Setting the OSD Language



- 1 Press **SYSTEM MENU** on the remote control.
 - The menu bar will appear across the top of the TV screen.
- 2 Select **▶** icon and press **▼**.
 - Playback will pause.
- 3 Press **◀/▶** / **▼** / **▲** keys on the remote control to navigate in the menu.
 - Move to **▶**, and press **▶▶**.
 - Move to "OSD LANG", and press **▶▶**.
- 4 Select your desired language and press **OK**.

To remove the menu

- Press **SYSTEM MENU** on the remote control again.

Setting the Audio, Subtitle and Disc Menu language



- 1 In disc mode, stop playback then press **SYSTEM MENU**.
 - The menu bar will appear across the top of the TV screen.
- 2 Select **▶** icon and press **▼**.
- 3 Press **◀/▶** / **▼** / **▲** keys on the remote control to navigate in the menu.
 - Move to **▶**, and press **▶▶**.
 - Move to one of the following and press **▶▶**.
 - "Audio" (disc's soundtrack)
 - "Subtitle" (disc's subtitles)
 - "Disc Menu" (disc's menu)
- 4 Press **▼** / **▲** to select a language and press **OK**.

To remove the menu

Press **SYSTEM MENU**.

IMPORTANT!

- Before you operate the system, complete the connection procedures.
- When the system is switched to Standby mode, it is still consuming power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.

Switching the system on/off

- Press **STANDBY ON** (⏻) (⏻ on the remote).
→ ⏻ lamp on the front panel will light off, and the system's display information will be displayed.
- Press **DISC**, or **AUX** on the remote (or **SOURCE** on the system).
→ The system will switch to the selected source.

To switch the system to standby mode

- Press **STANDBY ON** (⏻) (⏻ on the remote).
→ ⏻ lamp on the front panel will light up, and the system's display information will be turned off.

Power saving automatic standby

As a power-saving feature, the system will automatically switch to Standby mode if you don't press any button within 30 minutes in the stop mode.

Volume control

Press **VOLUME (+/-)** (or **VOL +/-** on the remote) to increase or decrease the volume level.

→ The display briefly shows "VOL" and a volume value from "01" to "39" ("MIN" or "MAX" is displayed when adjusted to the lowest or highest volume level).

To switch off the volume temporarily

- Press **MUTE** on the remote.
→ Playback will continue without sound and "MUTE" is displayed briefly.
- To activate sound reproduction, you can:
 - press **MUTE** again;
 - adjust the volume controls;
 - change source.

Sound Control

DBB (Dynamic Bass Boost)

DBB enhances the bass response.

- Press **DBB** to enable or disable DBB feature.
→ If DBB is activated, "DBB" will be shown.

Helpful hints:

– Some discs might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.


DSC (Digital Sound Control)

DSC provides a different type of preset sound equalizer setting.

- Press **DSC** on the remote (or on the system) repeatedly to select:
CLASSIC, POP, ROCK or JAZZ
→ The display shows the selected sound setting.

Disc Operations

IMPORTANT!

- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.
- If the inhibit icon  appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.

Playable Discs

Your DVD Player will play:

- Digital Versatile Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Versatile Discs + Recordable (DVD+R)
- Digital Versatile Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- MP3 disc on CD-R(W):
 - Supported sampling frequencies: 32kHz, 44.1kHz, 48kHz.
 - Supported Bit-rates : 32, 64, 96, 128, 192, 256(kbps)
- WMA-CDs (CD-ROMs with WMA tracks)
- Picture (JPEG) files on CD-R(W)



Region Codes

DVDs must be labeled for ALL regions or Region 4 in order to play on this DVD system. You cannot play discs that are labeled for other regions.



Note:

- If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted disc will not play on this DVD Player.

Playing discs

- 1 For DVDs and VCDs, make sure that the system is properly connected to your TV (See **Connecting a TV**), and your TV is turned on and set to video-in channel (See **Setting up the TV**).
- 2 Press **SOURCE** on the system once or more to select DVD mode (or **DISC** on the remote control).
 - You should see the blue Philips DVD background screen on the TV.
- 3 Push **OPEN/CLOSE** on the top of the system to open the disc tray.
- 4 Insert a disc with the print side facing up and close the disc tray.
- 5 Playback will start automatically (depending on the disc type).
 - If a disc menu appears on the TV, see "**Using the Disc Menu**".
 - If the disc is locked by parental control, you must enter your four-digit password. (See "**Restricting playback by setting parental level**").

To interrupt playback

- Press **▶ II**.
 - "PAUSE" is displayed briefly on the TV screen.
- To resume playback, press **▶ II** again.

To stop playback

- Press **■**.

Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load the disc.

To select a playback feature or item

- Use **◀ / ▶** / **▼** / **▲** and **OK** or **Numeric Keypad (0-9)** on the remote control, then press **▶ II** to start playback.

Using PBC feature (available for 2.0-version VCD only)

PBC playback allows you to play Video CDs interactively, following the menu on the display, such as allowing you to select favourite songs.

To switch PBC on or off

- 1 In disc mode, press **SYSTEM MENU**.
 - The menu bar will appear across the top of the TV screen.
- 2 Press **◀ / ▶** / **▼** / **▲** keys on the remote control to navigate in the menu.
 - Press **◀ / ▶** to move to PBC option, and press **▼**.
 - If PBC was ON, it will switch to OFF and start playback from the beginning of the disc.
 - If PBC was OFF, it will switch to ON and return to menu screen.
 - When PBC is ON, pressing **DISC MENU** will return to menu screen.

Resuming playback

- During playback, press **■** once to stop the playback in resume mode, then press **▶ II** to start playback from where you have stopped.

To cancel the resume mode

- In the stop position, press **■** again to fully stop the playback. Or open the disc door, or switch the system to standby mode.

Selecting and searching

Selecting a different track/chapter

For DVD/VCD/CD/MP3:

- During playback, briefly press **◀ / ▶** once or more until your desired track/chapter number appears.

Or,

use the **Numeric Keypad (0-9)** (only for VCD (PBC OFF), CD and MP3) on the remote control to directly input your track/chapter number.

→ After selecting, playback will automatically start from the beginning of the selected chapter/track.

Helpful hints:

- Some VCDs have a single track, so track selecting or an invalid input value for the current disc will be ignored.
- If the player has been set to repeat chapter (track), pressing this button will replay the same chapter (track) from its beginning.

Disc Operations

Fast forwarding/reversing

For DVD/VCD/CD/MP3:

- During playback, press ►►/◄◄ repeatedly to select fast search speed in forward (FF) or reverse (FR) playback.
→ The disc plays at a high speed with no sound.
- To resume to normal playback, press ► II.
Or, press ►►/◄◄ repeatedly until "PLAY" is displayed on the TV screen.

Helpful hints:

- For VCD/CD/MP3, fast searching forward/backward is available only within the same track.

GOTO

- During playback, press **GOTO** once or more on the remote control.
→ For VCD with PBC feature, PBC must be turned off first.
→ TV screen shows various search bars in the sequence as follows:

For DVDs:

Title 04/04 Chapter 1 / 24

(used to select chapter number; or title field by using ◄ ► on the remote control)

Title 04/04 Time : :

(used to select playtime within the current title)

For VCDs/CDs:

Go To: - - : - -

(used to select playtime within the entire disc)

- Use the **Numeric Keypad** (0-9) on the remote control to input your title/chapter number or playtime.
- Press **OK** on the remote to start playback from where you have selected.

Helpful hints:

- An invalid input value for the current disc will be ignored.

Different play modes: REPEAT, SHUFFLE and REPEAT A-B

REPEAT

For DVDs/VCD/CD/MP3

- During playback, press repeatedly **MODE** on the system (or **REPEAT** on the remote) to choose desired repeat play modes.
→ For VCD with PBC feature, PBC must be turned off first.
→ TV screen shows the play modes in the sequence as follows:

For DVDs

CHAPTER REPEAT ON: Repeats the current chapter

TITLE REPEAT ON: Repeats the current title

REPEAT OFF: Switches off play mode

For VCDs/CDs/MP3

REPEAT TRACK: Repeats the current track

REPEAT DISC: Plays all the tracks repeatedly

REPEAT OFF: Switches off play mode

- To return to normal playback, press **MODE** repeatedly (or **REPEAT** on the remote) until "OFF" is displayed.

SHUFFLE

In this mode, all tracks will be played in random order.

For VCD/CD

- During playback, press ■ twice to fully stop the playback.
- Press **SHUFFLE** on the remote.
→ SHUFFLE ON is displayed.
- Press ► II to start shuffle play.
- To switch off shuffle play, press ■ once.

Helpful hints:

- Selection of shuffle play is not available for DVD and MP3.

Repeat A-B

For DVD/VCD/CD:

- Press **A-B** at your chosen starting point.
- Press **A-B** again at your chosen end point.
→ The section will now repeat continuously.
→ A-B play is available within a chapter of DVD or a track.
- To exit the sequence, press **A-B** again.
→ "A TO B CANCELLED" is displayed briefly on the TV screen.

Programming favourite tracks

For VCDs/CDs

You can select and program up to 99 desired tracks for playback in the desired sequence. If you like, store any track/chapter/title more than once.

- 1 During playback, press ■ twice to fully stop the playback.
- 2 Press **PROG** on the remote control (or **PRG** on the system) to activate programming mode.
 - On the TV screen, "PROGRAM" and "P 00:00" are displayed.
 - On the system's display, "PRG" flashes, and P00: 00 is displayed.
- 3 Use the **Numeric Keypad (0-9)** on the remote control to enter your desired track number.
- 4 Press **OK** on the remote to store the track.
 - P00 is changed to P0 1, indicating the first programmed track is stored and the next program sequence is available.
- 5 Repeat **steps 3-4** to store other tracks.
 - If you attempt to program more than 99 tracks, FULL is displayed, and no track can be stored.
- 6 Press ►|| to playback the program.
 - "PRG" is displayed during playback.

To Erase program

You can erase program by doing one of the following:

- During program playback, press ■ two times.
- Select AUX source.
- Open the disc door.
 - "PRG" disappears from the display.

Helpful hints:

- Programming is not available for DVD and MP3 disc.

Display information

During playback, press **DISPLAY** on the remote control repeatedly to display various disc playback time on the TV screen (and the system's display).

For DVDs:

TITLE ELAPSED - elapsed playback time of current title

TITLE REMAIN - remaining time of current title

CHAPTER ELAPSED - elapsed playback time of current chapter

CHAPTER REMAIN - remaining time of current chapter

OFF - turns off the display information

For VCDs/CDs

SINGLE ELAPSED - elapsed playback time of current track

SINGLE REMAIN - remaining time of current track

TOTAL ELAPSED - elapsed playback time of disc.

TOTAL REMAIN - remaining playback time of disc

OFF - turns off the display information

Playing in slow motion

For DVDs/VCDs (PBC OFF):

- 1 Press **SLOW** repeatedly on the remote control during playback to select the desired speed in slow forward (SF) and backward (SR) playback.
 - Sound will be muted.
 - Backward playback (SR) is not available for VCD.
- 2 To return to normal speed, press ►||, or press **SLOW** repeatedly until "PLAY" is displayed.

Disc Operations

ZOOM

For **DVDs/VCDs/JPEG**

Zooming allows you to enlarge the video/ JPEG image during playback.

- Press **ZOOM** repeatedly to zoom in on the playback video image.
 - For JPEG picture disc, press **ZOOM** to display "ZOOM ON", then press ◀/▶ to select different enlarging rates.
 - Image size enlarges at different rates.
- To return to normal playback, press **ZOOM** repeatedly until "ZOOM OFF" is displayed.

Helpful hints:

– When zooming in, you may use ◀◀/▶▶/▼/▲ on the remote control to pan a picture across your TV screen in pause position or during playback.

AUDIO

For **DVDs**

- On the remote control, press **AUDIO** repeatedly to select the desired language for sound track.
 - The feature is disc dependant.

For **VCDs**

- Press **AUDIO** repeatedly to select the audio channel for sound output displayed on the TV screen.

LEFT VOCAL, RIGHT VOCAL, MONO LEFT, MONO RIGHT and **STEREO**

SUBTITLE (DVD only)

- Press repeatedly **SUBTITLE** on the remote control to select different subtitle languages.
 - The feature is disc dependant.

Camera Angle (DVD only)

- Press **ANGLE** repeatedly to select different desired angle, allowing you to view pictures from different recorded camera angles.
 - The feature is disc dependant.

Playing a Title (DVD only)

- 1 During playback, press **DISC MENU** on the remote control.
 - The disc title menu appears on the TV screen.
- 2 Use ◀◀/▶▶/▼/▲ or **Numeric Keypad (0-9)** to select a play option.
- 3 Press **OK** to confirm.


Playing MP3/WMA/JPEG picture disc

IMPORTANT!

– **Make sure that the system is properly connected to your TV (see Connecting a TV), and your TV is turned on and set to video-in channel (Setting up the TV).**

– **For DRM-protected WMA files, use windows Media Player 10 (or later) for CD burning/conversion. Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).**

- ❶ Load a MP3/Picture (JPEG) disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- ❷ Playback will start automatically.
→ The album/picture menu will appear on the TV screen. If not, press **DISC MENU** on the remote control.

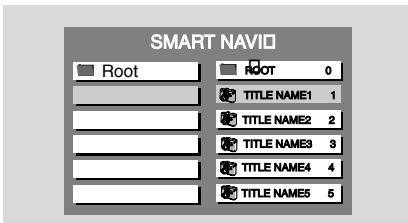

- ❸ In the stop mode, press ◀▶ / ▲ / ▼ to select a desired album, then select a desired title.
- ❹ Press **OK** or **▶II** to start playback.
- You can also use the **numeric keys (0-9)** to enter your choice.
- During playback, you may press ◀▶ to select the previous/next title.
- ❺ To stop playback, press ■.


If the MP3-CD menu is switched off

- You can only play the current title by pressing **▶II**. While in playback mode, press ◀▶ to select the previous/next title.
→ The title number will appear:

Playing Kodak picture disc

- ❶ Load a Kodak picture disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- ❷ Playback will start automatically.
- ❸ Press ■.
→ 9 thumbnail pictures will appear on the TV screen.

(example for the Kodak disc menu)

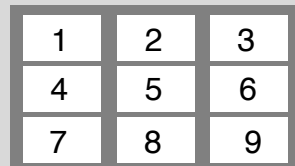

- ❹ Press ◀▶ to view the previous/next page (if available).
- ❺ Press ◀◀ / ▶▶ / ▲ / ▼ to move within the menu and press **OK** to select the desired picture to view.

During playback, you can:

- Press ◀▶ to select another title/picture in the current folder.
- Press ◀◀ / ▶▶ / ▲ / ▼ on the remote control to rotate or flip the picture files.
- To pause playback, press ▶II. To resume playback, press ▶II again.


Notes:

- Due to the recording nature of Digital Audio MP3 (DAM), only digital audio music will play.
- It is normal to experience an occasional "skip" while you are listening to your MP3 discs.
- For multi-session discs with different formats, only the first session can be read and played.
- **DISC MENU** does not function during Kodak Picture disc playback.


DVD Menu Operations

Using the menu bar

You can continue some operations directly via the multiple menu bars on the TV screen without interrupting the disc playback. But when you enter **PAUSE** (SETUP MENU), the playback will pause.

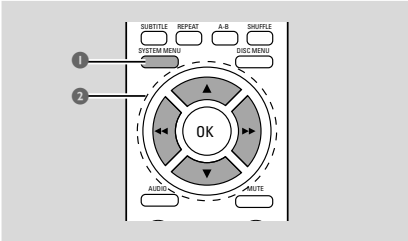

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV set screen.

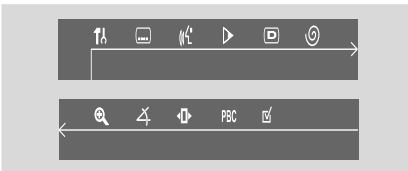

- 2 Press **◀/▶/▼/▲** on the remote control to navigate in the menu.
→ Press **◀/▶** to move through the menu bar.
→ Press **▼** to enter the selection.

To remove the menu

Press **SYSTEM MENU**.

IMPORTANT!


- Some operations may be different or restricted according to the disc format. Refer to the jacket or care of the disc you are playing.
- You can change the Subtitle Language and Audio Language from the menu bar only on the current disc. But this operation cannot change the default preset.

	Subtitle Language Press ▼ to select a desired language in DVD mode.
	Audio Language Press ▼ to select a desired audio language on the SVCD, VCD: Left Vocal → Right Vocal → Mono Left → Mono Right → Stereo
	Slow Motion The slow motion speed will display. Press ▼ repeatedly to select a reverse or forward slow motion speed. To cancel the slow function, press ▶II .
	STATUS In DISC mode, select this icon and press ▼ to view the time, title or chapter information of the playing disc.
	Time Search A time edit box appears on the display. Use the numeric keys (0-9) to enter the time (hours : minutes : seconds) at which you want to start playback, then press OK to start playback. (This function is not available in the PBC ON mode.)
	ZOOM Press ▼ repeatedly to select an enlarged picture ratio: 1.5, 2 or 4. You can press ◀/▶ / ▲ / ▼ to move within the enlarged picture on the TV set. To resume normal playback, repeat the above step to select ZOOM OFF .
	ANGLE Press ▼ to view the same scene from different angles if the DVD is recorded with multi-angles.
	STEP Press ▼ repeatedly to play forward the disc step by step (one frame every step). To cancel the step function, press ▶II .
PBC	PBC Press ▼ to select PBC ON or OFF, and then playback will return to the beginning of the disc (This function is only available for VCD with PBC feature.)
	PROGRAM See "Programming favourite tracks", Using the menu bar to program.


DVD Menu Operations

Using the setup menu (user preference settings)

This DVD setup is carried out via your TV set, enabling you to customize the DVD System to suit your particular requirements

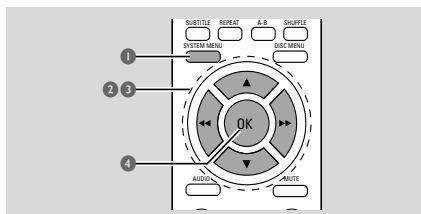

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV screen.
- 2 Select **fl** icon and press **▼** to enter the setup menu. Then press **▲ ▼** to select one of the setup menu options and press **▶▶** to enter the submenu.
→ Playback will pause.

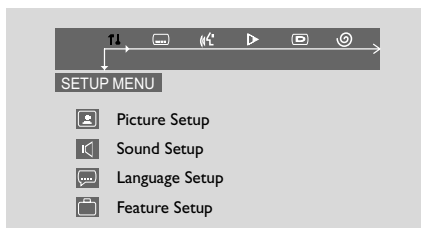

- 3 Press **◀▶/▼/▲** on the remote control to navigate in the menu.
- 4 Press **OK** to confirm your setting.

To return to the upper-level menu

- Press **◀▶** or **OK** (in cases of value adjustment).

To remove the menu

- Press **SYSTEM MENU** to exit the menu.
→ Playback will resume and begin automatically.

Note:

– Some of the features in the System Menu Options are described in “Getting Started”.


TV Display (default: Normal/PS)

IMPORTANT!

– This menu is accessible only in the stop position.

Set the aspect ratio of the DVD Player according to the TV you have connected.

→ **Normal/PS** (panscan): If you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

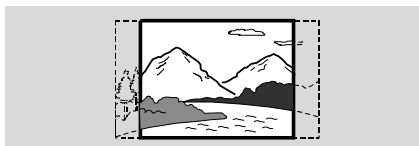

→ **Normal/LB** (letterbox): If you have a normal TV. In this case, a wider picture with black bands on the upper and lower portions of the TV screen will be displayed.




→ **Wide**: If you have a wide-screen TV.



Screen Saver (default: On)

This function is used to turn the screen saver on or off.

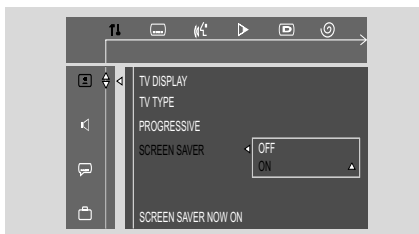


→ **ON**: In STOP, PAUSE or No DISC mode, if no actions are performed about 5 minutes, the screen saver will be activated.

→ **OFF**: Screen saver is disabled.

DVD Menu Operations

Night Mode

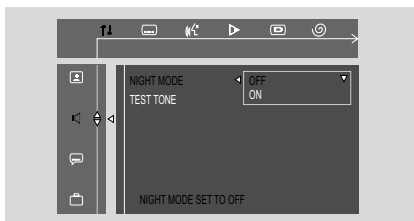


OFF

Select this when you want to enjoy the surround sound with its full dynamic range.

ON

Select this to level out the volume. High volume output will be softened and low volume output will be brought upward to an audio level. This feature is only available for movies with Dolby Digital mode.

Test Tone

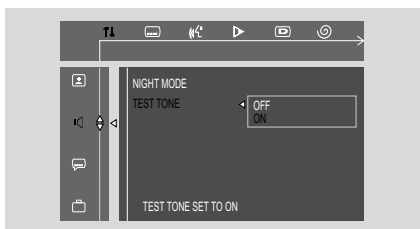

ON

After selecting this item, the system will start testing the speaker from left to right cyclically until you exit tone test.


- You can adjust speakers level when you are testing the speaker.
- The availability of the various channels test depends on the number of speakers connected.

Note:


- You can press ◀◀ to exit test tone mode at any time.

Changing the password


You can change the four-digit code used as Password.

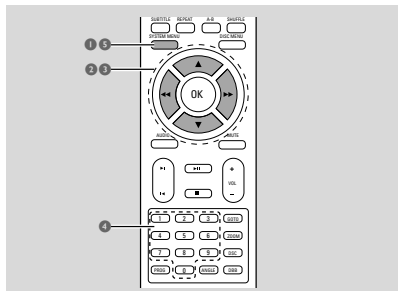

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select **T1** icon and press ▼.
→ Playback will pause.
- 3 Press ◀◀/▶▶/▼/▲ on the remote control to navigate in the menu.
→ Move to **⏏**, and press ▶▶.
→ Move to "PASSWORD" and press ▶▶.

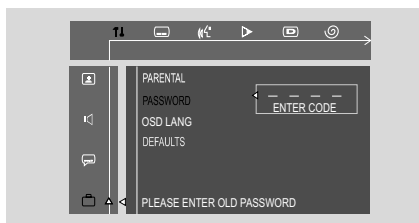

- 4 Use the **numeric keys (0-9)** to enter your four-digit code.
→ The password supplied by default is **1234**.
→ If you forget the four-digit code, press ■ four times, the system will change back to the default password.
- Go to "Password" and enter your new code. Then enter the same code again to confirm.

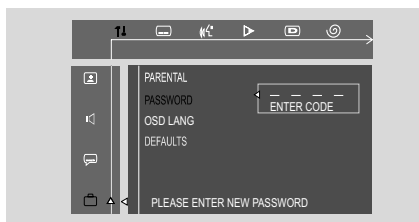


- 5 Press **SYSTEM MENU** again to remove the menu.


Restricting playback by setting parental level

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country specific. You can prohibit the playing of certain discs that are not suitable for your children or have certain scenes played with alternative scenes.


- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select **PA** icon and press **▼**.
→ Playback will pause.
- 3 Press **◀▶/▼/▲** on the remote control to navigate in the menu.
→ Move to **PA**, and press **▶▶**.
→ Move to "PARENTAL" and press **▶▶**.

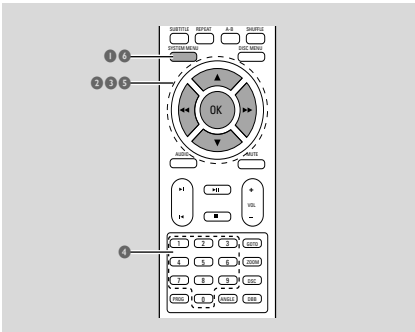

- 4 Use the **numeric keys (0-9)** to enter the four-digit code. You may have to enter the same code twice.

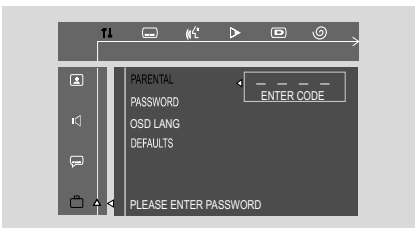

- 5 Press **▼/▲** to select a rating level between 1-8 and press **OK**.
→ DVDs rated above the level you select will not play unless you enter your four-digit password or choose a higher level rating. Select "No Parental" to deactivate Parental level and have all discs play.

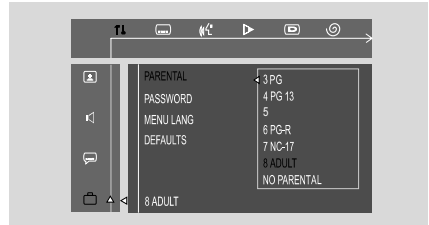

- 6 Press **SYSTEM MENU** again to remove the menu.

Rating explanations

NO PARENTAL - It will play all discs.

8 ADULT - material for adults only; viewed only by adults due to graphic sexual scenes, violence, or language.

7 NC-17 - No children under 17; not recommended for children under 17.

6 PG-R - Parental Guidance - Restricted; recommended that parents restrict children under 17 from viewing or allow them to view only when supervised by a parent or adult guardian.

4 PG-13 - Material is unsuitable for children under age 13.

3 PG - Parental Guidance suggested.

1 G - General Audience; recommended as acceptable for viewers of all ages.

- OSD language (menu language)

To set the screen display language. The default setting is English.

- Default

If RESET is selected, all the items in the setup menu will be reset to default setting, except Parental Setting and Password.

Specifications

SYSTEM

Power supply110-127V 60Hz
 /220-240V 50Hz
 Rated working power consumption (1/8 rated
 output power) $\leq 40\text{W}$
 AUX input sensitivity $\leq 1.9\text{V}$
 Output power $2 \times 20\text{W RMS}$
 (L/R speakers)

DVD

Frequency response 20Hz-20kHz ($\pm 3\text{dB}$)
 Video output $1\text{ V}_{\text{P-P}}$
 Horizontal definition ≥ 500 (TV)
 Dimensions 222 (W) \times 90 (H) \times 219 (D) mm
 Weight 1.1 kg

L/R SPEAKER

System 2-way bass reflex system
 Impedance $4\ \Omega$
 Dimensions (w \times h \times d) 125mm \times 250mm
 \times 249mm
 Weight 2.42 kg (left speaker),
 1.95kg (right speaker)

REMOTE



Distance 6m
 Angle $\pm 30^\circ$

***Specifications and external appearance
 are subject to change without notice.***

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power.	<ul style="list-style-type: none"> ✓ Check if the AC power cord is properly connected. ✓ Press STANDBY ON  on the DVD System or  on the remote to turn on the power.
No picture.	<ul style="list-style-type: none"> ✓ Check if the TV is switched on. ✓ Check the video connection. ✓ Press SOURCE on the DVD player repeatedly to select "DVD" or press DISC on the remote. ✓ Set your TV to the correct Video In channel. This channel is usually near channel 00. Or, you may have a button on the TV remote control that selects Auxiliary or A/V IN channel. See your TV owner's manual for details. Or, change channels at the TV until you see DVD screen on the TV. ✓ If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 13-14 for proper progressive scan setup or deactivate the progressive scan feature as below: <ol style="list-style-type: none"> 1) Turn off your TV progressive scan mode or turn on to interlaced mode. 2) Select "OFF" in PROGRESSIVE menu of system setup menu to turn off progressive, then press SYSTEM MENU to exit the menu.
Distorted or poor picture.	<ul style="list-style-type: none"> ✓ Sometimes a small amount of picture distortion may appear. This is not a malfunction. ✓ Clean the disc.
Completely distorted picture or black/white picture.	<ul style="list-style-type: none"> ✓ TV has a colour system standard. If the disc's or DVD system's colour system is different than your TV's colour system, the picture may be distorted or colourless.

Troubleshooting

The aspect ratio of the screen cannot be changed even though you have set the TV shape.

- ✓ The aspect ratio is fixed on the DVD disc.
- ✓ Depending on the TV, it may not be possible to change the aspect ratio.

No sound or distorted sound.

- ✓ Adjust the volume.
- ✓ Check that the speakers are connected correctly.
- ✓ Replace the speaker cables.
- ✓ Disconnect the headphones.
- ✓ The system is in pause, slow motion or fast forward/reverse mode, press ►|| (or ►|| on the remote) to resume normal play mode.

The micro DVD player does not start playback.

- ✓ Insert a readable disc with the playback side facing down.
- ✓ Check the disc type, colour system and regional code. Check for any scratches or smudges on the disc.
- ✓ Press SYSTEM MENU to turn off the setup menu screen.
- ✓ Cancel the parental control rating function or change the rating level.
- ✓ Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour.

The DVD micro system does not respond when the buttons are pressed.

- ✓ Disconnect the power plug from the outlet and insert again.

Cannot activate some features, such as Angles, Subtitles, or multi-language Audio.

- ✓ Multi-language sound or subtitle is not recorded on the DVD.
- ✓ Changing the language for the sound or subtitle is prohibited on the DVD.
- ✓ The features may not be available on the disc.

The remote control does not function.

- ✓ Select the correct source (DISC or AUX for example) before pressing the function button.
- ✓ Point the remote control at the remote sensor of the unit.
- ✓ Reduce the distance to the player.
- ✓ Remove any possible obstacles.
- ✓ Replace the battery with new one.
- ✓ Check that the battery is loaded correctly.

Low hum or buzz sound.

- ✓ Place the DVD micro system as far away as possible from electrical devices that may be causing interference.

Low bass response.

- ✓ Check all speakers for correct polarity.

Unable to select Progressive Scan

- ✓ Check that the output of the video signal is switched to 'Ypbpr'.

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

Aspect ratio: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Jacks on the back of the DVD System that send audio to another system (TV set, Stereo, etc.).

Bit Rate: The amount of data used to hold a given length of music; measured in kilobits per second, or kbps. Or, the speed at which you record. Generally, the higher the bit rate the better the sound quality. However, higher bit rates use more space on a Disc.

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

Component Video Out Jacks: Jacks on the back of the DVD System that send high-quality video to a TV set that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

Disc menu: A screen display prepared for the selection of images, sound, subtitles, multi-angles, etc recorded on a DVD.

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right and center).

DTS: Digital Theater Systems. This is a surround sound system, but different from Dolby Digital. The formats were developed by different companies.

JPEG: A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

MP3: A file format with a sound data compression system, "MPE" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. Through the MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

Multichannel: DVD is specified to have all sound tracks constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Parental control: A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

PCM (Pulse Code Modulation): A system for converting analog sound signal to digital signal for later processing without data compression.

Playback control (PBC): Refers to the signal recorded on video CDs or SVCDs for reproduction control. By using screen menus recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Progressive Scan (P-Scan): It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution. A progressive scan TV set is needed to receive progressive scan output from the system.

Region code: A system allowing discs to be played only in preset regions. This unit will only play discs that have compatible region codes. You can find the region code of your unit from the product label. Some discs are compatible with more than one region (or ALL regions).

S-Video: Produces a clear picture by sending separate signals for luminance and the color. You can use S-Video only if your TV set has S-Video In jack.

Sampling Frequency: Frequency of data sampling when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

Surround: A system for users to create realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

Title: The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.


VIDEO OUT jack: Jack on the back of the DVD System that sends video to TV.

Meet Philips at the Internet
<http://www.philips.com>

English

Español

Português

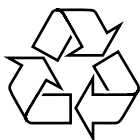

MCD109

**CLASS 1
LASER PRODUCT**



Printed in China

PDCC-JH-0634