



# Quick start guide

CD181/CD186

**PHILIPS**

## Important safety instructions


- Use only the power supply listed in the technical data.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions. (Refer to the user manual online)

## Overview

### Loudspeaker

- Find handsets.
- Register additional handsets.

CD186

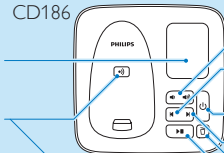

Adjust the speaker volume.

- Play the previous message.
- Replay the current message.


Turn the answering machine on/off.

Skip to next message.

- Delete the current messages.
- Delete all messages (press and hold).

Start/stop listening to the recorded messages.


CD181

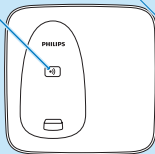





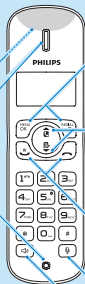


Speaker

Earpiece

Microphone



	In call	In idle mode	In menu
<b>MENU/OK</b>	Enter the option menu	Enter the option menu	Confirm selection
<b>REDIAL/C</b>	Enter the redial list	Enter the redial list	Cancel operation
	Increase the volume	Enter the phonebook	Scroll up
	Decrease the volume	Enter the call log	Scroll down
	Recall key* *network dependent	Make and receive calls	
	End calls	Turn handset on/off (press and hold)	Exit menu/operation
	Mute/unmute the microphone		
	Turn the speaker on/off	Make and receive calls	

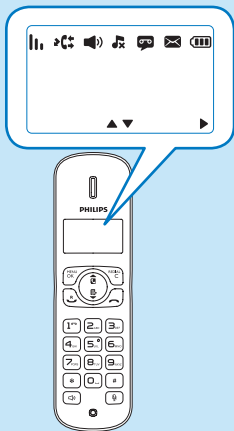

|| It displays the connection between the handset and the base. The more the bars are shown, the better the connection is.

☎ It indicates a received call in the call log.

☎ It indicates an outgoing call in the redial list.

☎ It flashes when there is a new missed call.  
It remains steadily on when browsing the missed calls in call log.

☎ It flashes when receiving incoming call.  
It remains steadily on during a call.

🔊 The speaker is on.

🎵 The ringer is off.

🗨 Answering machine: it flashes when there is a new message. It remains steadily on when the telephone answering machine is turned on.

✉ If you are using a voice mailbox from your provider, this icon flashes when there is a new message.  
It remains steadily on when the voice messages are already viewed in the call log.  
The icon is not shown when there is no voice message.


\*This is network dependent

▲▼ It displays when you scroll up/down a list or increase and decrease the volume.

▶ There are more digits on the right.  
Press **REDIAL/C** to read.

# 1 Connect

## Connect the base station

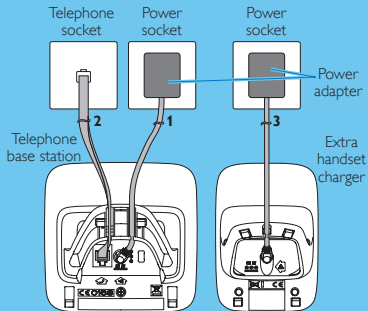


- 1 Connect each end of the power adapter to:
  - the DC input jack at the bottom of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the bottom of the base station;
  - the telephone socket on the wall.



For multi-handset version only:

- 3 Connect each end of the power adapter to:
  - the DC input jack at the bottom of the extra handset charger.
  - the power socket on the wall.


## 2 Get started
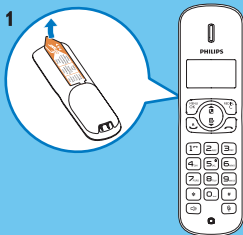
### Configure your phone



- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).  
After the welcome message, press **MENU/OK**.
- 3 Please set the country and language if prompted.
- 4 Set the date and time.
  - If the time is in 12-hour format, press   key to select **[AM]** or **[PM]**.

## Charge your phone

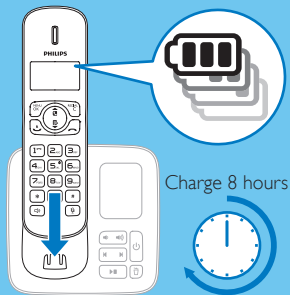

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

**Note** Charge the batteries for 8 hours before first use.

### Check the battery level



When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).






When the handset is on the base station/charger, the bars flash until charging completes.





The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.

# 3 Enjoy

## Call

- To make a call, press  and dial the phone number.
- To answer a call, press  when the phone rings.
- To end a call, press .

## Earpiece volume



Press  or  to adjust the volume during a call.

## Phonebook

### Add record

- 1 Press **MENU/OK**, then select **[PHONEBOOK] > [ADD NEW]**, then press **MENU/OK** to confirm.
- 2 Enter the name, then press **MENU/OK** to confirm.
- 3 Enter the number, then press **MENU/OK** to confirm.

### Call from the phonebook


- 1 Press  or, press **MENU/OK > [PHONEBOOK] > [VIEW]** to access the phonebook list.
- 2 Select a contact.
- 3 Press  to make the call.

## Direct access memory


You have 2 direct access memories (Keys 1 and 2). To dial the saved phone number automatically, press and hold on the keys in idle mode. Depending on your country, Keys 1 and 2 are preset to **[1\_VOICEMAIL]** (voice mail number) and **[2\_INFO SVC]** (information service number) of your network operator respectively (network dependent).



## Call log

- 1 Press  and select a record.

### To make a call

- 2 Press .

### To view more details

- 2 Press **MENU/OK**.
- 3 Select **[VIEW]**.

### To save a call record to the phonebook

- 2 Press **MENU/OK**.
- 3 Select **[SAVE NUMBER]**.
- 4 Press **MENU/OK** to confirm.
- 5 Enter the name.
- 6 Press **MENU/OK** to confirm.
- 7 Press **MENU/OK** to save.


### To delete a call record

- 2 Press **MENU/OK**.
- 3 Select **[DELETE]** or **[DELETE ALL]**.
- 4 Press **MENU/OK** to confirm.

## Redial list

- 1 Press **REDIAL/C** and select a record.

### To make a call

- 2 Press .

### To save a call record to the phonebook

- 2 Press **MENU/OK**.
- 3 Select **[SAVE NUMBER]**.
- 4 Press **MENU/OK** to confirm.
- 5 Enter the name.
- 6 Press **MENU/OK** to confirm.
- 7 Press **MENU/OK** to save.

### To delete a call record

- 2 Press **MENU/OK**.
- 3 Select **[DELETE]** or **[DELETE ALL]**.
- 4 Press **MENU/OK** to confirm.

## Record an announcement (for CD186 only)

- 1 Press **MENU/OK** > **[ANSW MACHINE]** > **[ANNOUNCEMENT]**, then press **MENU/OK** to confirm.
- 2 Select **[ANSWER ONLY]** or **[RECORD ALSO]**, then press **MENU/OK** to confirm.
- 3 Select **[RECORD NEW]**, then press **MENU/OK** to confirm.
- 4 Start recording close to the microphone after the beep.
- 5 Press **MENU/OK** to stop recording.  
↳ You can listen to the newly recorded announcement on the handset.

## Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 Press **MENU/OK** on the handset.
- 2 Select **[SERVICES]** > **[REGISTER]**, then press **MENU/OK** to confirm.
- 3 Press and hold **••)** on the base station for 5 seconds.
- 4 Enter the system PIN (0000).
- 5 Press **MENU/OK** to confirm the PIN.  
↳ Registration is completed in less than 2 minutes.

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES]** > **[RESET]**, then press **MENU/OK** to confirm.  
↳ The handset displays a confirmation request.
- 3 Press **MENU/OK** to confirm.  
↳ All settings are reset  
↳ The welcome screen displays.

## Technical data

### Battery

- GP: PH50AAAHC: 2 x AAA NiMH 1.2V Rechargeable 500mAh batteries
- BYD: H-AAA500A-Z: 2 x AAA NiMH 1.2V Rechargeable 500mAh batteries

### Adapter

Base and charger:

- Philips:  
SSW-1920EU-2/SSW-1920UK-2/  
S003PV0600050/S003PB0600050:  
Input: 100-240V 50/60Hz 0.2A;  
Output: 6V 500mA

**Note** Hereby Philips Consumer Lifestyle, declares that the CD181/CD186 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

## Frequently asked questions

### No signal bar displays on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[UNREGISTERED]**, put the handset on the base until the signal bar appears.

### If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

### No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

### I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

### The handset on the charger does not charge.

- Ensure the batteries are inserted correctly.
- Ensure the handset is placed properly on the charger. The battery icon animates when charging.
- Ensure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

### No display

- Ensure the batteries are charged.
- Ensure there are power and phone connections.

### Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

### The handset does not ring.

Ensure the handset ringtone is turned on.

### The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

# Welcome to Philips

Register your product at [www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

User manual / Online help

[www.philips.com/support](http://www.philips.com/support)



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

© 2013 Koninklijke Philips Electronics N.V.

All rights reserved.

**CE 0168**



QSG\_CD181-186\_EN\_V4.0  
WK13043