

ENG Quick Start Guide


CID3289

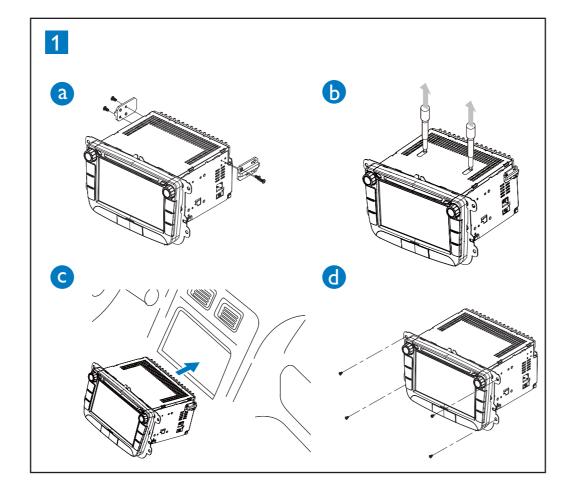




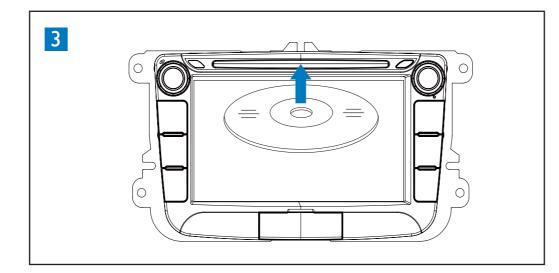

# **PHILIPS**

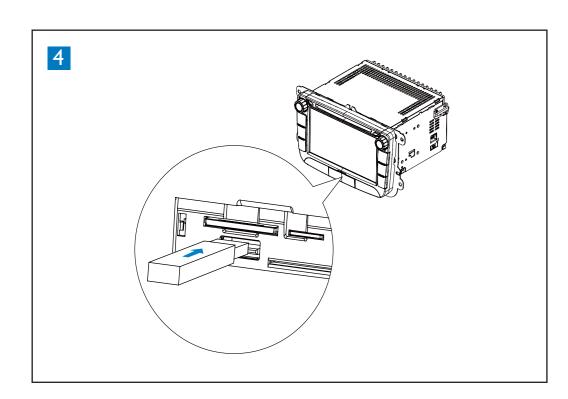

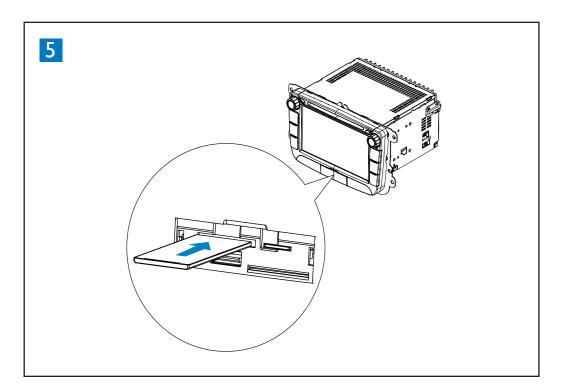

#### English

#### Install the car audio 1

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
- 2 Take out the original car audio and keep the screws.
- 3 Mount the supplied mounting brackets onto the unit with the supplied screws. (a)
- Connect wires **2**. 4
- 5 Take off the two screws on the top side of the unit. b
- 6 Slide the unit into the dashboard until a click sound is heard. C
- 7 Fix the unit onto the dashboard with screws. d
- Q Reconnect the negative terminal of the car battery.

#### Turn on

#### Caution

 Risk of road accidents! Never watch video or adjust settings while you drive.

1 Press & to turn on the unit. → The available OSD (On-Screen Display) languages are displayed.



2 Tap a language.

→ The OSD language is changed to the selected language immediately.

• To turn off the unit, press & for 3 seconds.

### Set date and time

1 Press MENU.




#### 2 Tap [Settings].

3 Tap [Time]. → The date/time setup menu is displayed.



#### Set date

- 1 Tap [Date].
- 2 Tap the displayed date information. → A submenu is displayed.
- 3 Tap  $\blacklozenge$  or  $\blacklozenge$  to set year, month and day.
- Set time mode
- 1 Tap [Time Mode].
- 2 Tap [12H] or [24H] to select clock mode.
- Set time
- 1 Tap [Time].
- 2 Tap the displayed time.
- → A submenu is displayed.
- 3 Tap  $\blacklozenge$  or  $\blacklozenge$  to set hour and minute.

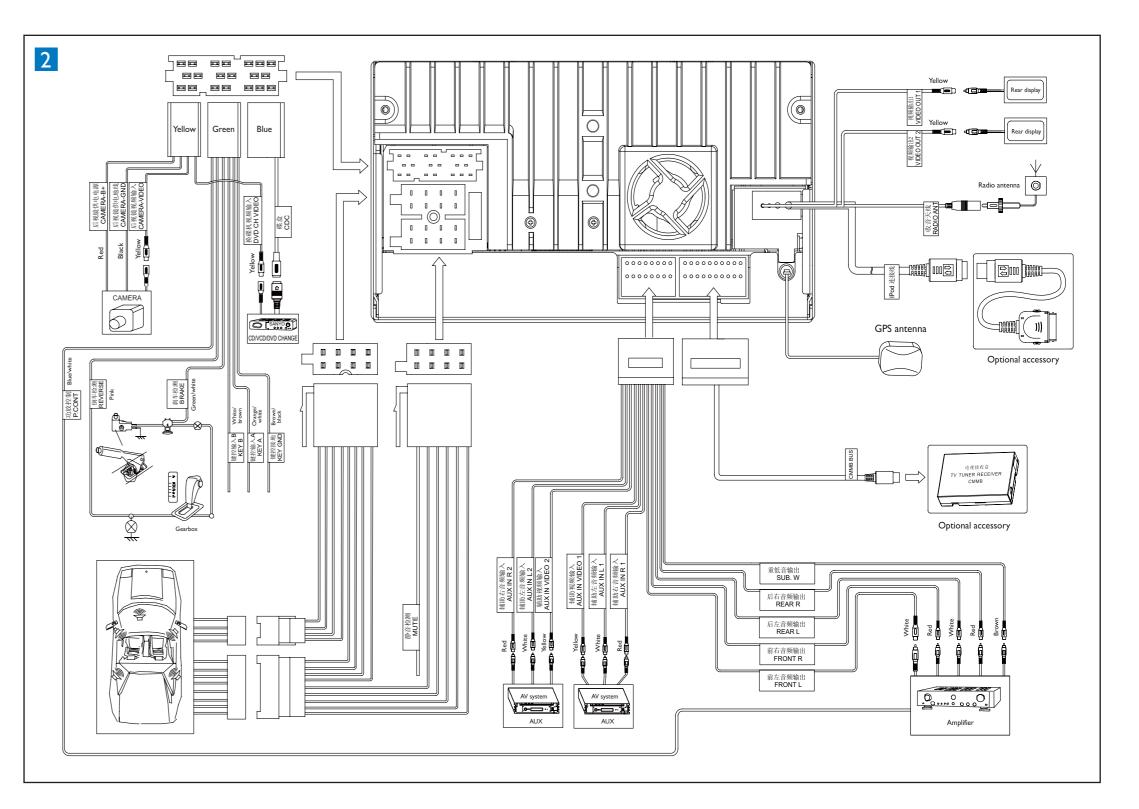

#### Adjust screen

#### To turn off the screen

- 1 Press **DISP** for over 2 seconds.
- To adjust screen brightness
- 1 Press DISP.
- 2 Rotate TUNE/►II SELECT to adjust the value.

#### Use map

#### Note

- You may need to upgrade the map (sold separately) before using it (see "Upgrade the map'' section)
- 1 Tap the upper left corner to display home menu.

#### 2 Tap [Navigation].

- → The navigation menu is displayed in a few seconds.
- 3 Refer to the map manual to operate the navigation tool.

#### Listen to Radio

- 1 Tap ♠ to display home menu.
- 2 Tap [Radio].

AM1

→ Band and frequency information is



02 03 04 05 06 50 90.10 98.10 106.10 107.90 102.90



- You can play video, audio or images stored on the following discs:
- DVD video, DVD-R, DVD-RW • VCD
- Audio CD, CD-R, CD-RW
- 1 Insert the disc into the disc slot with label side facing up.
- → Play starts automatically.
- $\mapsto$  To remove the disc, press the  $\blacktriangle$  button.

#### Connect USB device 4

- 1 Open the USB/SD card door.
- 2 Insert the USB device to the USB socket. → Play starts automatically.

Note • To remove the USB device, switch to disc, radio or other source first.

## Insert SD/MMC card 5

- 1 Open the USB/SD card door.
- 2 Insert the SD/MMC card into the SD/MMC card slot.
- → Play starts automatically.

#### Remove the SD/MMC card


- 1 Switch to another source.
- 2 Press the card until you hear a click sound. → The card is now disengaged.
- **3** Remove the SD or MMC card.

#### Play with Bluetooth device

#### Pair the Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once.

- You can pair up to eight devices.
- 1 Search for Bluetooth device with the device.
- 2 Select "CID3289" in the pairing list. 3 Enter default password "0000".
- → if pairing succeeds. phone call record is displayed.

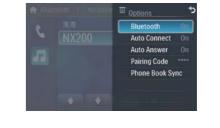

#### Make a call

- 1 Pair the phone with the unit.
- 2 Tap  $\clubsuit$  to display the home menu.

#### **3** Tap [Bluetooth].



- 4 Tap  $\blacklozenge$  or  $\blacklozenge$  to select the paired phone, then tap 🛹.
- 5 Tap  $\blacklozenge$  or  $\blacklozenge$  to search for phone number from the following list:



Or tap 🎹 to dial number directly, then tap 🦱 to dial.

#### Receive call

- By default, all incoming calls are received automatically.
- 1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.



2 When conversation ends, tap 🗪 (red) to terminate the call.



© 2010 Koninklijke Philips Electronics N.V. All rights reserved. CID3289\_00\_QSG\_V1.0

**3** Tap on **FM** or **AM** to select band: 4 Briefly tap ◀ or ► to tune to a radio station by step.



\*