

Clock Radio

AJL308

PHILIPS CONSUMER ELECTRONICS COMPANY
Marietta, GA 30006-0026, U.S.A.

Register your product and get support at
www.philips.com/welcome

Meet Philips at the Internet
<http://www.philips.com>



Thank you for choosing Philips.

Need help fast?

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/welcome



Philips vous remercie de votre confiance.

Besoin d'une aide rapide?

Le Guide rapide de début et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips.

Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/welcome




Gracias por escoger Philips

Necesita ayuda inmediata?

Lea primero la Guía rápida del comienzo o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/welcome

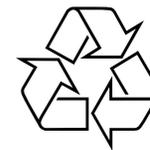

AJL308

PHILIPS



Printed in China

PDCC-ZYL/SY-0831

Return your Product Registration Card or register online at www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, or register online at www.philips.com/welcome to ensure:

***Proof of Purchase**

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

***Product Safety Notification**

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

***Additional Benefits**

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at:

www.philips.com/welcome

Know these **safety** symbols



This "bolt of lightning" indicates un-insulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

 
For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart /apparatus combination to avoid injury from tip-over.




AC Polarized Plug

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Where the MAINS plug or an appliance coupler is used as the disconnet device, the disconnet device shall remain readily operable.
16. Battery usage **CAUTION** - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
Install **all** batteries correctly, + and - as marked on the unit.
Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
Remove batteries when the unit is not used for a long time.
17. Apparatus shall not be exposed to dripping or splashing.
18. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
19. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.
For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

EL 6475-S004: 03/12

PHILIPS Visit our World Wide Web Site at <http://www.philips.com/welcome>

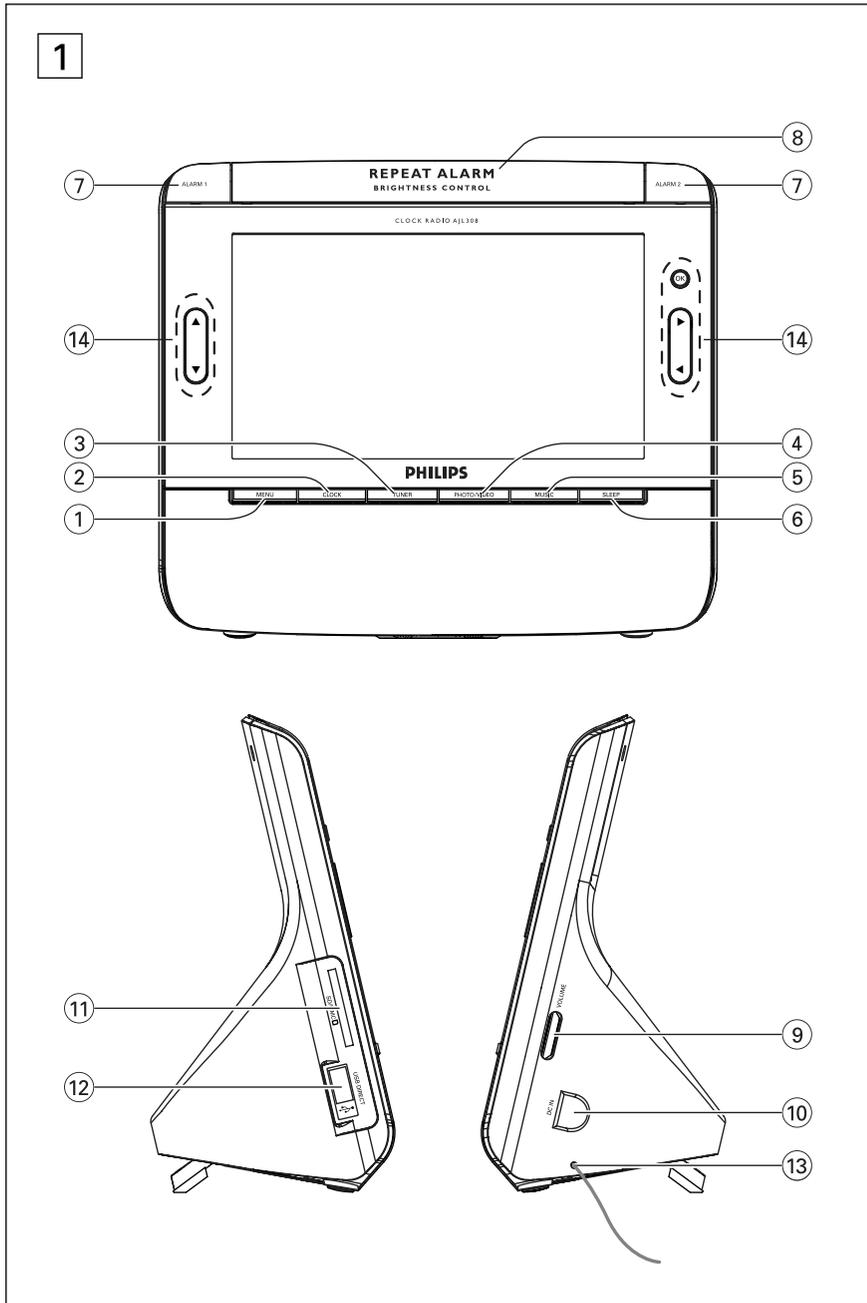

English

Controls

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Supplied accessory

- 1 X certified power adaptor (Input: 100-240V ~50/60Hz 0.3A~0.4A, Output: 9V===1A)

Controls (see 1)

- ① **MENU**
- switches to menu setting
- ② **CLOCK**
- switches to clock mode
- ③ **TUNER**
- switches to tuner mode
- ④ **OK, ▲, ▼, ►, ◀**

PHOTO/VIDEO

- switches between photo and video mode
- ⑤ **MUSIC**
- switches to music mode
- ⑥ **SLEEP**
- sets, activates or deactivates sleep function
- ⑦ **ALARM 1/ALARM 2**
- sets, activates or deactivates alarm
- ⑧ **REPEAT ALARM/BRIGHTNESS CONTROL**
- repeats alarm in 9-minute interval
- adjusts brightness of LCD screen
- ⑨ **VOLUME**
- adjusts volume level
- ⑩ **DC IN**
- socket for DC 9V adaptor
- ⑪ **SD/MMC slot**
- connects to SD or MMC card
- ⑫ **USB port**
- connects to USB device
- ⑬ **Pigtail** - FM antenna to improve reception.

Mode Button	Clock	Tuner	Music	Photo	Video
OK	**Enlarge a picture in zoom mode	Turn on or off radio	Start or pause playback	Display a picture in a full screen	Start or pause playback
▲	-Select previous photo -Navigate in zoom mode	-Select a radio station -Select a preset number in program mode	-Select Repeat One/All or shuffle mode -Cancel play mode	-Rotate a picture 90° clockwise -Navigate in thumbnail pictures	-Switch between 16:9 and 4:3 screen ratio *- Selects audio language
▼	- Select next photo -Navigate in zoom mode	-Select a radio station -Select a preset number in program mode	-Select Repeat One/All or shuffle mode -Cancel play mode	-Rotate a picture 90° anti clockwise -Navigate in thumbnail pictures	-Select Repeat One/All mode -Cancel play mode *- Selects subtitle language
►	- Select next photo -Navigate in zoom mode	-Fine tune to a station *-Tune to a radio station	-Select next music file *-Fast forward playback	-Select next photo -Navigate in thumbnail pictures	-Select next video file *-Fast forward playback
◀	-Select previous photo -Navigate in zoom mode	-Fine tune to a station *-Tune to a radio station	-Select previous music file *-Fast reverse playback	-Select previous photo -Navigate in thumbnail pictures	-Select previous video file *-Fast reverse playback

* = press and hold

** = in clock mode, press and hold **CLOCK** button to enter zoom mode

Power supply/Basic operation

Power supply

- Connect the supplied power adapter to the set's DC 9V socket and to the power socket.

Helpful hints:

To avoid damage to the set, use only the adapter supplied!

The type plate is located on the bottom of the set.

Setting OSD (On Screen Display) language

- Press **MENU**.
→The menu appears.
- Press ◀▶ to highlight "General".
- Press ▼ to highlight "Language".
- Press ◀▶ to select desired language.
- After finishing the setting, press **CLOCK**, **TUNER**, **PHOTO/VIDEO** or **MUSIC** to exit the setup menu.

Setting time and date



- Press **CLOCK**.
- Use **MENU**.
- Use ▲ ▼ ◀▶ to select a field of "Time Set" and "Date (Year-Month-Day)".
- Press **OK** to confirm.
- Press or hold down ▲ ▼ to set the values.
- Press **OK** to confirm.
- Repeat Steps 3-6 to set other values of "Time Set" and "Date (Year-Month-Day)".
- After finishing the setting, press **CLOCK**, **TUNER**, **PHOTO/VIDEO** or **MUSIC** to exit the setup menu.

Alarm

To change time format

- In the Clock menu, press ▲ ▼ to select the value of "12/24 Hour Format".
- Press ◀▶ to toggle between 12H and 24H.

Note:

When the set is disconnected from the power outlet for about 5 minutes, you need to reset the time and date.

Setting and activating alarm

You can set two different alarm times.

- Press **CLOCK**.
- Press and hold **ALARM 1** or **ALARM 2**.
→The hour digits flash.
- Press or hold down ▲ ▼ to set hour.
- Press **ALARM 1** or **ALARM 2** to confirm.
→The minute digits flash.
- Press or hold down ▲ ▼ to set minute.
- Press **ALARM 1** or **ALARM 2** to confirm.
- Press again **ALARM 1** or **ALARM 2** to activate alarm setting.
→When alarm is activated, ☹️ is displayed.
→At the set alarm time, the alarm will sound and its volume will increase gradually.

Selecting alarm mode

- Press **MENU**.
→The menu appears.
- Use ◀▶ to highlight "Clock".
- Press ▲ ▼ to select "Alarm Music".
- Press ◀▶ to select specific music you like.
→Alarm will go off with the music you select.

Switching off the alarm

There are three ways of switching off the alarm. Unless you choose to cancel the alarm completely, the DAILY ALARM RESET option will be automatically kept activated from the time your alarm first goes off. call at the same time for the following day:

Daily alarm reset

If you want the alarm to be stopped immediately but also wish to repeat the alarm

Digital tuner

- During the alarm call, press **ALARM 1** or **ALARM 2**.
→☹️ is displayed.

Repeat alarm

This will repeat your alarm call at 9-minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**.
→☹️ flashes.

Switching off the alarm completely

- Press repeatedly **ALARM 1** or **ALARM 2** until ☹️ is changed to 📞.
→When alarm is deactivated, 📞 is displayed.

Helpful hints:

During alarm call, if no button is pressed, alarm call will last 30 minutes.



Tuner

Tuning to radio station

- Press **TUNER** to switch on radio (FM only).
 - Press and hold ◀▶ for about 2 seconds, then release.
→The radio automatically tunes to a station of sufficient reception.
 - Repeat step 2 if necessary until you find the desired station.
- To tune to a weak station, press ◀▶ briefly and repeatedly until you have found optimal reception.

Turning on/off radio

- To turn off radio, press **OK**. To turn on radio, press **OK** again.

To improve reception:

FM: Extend and adjust the pigtail for optimum reception.

Programming radio stations

You can store up to a total of 20 FM radio stations in the memory, manually or automatically (Auto store).

Manual programming

- Tune to your desired station (See "Tuning to radio station").
- Press and hold **TUNER** for about 2 seconds, then release.
→Preset number will flash.
- Press ▲▼ once or more to allocate a number from 1 to 20.
→Preset number will flash.
- Press **TUNER** again to confirm.
- Repeat steps 1-4 to store other stations.

Note:

–You can erase a preset station by storing another frequency in its place.

Auto store

Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- In TUNER mode, press **MENU** to display tuner menu.
- Press ▼ to select "Tuner Auto Program".
- Press **OK**.
→Available stations are programmed (FM). After all stations are stored, the first autostore preset station will then automatically play.

To listen to a preset or autostore station

Press ▲▼ once or more until the desired preset station is displayed.

USB/Memory card(SD/MMC)

Using USB device/memory card (SD/MMC)

Connect a USB device, or a memory card (SD or MMC card) to AJL308, you can enjoy audio, picture and video files stored on the USB device or memory card through the speakers and LCD screen of AJL308.

Listening to music

- 1 Plug a compatible USB device or a memory card (SD or MMC) to USB port, or memory card slot.
→The folder(s) indicating the inserted device appears.
- 2 Press ▲ ▼ to select the folder of USB device (if present) or memory card (if present).
- 3 Press **OK** to open the folder.
→The set will auto switch to clock mode.
- 4 Press **MUSIC** to switch to music mode.
→All the stored music files are listed in the menu.
- 5 Press ▲▼ to select a file.
- 6 Press **OK** to play.
 - **To pause**, press **OK**. To resume, press **OK** again.
 - **To select next/previous file**, press ◀▶.
 - **To fast forward/reverse**, press and hold ▶ or ◀ until ▶▶ or ◀◀ appears on the lower-left corner of the screen, then press briefly and repeatedly to select 5 different playback speeds. To return to normal playback, press ▶ or ◀ until displayed ▶▶ or ◀◀ is change to ▶.
 - **To repeat One, All or Shuffle**, press once or more ▲▼. To cancel play mode, press ▲▼ until "Off" is display.

Viewing photo

- 1 Repeat steps 1 to 3 in "Listening to music".
- 2 Press **PHOTO/VIDEO** to switch to photo mode.
→The pictures stored on the USB device or memory card will be displayed in thumbnail.
- 3 To display a picture in full screen, press ▲ ▼ ◀▶ to select a thumbnail, then press **OK**.

→The slideshow of the stored pictures will start from the selected picture.

- Press ▲▼ to rotate the picture 90° clockwise or anti clockwise.
- Press ◀▶ to display previous/next photo.
- To change slideshow interval, see "**Using setup menu options**"

To view photo in clock mode


- Press **OK** to access thumbnail, then press ▲ ▼ ◀▶ to select desired photo, then press **OK** to confirm.
Or, directly press ▲(◀) /▼(▶) display previous/next photo.
- To enlarge the displayed photo (zoom mode), press and hold **CLOCK** for around 2 seconds, then press **OK** repeatedly to enlarge picture or resume to normal size, and you may use ▲ ▼ ◀▶ to pan the enlarged picture through. To exit zoom mode, press **CLOCK** again.



USB/Memory card(SD/MMC)

To select display picture format

- You may change still picture display format on the screen by selecting "Widescreen" or "Normal" under "Display Format" in the General Menu.

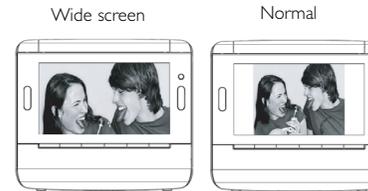

Viewing video

- 1 Repeat steps 1 to 3 in "Listening to music".
- 2 Press **PHOTO/VIDEO** to switch to **VIDEO** mode.
- 3 Press ▲▼ to select a video file.
- 4 Press **OK** to play.
 - **To pause**, press **OK**. To resume, press **OK** again.
 - **To display next/previous video file**, press once or more ◀▶.
 - **To fast forward/reverse**, press and hold ▶ or ◀ until ▶▶ or ◀◀ appears on the lower-left corner of the screen, then press briefly and repeatedly to select 5 different playback speeds. To return to normal playback, press ▶ or ◀ until displayed ▶▶ or ◀◀ is change to ▶.
 - **To repeat One/All**, press once or more ▼. To cancel play mode, press ▼ until "Off" is displayed.
 - **To switch between 16:9 and 4:3 screen ratio**, press once or more ▲.
 - **To select audio language**, press and hold ▲ (The feature is dependent on video file.)
 - **To select subtitle language**, press and hold ▼ (The feature is dependent on video file.)

Compatible USB device

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash player (USB 2.0 or USB 1.1)
- USB device which requires driver installation under Windows XP is not supported.

Compatible memory card

- SD card
- MMC card

Note:

In some USB flash players (or memory devices), the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as AJL308 device).

File compatibility

Music

- This device only supports unprotected music with the following file extension:
 - .mp3
 - .wma
- Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).

Picture

- This device only supports picture file with the following file extension:
 - .jpg

Video

- This device only supports video file with the following file:
 - MPEG4
 - DivX

Sleep / Illumination

Sleep

The clock radio has a built-in sleep timer, which enables the set to automatically turn off sound during radio or music playback after a set period of time.

Option 1:

- 1 Press **TUNER**.
- 2 Press **SLEEP** until your desired sleep option is displayed.
→Radio will turn on if radio was previously turned off.

Option 2:

- 1 Press **CLOCK** or **PHOTO/VIDEO** to enter respective mode.
- 2 Press **MENU**.
- 3 Press **◀▶** to highlight "General".
- 4 Press **▲▼** to select "Sleep Timer Music".
- 5 Press **◀▶** to select specific music you like.
→The set will turn on with the music you select.

Option 3: using USB/Memory card (SD/MMC)

- 1 Repeat steps 1-8 described in "Listening to music".
- 2 Press **SLEEP** until your desired sleep option is displayed.

To deactivate sleep function

When sleep is activated, **zZZ** is display.

- Press **SLEEP** until "Off" is displayed.

Illumination brightness

The LCD brightness can be adjusted manually and automatically.

Manually adjusting

- Press **REPEAT ALARM / BRIGHTNESS CONTROL** once or more to cycle screen brightness through 4 levels.


Automatically adjusting

To avoid strong light emitting from the unit at night time, the auto dim function can be used to adjust the brightness to the lowest level automatically.

- 1 Press **MENU**.
 - 2 Press **◀▶** to highlight "General".
 - 3 Press **▲▼** to select "Auto Dim Timer".
 - 4 Press **◀▶** to select "On".
 - 5 Press **▲▼** to select "Auto Dim - Start".
 - 6 Press **◀▶** to select the time that auto dim will start.
 - 7 Press **▲▼** to select "Auto Dim - End".
 - 8 Press **◀▶** to select the time that auto dim will end.
- When auto dim is set, during auto dim time span, the LCD brightness will be auto adjusted to the lowest level. Press any button to increase the brightness and it will last 10 seconds.

Using the stand

The set is equipped with a stand on the bottom panel. To set the set for a different viewing angle take the stand out, then place it back by reversing (see the figure below) the side of the stand.

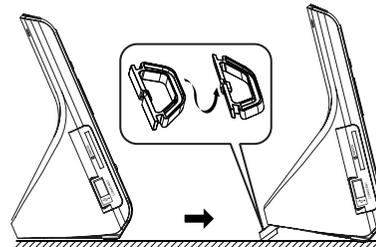

Setup menu

Using Setup menu options

The setup menu offers you advanced features.

- 1 Press **MENU**.
→The menu appears.
- 2 Press **◀▶** to select "General".
- 3 Press **▲▼** to select an item.
- 4 Press **◀▶** to select an option under the item.
- 4 After finishing the setting, press **CLOCK, TUNER, PHOTO/VIDEO** or **MUSIC** to exit the setup menu.

Setup	Option	Description
Language	English/Français/Deutsch/Español	Select a desired on screen display language
Brightness	-3~3	Select a brightness value
Auto Dim Timer	Off/On	Turns on or off auto dim for LCD brightness.
Auto Dim - Start	9: 00 PM	Set the start time for auto dim
Auto Dim - End	7: 00 AM	Set the end time for auto dim
Wall Paper	Blue/Green/Red/Purple	Select different color for LCD background
Sleep Timer Music	3 music files are preset	Select one file for sleep function
Picture Display	Slideshow mode/Browse mode	Select different mode to display picture
Slideshow Sequence	Sequential/Random	Select different slideshow sequence
* Slideshow Effect	None/Random /16 effects available	Select different slideshow effects
Slideshow Frequence	5 Seconds/10 Seconds/ 30 Seconds/ 1 Minute/ 5 Mintues/30 Minutes 1/ Hour/ 2 Hours	Select different slideshow intervals
Display Format	Wide screen/Normal	Select picture display format
File Information Display	Off/On	Turns on or off file name display
Video Display	Playback Time/Remain Time	Select different video time to be displayed
Photo With Music	On/Off	Select whether to enjoy music while viewing photos.
DivX VOD		Press OK to get DivX registration code.
Restore Default settings	Reset	Press OK to restore to the factory default settings.

* = To turn on slideshow effect, you must select slideshow mode in "Picture Display".

Safety and maintenance

Safety and general maintenance

- If you do not intend to use the clock radio for a long time, withdraw the power cord from the wall outlet.
- Place the set on a hard and flat surface so that the system does not tilt.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Install the unit near the AC outlet and where the AC power plug can be easily reached.
- The apparatus shall not be exposed to dripping or splashing
- Do not expose the set, batteries, to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not cover the set. Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

No sound.

- Volume not adjusted.
- Adjust the VOLUME.

Occasional crackling sound during FM broadcast.

- Weak signal.
- Extend the pigtail antenna fully.

The alarm does not function.

- Alarm time is not set.
- See section on Setting and activating alarm.
- Alarm is not activated.
- See section on Setting and activating alarm.

“No card is selected” is displayed on the screen.

- A USB device or memory card (SD or MMC) is not inserted.
- Insert a USB device or memory card (SD or MMC).

The screen brightness keeps turning dark.

- The set is in auto dim timing.
- To let the screen keep bright, turn off auto dim timer.

Note:

When opening the folder of an external device or its file stored in, read time may exceed the normal time due to large folder or file.

INFORMATION REGARDING USB DIRECT:

1. Compatibility of the USB connection on this product:
 - a) This product supports most USB Mass storage devices (MSD) that these devices are compliant to the USB MSD standards.
 - i) Most common Mass storage class devices are flash drives, memory sticks, jump drives and etc.
 - ii) If you see a "Disc Drive" showing up on your computer after you have plugged the mass storage device into your computer, most likely it is MSD compliant and it will work with this product.
 - b) If your Mass storage device requires a battery/power source, please make sure you have a fresh battery in it or charge the USB device first and then plug it into this product again.
2. Supported Music type:
 - a) This device only supports unprotected music with file extension: .mp3 .wma
 - b) Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).
 - c) File name extensions that ended with the following are not supported: .wav; .m4a; .m4p; .mp4; .aac and etc.
3. No Direct connection can be made from a Computer USB port to this product even you have either or both mp3 or wma file in your computer:

CAUTION

High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts. Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

Environmental information

All unnecessary packaging material has been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

This product complies with the FCC-Rules, Part 15.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and***
- 2. this device must accept any interference received, including interference that may cause undesired operation.***

Canada**English:**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30066-0026

3121 233 48802