


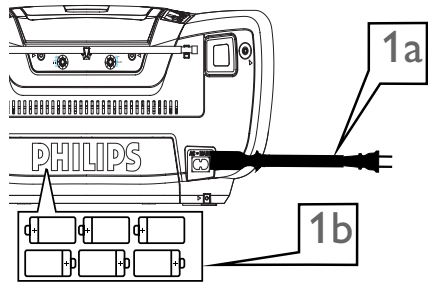

### 1 Choosing Power Supply


- a Connect the AC power cord to the **AC~ MAINS** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x D batteries (not included).



**R-20, UM-1 or D-cells (not included)**

### 2 Listening to Radio


- a Press **SOURCE** on the system repeatedly (or **TUNER** on the remote control) to select TUNER (FM or MW).
- b Press **PROG** for more than two seconds to program all available stations in order of waveband.
- c Press **ALB +/-** (or **ALBUM/PRESET ▲/▼** on the remote control) until the desired preset station is displayed.

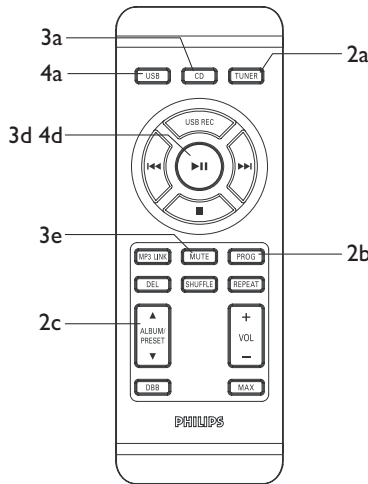

### 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Press **SOURCE** on the system repeatedly (or **CD** on the remote control) to select CD.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

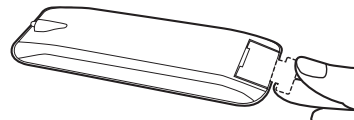

Removing the insulation plastic tab before use

### 4 Playing a USB device

- a Press **SOURCE** on the system repeatedly (or **USB** on the remote control) to select USB.
- c Plug a compatible USB device to AZ3846's USB port marked .
- d Press **▶||** on your AZ3846 to start play.

