

Register your product and get support at
www.philips.com/welcome

AJ3226

 
 
 


EN **User manual**

ZH-CN **用户手册**

PHILIPS

1

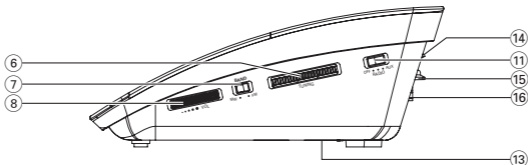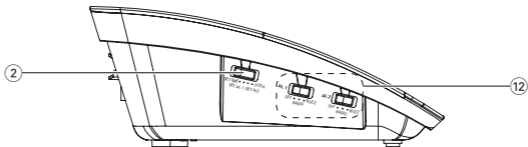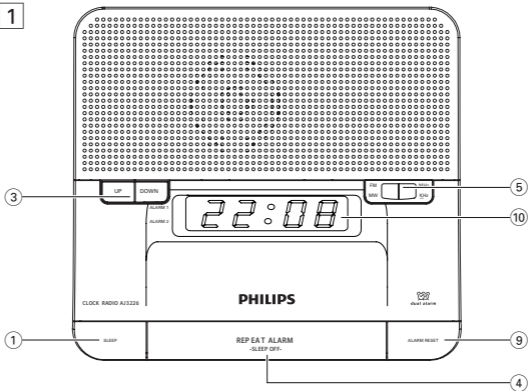

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Controls (see fig. 1)

- ① **SLEEP**
 - activates the radio for sleep function
 - adjusts the sleep period
- ② **Clock control**
 - **SET TIME**: sets the clock time
 - **SET AL 1**: sets the alarm time for alarm 1
 - **SET AL 2**: sets the alarm time for alarm 2
 - **CLOCK**: to run on clock time
- ③ **UP / DOWN**
 - adjusts the hours/ minutes for the clock and alarm times
- ④ **REPEAT ALARM / SLEEP OFF**
 - switches off the active alarm for a 6-7 minute period
 - switches off the sleep function
- ⑤ **Frequency indicator**
 - shows the radio frequency of your selected waveband
- ⑥ **TUNING**
 - tunes to radio stations
- ⑦ **BAND**
 - select FM/MW waveband
- ⑧ **VOLUME**
 - adjusts the sound level

- ⑨ **ALARM RESET**
 - stops the active alarm for 24 hours
- ⑩ **DISPLAY**
 - show the clock/ alarm times and status of the set
- ⑪ **OFF • RADIO • AUX**
 - switches off the set or selects the radio/AUX mode.
- ⑫ **AL 1, AL 2**
 - **OFF** switches off the alarm 1 or alarm 2
 - **RADIO** activates the radio for alarm 1 or alarm 2
 - **BUZZ** activates the buzzer for alarm 1 or alarm 2
- ⑬ **Battery door**
 - opens to store a 9 volt 6F22 type battery (not included) for clock memory backup
- ⑭ **Mains lead**
 - for AC mains supply
- ⑮ **Pigtail aerial**
 - improves FM reception
- ⑯ **AUX**
 - connects external audio source.

Installation

Power supply

- 1 Check if the mains supply, as shown on the type plate located on the bottom of the set, corresponds to your local mains supply. If it does not, consult your dealer or service centre.
- 2 Connect the mains lead to the wall socket.

- 3 To disconnect the set from the mains supply completely, remove the plug from the wall socket.



Note

- The type plate is located on the bottom of the set.

Clock memory backup

The clock memory backup allows your alarm and clock time settings to be stored for up to a day when there is a power interruption e.g. mains failure. The complete clock radio and display illumination will be switched off. As soon as the mains supply returns, the display will indicate the correct time.

- 1 Remove the battery door to insert a 9 volt 6F22 type battery (not included) for backup.
- 2 Replace the battery door.



Note

- If no backup battery is installed or the power interruption is prolonged, you will need to set the clock and alarm times again.
- Batteries contain chemical substances so should be disposed of properly.

Radio

You can use this set solely as a radio!

- 1 Adjust **OFF • RADIO • AUX** to **RADIO** to switch on the radio.
- 2 Select your waveband by adjusting the **BAND** switch.

- 3 Adjust **TUNING** to tune to your desired station.
- 4 Turn the **VOLUME** control to adjust the volume level.
- 5 Adjust **OFF • RADIO • AUX** to **OFF** to switch off the radio.

To improve reception:

FM: extend and position the pigtail for optimum reception.

MW: uses a built-in aerial inside the set. Direct the aerial by adjusting the position of your set.

Setting the clock and alarm time

The time is displayed using the 24-hour clock



Note

- To adjust the clock and alarm times accurately, always make sure you press **UP / DOWN** separately and not simultaneously.

- 1 Turn the clock control to **SET TIME** or **SET AL 1** or **SET AL 2** to set the clock or alarm time respectively.
- 2 Press **UP/DOWN** repeatedly or hold down on the respective button to adjust the hours and minutes.
- 3 Release **UP/DOWN** when you reach the correct setting.
- 4 After you have set both the hour and minutes, turn the clock control to **CLOCK** to run on clock time.

Selecting the alarm mode

GENERAL

If you wish to use the alarm, you must first set the alarm time first. You can choose from two different alarm modes to wake you up: by radio or buzzer.

- Select your choice of alarm mode by adjusting **AL 1** or **AL 2** to **RADIO** or **BUZZ**.
 - ↳ The buzzers are at a set volume and cannot be adjusted. **BUZZ** on **AL 1** is a low tone buzzer while **BUZZ** on **AL 2** is a high tone.

Switching off the alarm

There are three ways of switching off the alarm. Unless you cancel the alarm completely, the 24 hour alarm reset option will be automatically selected after 59 minutes, from the time your alarm time first goes off.

24 HOUR ALARM RESET

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

- Press **ALARM RESET** during the alarm call.

Canceling the alarm completely

To cancel the set alarm time before it goes off, or during the alarm call:

- Adjust **AL 1** or **AL 2** to **OFF** position.

Repeat alarm

This repeats your alarm call at 6-7-minute intervals.

- 1 During the alarm call, press **REPEAT ALARM/SLEEP OFF**.

SLEEP

About Sleep

This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. This allows you to lie back, listen and fall asleep. The maximum sleep time is 59 minutes.

Setting SLEEP

- 1 Check that the clock control is in **CLOCK** position.
- 2 Set **OFF • RADIO • AUX** to **OFF** position.
- 3 To set the sleep function, do one of the following:
 - Press and hold **SLEEP**.
 - ↳ The display will begin to count down from **0:59** to **0:00** minutes.
 - Hold down **SLEEP**, and press **UP/DOWN** repeatedly to adjust sleep time from 59 minutes downward.
 - ↳ To cancel sleep, press **REPEAT ALARM/SLEEP OFF**.

Connecting an external device

You can listen to your favorite music of the connected external device through your AJ3226's speakers.

- 1 Adjust **OFF • RADIO • AUX** to select **AUX**.

- 2 Connect the AUX-IN cable of the set to an AUDIO OUT or headphone jack on an external device (such as MP3 player, or CD player).
-

Safety information

- Install the unit near the AC outlet and where the AC plug can be easily reached.
- Where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Place the set on a hard and flat surface so that the system does not tilt.
- If you do not intend to use the set for a long time, withdraw the power plug from the wall outlet. In addition to this, it is advisable to remove the battery from the clock radio. This will prevent any danger of leakage and the clock radio will not be damaged.
- Do not expose the set, batteries to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc..
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in unsafe operation.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.



Warning

- Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty. Do not open the set as there is a risk of electric shock.

Problem

- Possible Cause
- Remedy

No sound/power

- Volume not adjusted
- Adjust the volume

Occasional crackling sound during FM broadcast

- Weak signal
- Adjust the position of the Pigtail

Continuous crackling/hiss disturbance during MW broadcast

- Electrical interference from TV, computer, fluorescent lamp, etc.
- Move set away from other electrical equipment

The alarm does not function

- Alarm time not set and or alarm mode not selected
- Set the alarm time and / select alarm mode
- Volume too low for RADIO
- Adjust the volume
- Radio alarm not adjusted to radio station
- Tune to a radio station

Environmental information

We have reduced packaging to the minimum for easy separation into two materials: paper and cardboard.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe local regulations on the disposal of packing materials and old equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Specifications

AC Power.....	220 V / 50 Hz
Power Consumption	
Active	5 W
Standby.....	<2 W
Dimensions (w x d x h).....	174 x 62 x 159 (mm)
Weight.....	0.52 kg



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

AJ3226_93_UM_V1.0

