

# 1 Connect

 
## Basic Connection

### A Before Connecting

You only need to make one video and audio connection, depending on the capabilities of your TV.

### B SCART connection to TV

A SCART connection will let you use features both audio and video on the DVD player.

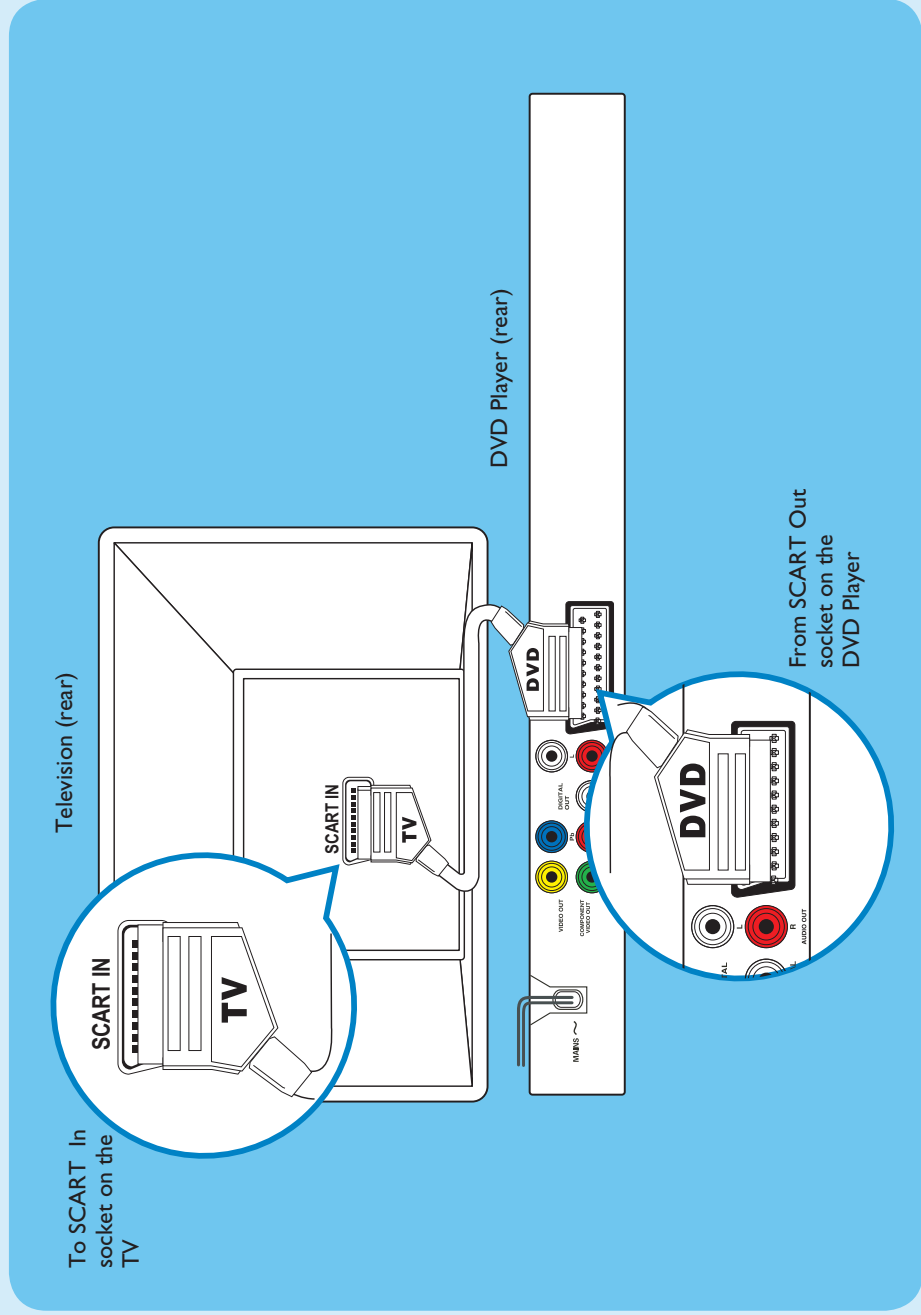


- 1 Use the black SCART cable (not supplied) to connect the SCART socket (TV OUT) on the rear panel of the DVD player and the SCART input socket at the rear of the TV.
- 2 Plug in the power cable from the DVD player to an AC power outlet.

**Note** See the accompanying user manual for other possible connections (e.g. S-VIDEO, Component Video).

# 2 Set up

 
## A Insert batteries in Remote Control

- 1 Remove batteries compartment cover.
- 2 Insert the provided batteries in the remote control. Take note of where the positive and negative ends should go.
- 3 Replace the batteries compartment cover.

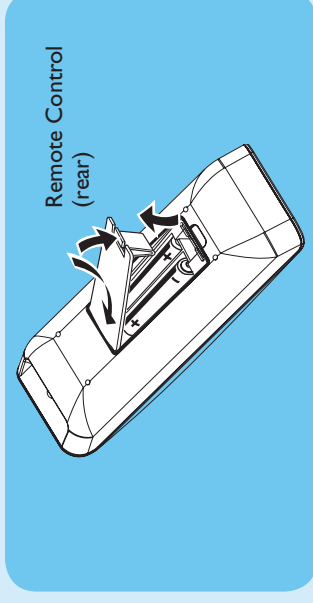


## B Finding the viewing channel

 - 1 Press **STANDBY-ON** on the DVD player's remote control.

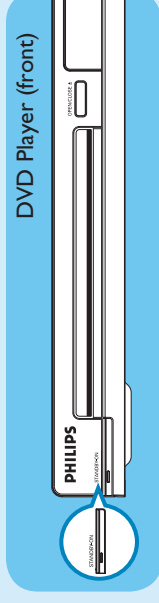


 - 2 Switch on the TV.
- 3 Press **SETUP**.

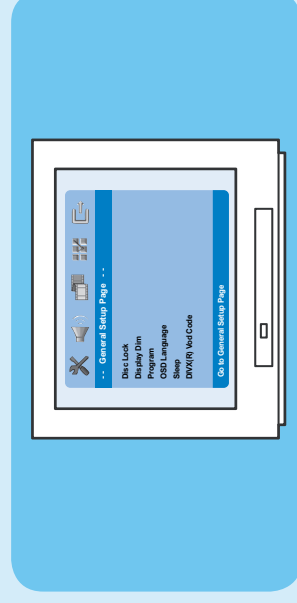

- 4 Press '0' on the TV's remote control, then repeatedly press the Channel Down button until you see the DVD background screen. This is the correct viewing channel for the DVD player.

 **Note** For some TVs, to find the correct viewing channel, you can keep pressing the AV or SELECT buttons, if still unable to find the correct viewing channel, check the connections again or check your TV's user manual.

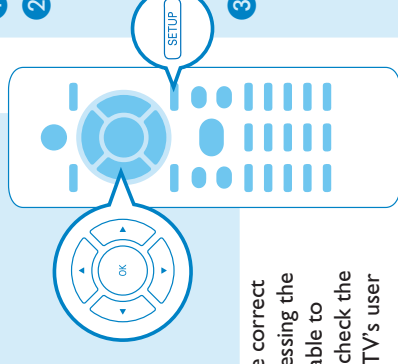

## C TV settings basic setup

Use the DVD player's remote control to select the settings that matches your country of residence and the TV settings.

### Selecting TV Settings

- 1 Press **▶** to select {Video Setup Page}.
- 2 Press **▲ ▼** to highlight one of the options, then press **▶** to enter into the submenu.  
In {**TV Type**}, options to select {PAL/NTSC/Multi}  
In {**TV Display**}, options to select {4:3 Panscan/4:3 Letterbox/16:9}
- 3 Press **▲ ▼** to highlight one of the options in the submenu according to your country of residence and the TV settings.
- 4 Select an option and press **OK**.

**Note** Follow the instructions shown on the TV to confirm the selection (if any).

## D Language preference setup

Use the DVD player's remote control to select the desired On-screen language, Audio language, Subtitle language and Menu language you preferred.

### Selecting On-screen language

- 1 Press **▶** to select {General Setup Page}.
- 2 Press **▲ ▼** to highlight {OSD Language}, then press **▶**.
- 3 Press **▲ ▼** to select a language and press **OK**.

**Note** The On-screen language for the setup menu will remain once you set it, regardless of various disc languages.

### Selecting disc languages

- 1 Press **▶** to select {Preference Page}.
- 2 Press **▲ ▼** to highlight one of the options, then press **▶** to enter into the submenu.  
In {**Audio**} - select disc's soundtracks languages  
In {**Subtitle**} - select disc's subtitles languages  
In {**Disc Menu**} - select disc's menu languages
- 3 Press **▲ ▼** to select a language and press **OK**.


**Note** If the language selected is not available on the disc, the disc's default language will be used instead.

# 3 Enjoy

DVD Video Player


DVP 3040
 
## A Inserting disc

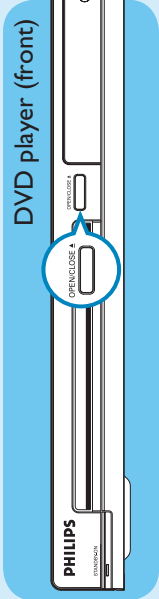

- 1 Press **OPEN/CLOSE** on the front of the DVD player.

 **Note** You can also hold down the **STOP ■** button on the remote control to open and close the disc tray.

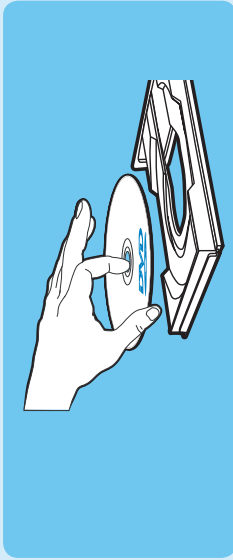

- 2 Place a disc into the disc tray with the label facing up. For doubled-sided discs, load the side you want to play facing up.
- 3 Press **OPEN/CLOSE** on the front of the DVD player again to close the disc tray.

## Troubleshooting

For more troubleshooting tips, see the user manual.

### Problem

No power

- Check if the AC power cord is properly connected.
- Press the **STANDBY-ON** on the front of the DVD player to turn on the power.

No picture

- Check connection to TV and ensure the plugs are firmly in place.

No sound or distorted sound

- Adjust the volume
- Check audio connections are in the correct input source.

Remote control does not work

- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and the DVD player.
- Point the remote control directly toward the IR sensor.

## Need help?

User Manual

For more product information refer to the user manual of the DVD player

Online

Go to [www.philips.com/support](http://www.philips.com/support)



2005 © Koninklijke Philips N.V.  
All rights reserved.  
[www.philips.com](http://www.philips.com)  
SL/0541/12\_14

# Quick Start Guide

 


1 Connect


2 Set up

3 Enjoy

## What's in the box?




DVD Video Player

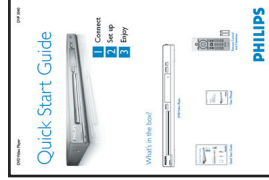 

Quick Start Guide



 User Manual

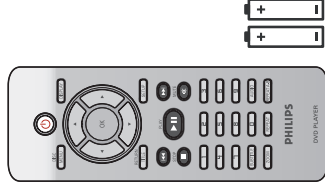

Remote Control  
and 2 batteries

# PHILIPS