

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CEM3000



EN Quick start guide

**PHILIPS**

## Quick start guide

### What's in the box

Check and identify the contents of your package:

- 1 Main unit
- 2 Remote control
- 3 Front panel
- 4 Trim plate
- 5 Carrying case for front panel
- 6 Sleeve
- 7 Rubber cushion
- 8 Screws x 4 pcs
- 9 ISO male connectors
- 10 Disassembly tools x 2 pcs
- 11 User manual
- 12 Quick start guide

### Select country/region

- 1 Press  $\odot$  to turn on the unit.
- 2 Rotate  $\odot$  to select an option:
  - [USA] (United States)
  - [Latin] (Latin America)
  - [Europe] (Western Europe)
  - [ASIA] (Asia Pacific)
  - [Mid-East ] (Middle East)
  - [Russia] (Russia)
- 3 Press  $\odot$  to confirm.

### Turn on

- 1 Press  $\odot$  to turn on the unit.
  - To turn off the unit, press  $\odot$  for over 3 seconds.

### Set clock

- 1 Press **MENU**.
- 2 Press  $\lll$ / $\ggg$  repeatedly until [CLK SET] displays.
- 3 Rotate  $\odot$  encoder clockwise to set hour.
- 4 Press  $\odot$  to confirm.
- 5 Rotate  $\odot$  encoder anti-clockwise to set minute.
- 6 Press  $\odot$  to confirm.

### Listen to radio

- 1 Press **SOURCE** repeatedly to select radio mode.
- 2 Press **BAND**/ $\rightarrow$  to select band: [FM1], [FM2], [FM3], [AW1] or [AW2].
- 3 Press  $\lll$  or  $\ggg$  to tune to a radio station manually.
  - $\rightarrow$  The radio station is broadcast.
  - $\rightarrow$  To search for a radio station automatically, press  $\lll$  or  $\ggg$  for over 3 seconds.

### Play a disc


- 1 Insert a CD with the printed side facing up.
  - $\rightarrow$  Play starts automatically.
    - To pause CD play, press  $\odot$ .
    - To resume CD play, press  $\odot$  again.
    - To skip to the previous/next track, press  $\lll$  or  $\ggg$ .
    - To search backward/forward rapidly within the current track, press  $\lll$  or  $\ggg$  for 3 seconds.

### Play from USB

- 1 Slide the USB socket cover marked  $\leftarrow$  to the left.
- 2 Insert the USB device into the USB socket.
  - $\rightarrow$  The unit starts playing from the USB device automatically.

---

## Play from iPod/iPhone

- 1 Slide the USB socket cover marked  to the left.
- 2 Insert USB adaptor on one end of iPod/iPhone cable to the USB socket on the main unit.
- 3 Insert the other end of the iPod/iPhone cable to the iPod/iPhone socket.
  - ↳ The unit starts playing from the USB device automatically.



© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.

CEM3000/x78\_QSG\_V1.0

