

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

AZ1327/55



---

EN User manual

---

**PHILIPS**

## 1 Important

---

### Safety

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.  
Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.

- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:
- Install all batteries correctly, + and - as marked on the apparatus.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
  - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 16) Apparatus shall not be exposed to dripping or splashing.
- 17) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 18) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).



## Warning

- Never remove the casing of this apparatus.
  - Never lubricate any part of this apparatus.
  - Never place this apparatus on other electrical equipment.
  - Keep this apparatus away from direct sunlight, naked flames or heat.
  - Never look into the laser beam inside this apparatus.
  - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



## Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

 


Be responsible  
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

**This apparatus includes this label:**



### **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.Philips.com/welcome](http://www.Philips.com/welcome).

## Introduction

With the CD Soundmachine, you can:

 
- play audio discs
- listen to FM/AM radio
- program the play sequence of tracks.

## What's in the box

Check and identify the contents of the package:

- Main unit
- AC power cord
- Aux cable
- User Manual
- Power adapter

## Overview of the main unit

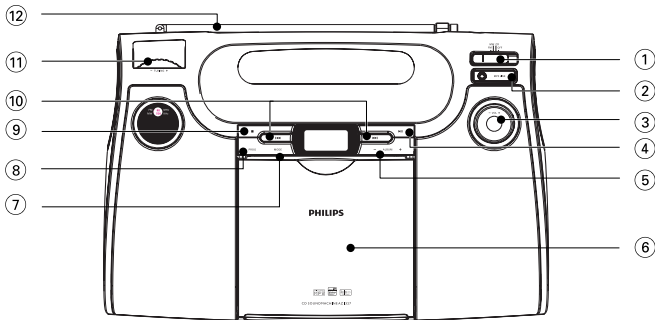

- ① **Source selector: CD, FM, AM, OFF.**
  - Select CD, FM, AM source or turn off the unit
- ② **MP3 LINK**
  - Socket for connecting an external device

- ③ **VOL+/-**
  - Adjust volume level
- ④ **▶||**
  - Start or pause play
- ⑤ **ALBUM+/-**
  - For MP3-CDs: skip to the next/previous album in an MP3-CD
- ⑥ **LIFT TO OPEN**
  - Open/close the CD compartment
- ⑦ **MODE**
  - Select a play mode: REPEAT or SHUFFLE
- ⑧ **PROG**
  - For MP3-CDs: program tracks and browse the program
- ⑨ **■**
  - Stop play
  - Erase a program
- ⑩ **|◀◀▶▶|**
  - Select the previous/next track
  - Search backward/forward
- ⑪ **TUNING+/-**
  - Tune to radio stations
- ⑫ **Telescopic antenna**
  - Adjust FM reception

# 3 Get started

## ! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

 
If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Install batteries

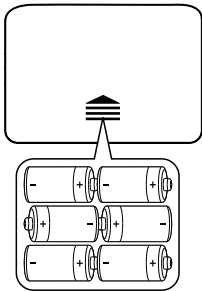


## ≡ Note

- You can use both batteries and AC power as power supply of this apparatus.
- Batteries are not supplied with the accessories.

- 1 Open the battery compartment.
- 2 Insert 6 x 1.5V R14/UM-2/C-cell batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

---
 
## Connect AC power

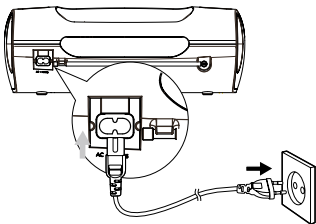

### Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the apparatus.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.



### Note

- Install the apparatus near the power supply socket and where the AC power plug can be easily reached.



- 1 Switch the voltage selector at the rear of the apparatus to the local power line voltage.



- 2 Connect the power cord to the **AC~ MAINS** socket on the apparatus and to the power supply socket.
  - To switch the apparatus off completely, disconnect the power cord from the power supply socket.



#### Note

- To save energy: After use, set the switch to **OFF**.

# 4 Use your CD Soundmachine

---

## Play a CD



### Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs:

- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)
- MP3-CDs
- WMA-CDs

- 1 Switch the source selector to **CD**.
- 2 Lift the lid of the CD compartment.
- 3 Insert a CD with the printed side facing up.
- 4 Close the CD lid gently.
  - ↳ The total number of tracks is displayed.
- 5 Press **▶||** to start play.
  - ↳ [**▶**] is displayed.
  - To pause CD play, press **▶||**.
  - To resume CD play, press **▶||** again.
  - To stop CD play, press **■**.

---

## Select a track

- 1 During play, press **◀◀▶▶** to select a track.

---

## Select an album

For MP3-CDs only.

- 1 During play, press **ALBUM+/-** to select an album.

---

## Find a passage within a track

- 1 During play, press and hold **|◀◀▶▶|**.
  - ↳ The CD is played at high speed and with reduced volume.
- 2 Release **|◀◀▶▶|** to resume normal play.



Tip

- When search reaches the end of the last track, the CD stops.

---

## Select play modes

### Repeat play

You can repeat a track, an MP3 album, a disc, or a program.

- [] – Repeat a track
  - [ ALL] – Repeat an entire CD/program
  - [ ALB] - Repeat an album
- 1 During play, press **MODE** repeatedly until the display shows .
    - To stop repeat play, press **MODE** repeatedly until is no longer displayed.

### Shuffle play

You can play all tracks in random order.

- 1 During play, press **MODE** repeatedly until the display shows .
  - To stop shuffle play, press **MODE** again.

---

## Program play sequence

You can store up to 20 tracks in the desired sequence.

- 1 In stop mode, press **PROG** to start to program play sequence.
  - ↳ [**PROG**] and [**P01**] are displayed.
- 2 For MP3-CDs: press **ALBUM+/-** to select an album.
- 3 Press to select a track.
- 4 Press **PROG** to store the track.
  - ↳ [**PROG**] and [**P02**] are displayed.
- 5 Repeat steps 2 to 4 to select and store all tracks.
  - ↳ When all 20 tracks are stored, no more tracks can be selected and the display shows [**PROG**] and [---].
- 6 To play program, press .
  - In stop mode, press **PROG** repeatedly to browse stored tracks.
  - To cancel program, press twice.



- When program play stops, the apparatus returns to normal play. To play program again, repeat steps 1 to 6.

---

## Listen to an external device

You can listen to an MP3 player through this apparatus.



- When you connect an external device to **MP3 LINK** jack, the apparatus switches to **MP3 LINK** source automatically.

- 1 Use an MP3 link cable (supplied) to connect **MP3 LINK** jack (3.5mm) on this apparatus and the headphone jack on an MP3 player.

---

## Listen to radio

- 1 Switch the source selector to **FM** or **AM**.
- 2 Turn **TUNING+/-** until you find optimal reception.



- To improve FM reception, you can extend, incline or turn the telescopic antenna for best reception.
- To improve AM reception, turn the apparatus to face a different direction.

# 5 Product information



## Note

- Product information is subject to change without prior notice.

Dimensions (W x H x D)	348 x 127 x 238 mm
Weight	1.6 kg 3.6 pound
Power supply	AC 110 - 127V AC 220 - 240V
Power consumption	Active <12 W
Power output	2 x 1 W RMS
Operating temperature range	-10 °C - 50 °C 14 °F -122 °F

# 6 Troubleshooting

---

## Troubleshooting



### Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.Philips.com/support](http://www.Philips.com/support)), or contact Philips (see Contact information). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the Mains cord is connected securely.
- Ensure that there is power at the AC Mains.
- Ensure that the batteries are inserted correctly.

### No sound

- Adjust the volume.
- Ensure that the track played is of a compatible format.

### Display does not function properly./No reaction to operation of any of the controls.

- 1 Disconnect the AC power cord.
- 2 Connect the AC power cord after a few seconds.

### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.
- Ensure that the laser lens is clean.
- Ensure that the CD is not encoded with copyright protection technologies.

### The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that program/shuffle mode is deactivated.



