

# Quick Start Guide










**Step A** *Connect*

**Step B** *Setup*

**Step C** *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

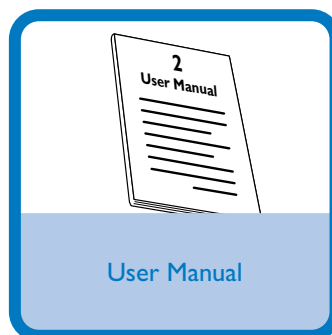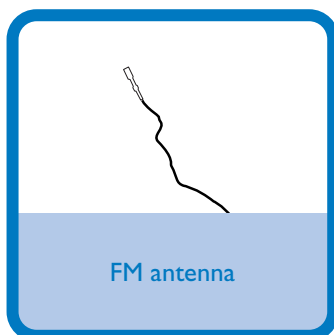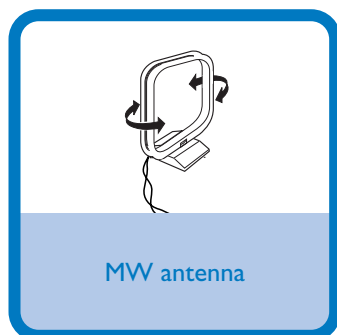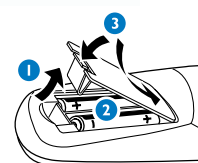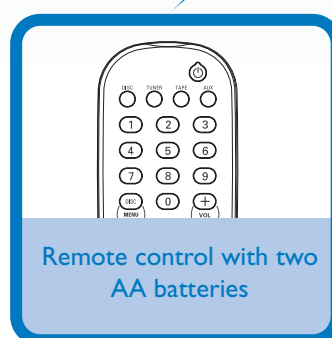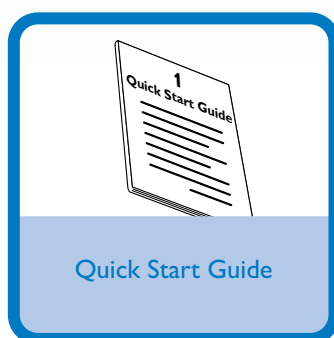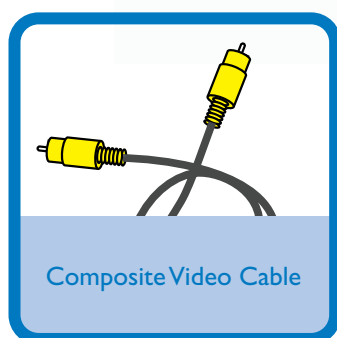

**PHILIPS**

## Step A *Connect*

### Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2


Connect the MW antenna.

3

Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

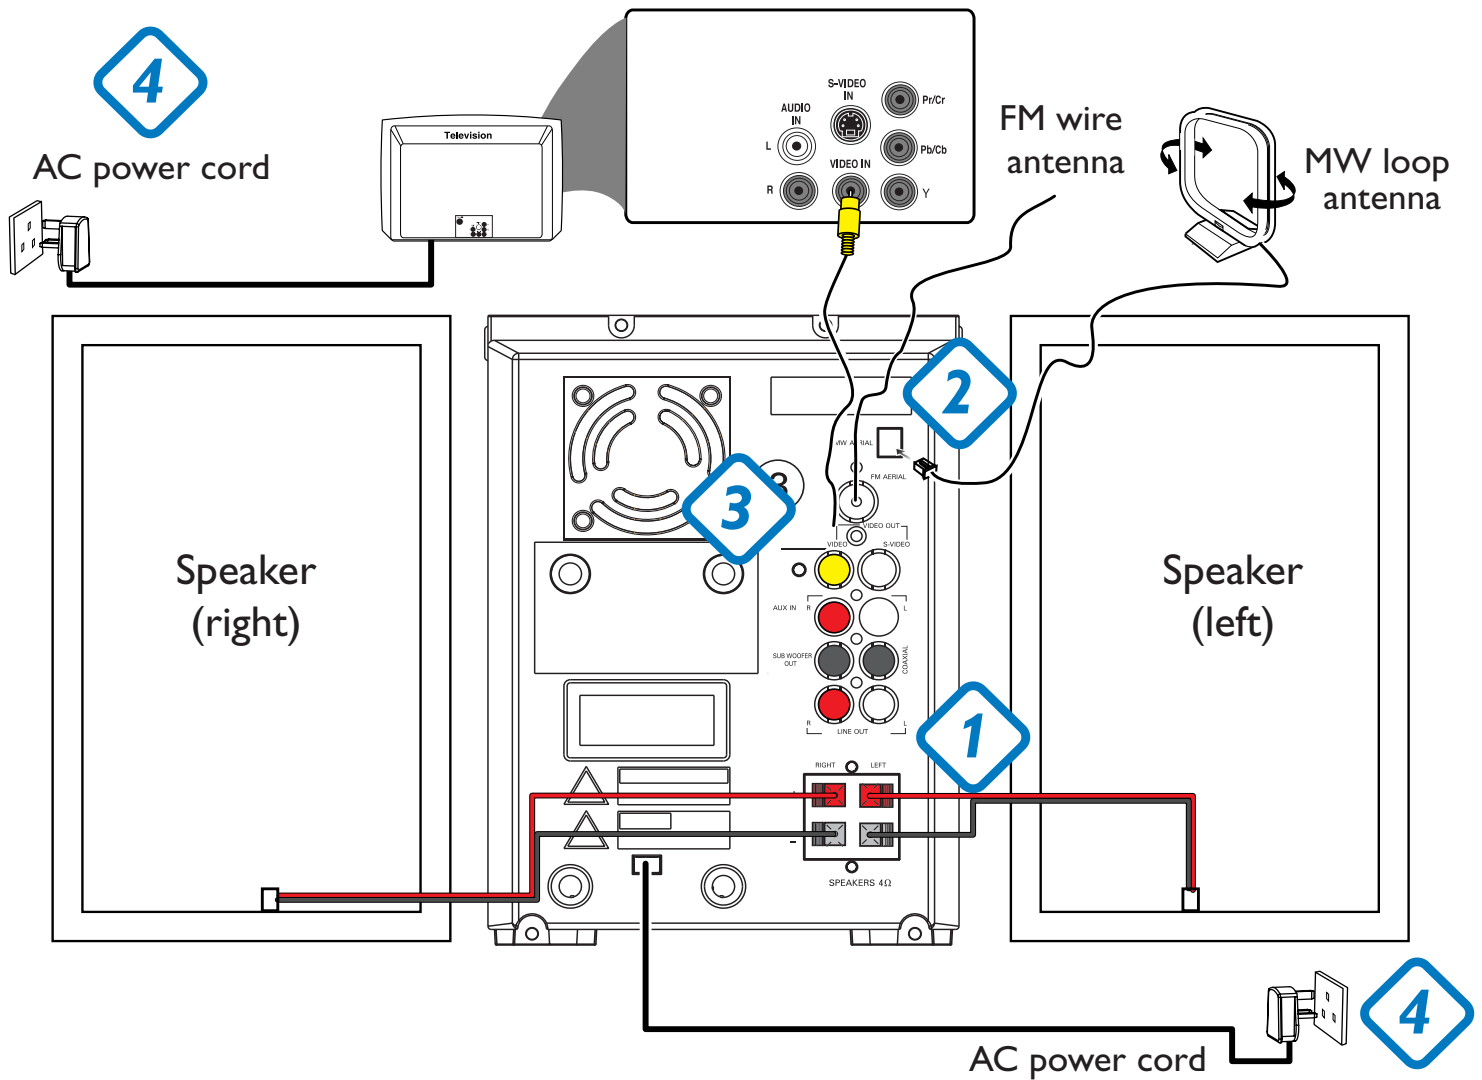

## Step B *Setup*


### Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

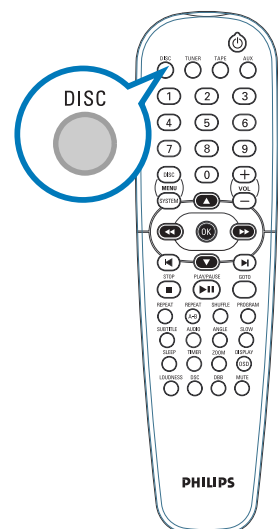






## Step B Setup

### Setting the clock

- 1 In standby mode, press and hold **CLOCK/RDS** on the system.
- 2 When the hour digits flash, turn the **VOLUME** control on the front panel or press **VOLUME +/-** on the remote to set the hours.
- 3 Press **CLOCK/RDS** again and the minute digits flash. Then turn the **VOLUME** control on the front panel or press **VOLUME +/-** on the remote to set the minutes.
- 4 Press **CLOCK/RDS** again to confirm the time setting.

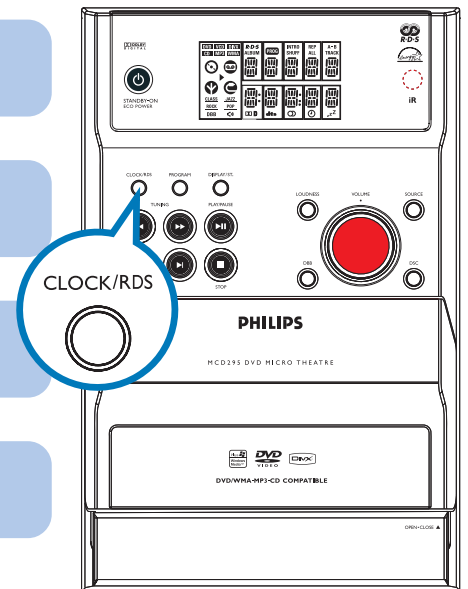

### Setting system menu options

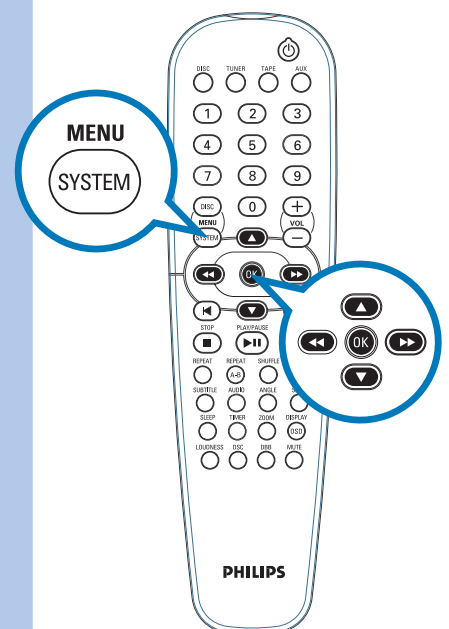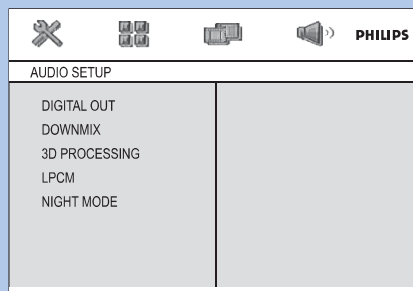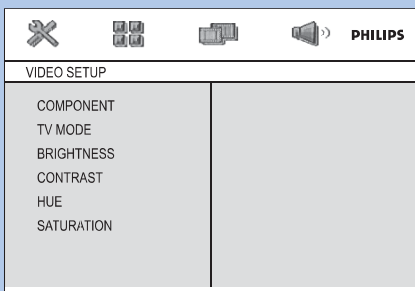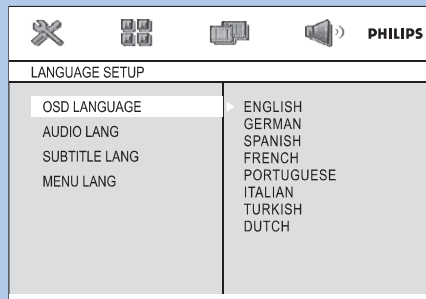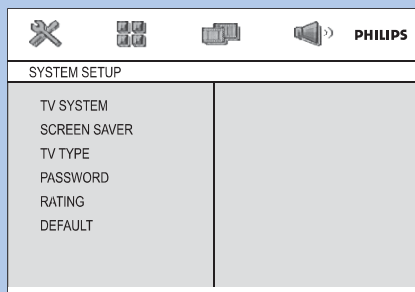

#### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.


## Playing a disc



- 1 Press **OPEN•CLOSE▲** to open the disc tray and load in a disc, then press the same button again to close the disc tray.  
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **PLAY/PAUSE▶II**.

- 3 To stop playback, press **STOP■**.

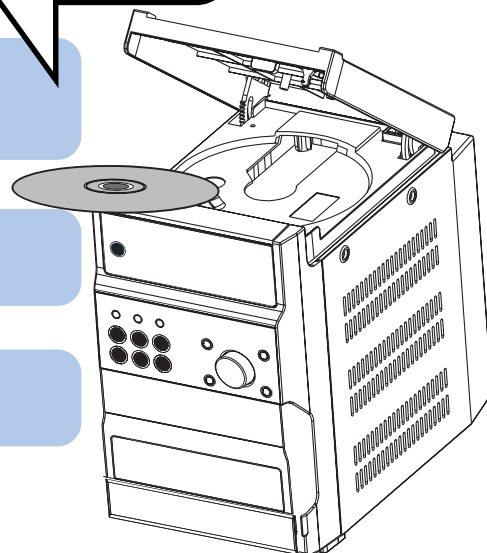

## Programming and tuning to radio stations

- 1 Press **SOURCE (TUNER)** on the remote to select tuner source.

- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.

- 3 Press **PRESET◀/▶** until the desired preset station is displayed.

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

