

MP3-CD Mini Hi-Fi System

FWM996

Register your product and get support at
www.philips.com/welcome

User manual

Manual do usuário

Manual del usuario



PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA	
	No abrir, riesgo de choque eléctrico	
	ATENCIÓN	
	Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

 
 
Descripción: **Minisistema de Audio**
Modelo: **FWM996/55**
Alimentación: **110-127 / 220-240V~ ; 50/60 Hz**
(for the main unit and the subwoofer each)
Consumo: **90W (for the main unit)**
100W (for the subwoofer)
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
Nº de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

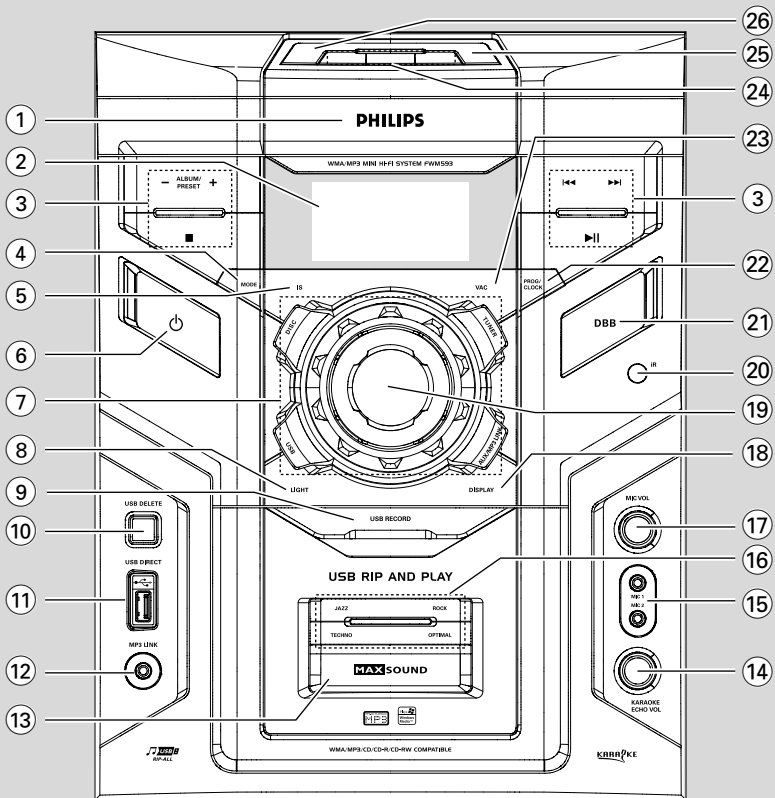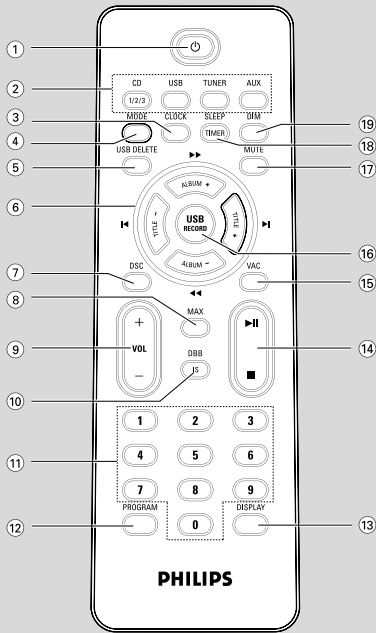

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.




ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

CUIDADO

A utilização de comandos ou ajustes ou a execução de procedimentos diferentes dos descritos neste manual podem provocar uma exposição a radiações perigosas ou outras operações inseguras.

PLUG & PLAY
(for tuner installation)

- 
Plug in the unit
- 
Follow instructions in the display
- 
Press "PLAY"

Index

English 6

Español 32

Português 52

English

Español

Português

Contents

General Information

Supplied accessories	7
Environmental information	7
Safety information	7

Preparations

Rear connections	8~9
Power	
Antenna connection	
Speakers connection	
Optional connection	9~10
Connecting a USB device or memory card	
Connecting other equipment to your system	
Inserting batteries into the remote control	10

Controls

Controls on the system	11
Controls on remote control	12

Basic Functions

Plug and Play	13
Switching the system on	13
Switching the system to standby mode	14
Power-saving automatic standby	14
Dim mode	14
Volume control	14
Sound control	14~15
MAC sound	
DSC (Digital Sound Control)	
DBB (Dynamic Bass Boost)	
Incredible Surround	
Karaoke	15

CD/MP3-CD/WMA Operations

Discs for playback	16
About MP3 disc	16
Loading discs	16~17
Playing discs	17
Replacing discs during playback	17
Selecting a desired track/passage	17
Selecting a desired Album/Title (MP3/WMA disc only)	17
Different play modes: SHUFFLE and REPEAT	18
Programming the disc tracks	18
Erasing the programme	18

Radio Reception

Tuning to radio stations	19
Programming radio stations	19~20
Automatic programming	
Manual programming	
Tuning to preset radio stations	20
Changing tuning grid	20

USB

Using a USB mass storage device	21~22
Ripping function	23
Tuner record timer setting	24
To deactivate the TIMER	
To activate the TIMER	

External Sources

Listening to external sources	25
-------------------------------------	----

Clock/Timer

Clock setting	26
Timer setting	26~27
To deactivate the TIMER	
To activate the TIMER	
Sleep timer setting	27

Maintenance

.....	28
-------	----

Specifications

.....	29
-------	----

Troubleshooting

.....	30~31
-------	-------

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

IMPORTANT!

PLEASE NOTE THAT THE VOLTAGE SELECTOR LOCATED AT THE REAR OF THIS SYSTEM IS PRESET AT 220V FROM THE FACTORY. FOR COUNTRIES THAT OPERATE AT 110V-127V, PLEASE ADJUST TO 110V-127V BEFORE YOU SWITCH ON THE SYSTEM.

Supplied accessories

- 2 AC power cords for the main unit and the subwoofer each
- 2 front speakers
- 2 rear speakers
- 1 subwoofer
- remote control with 2 AAA batteries
- AM loop antenna
- FM wire antenna
- DIN cable
- MP3 link cable

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

 
Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Safety information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.

- Where the MAINS plug or an appliance coupler is used as the disconnet device, the disconnet device shall remain readily operable.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Don't expose the system to dripping or splashing.
- Install this unit near the AC outlet and where the AC power plug can be reached easily.
- The lens may cloud over when the system is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the system in the warm environment until the moisture evaporates.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**

Preparations

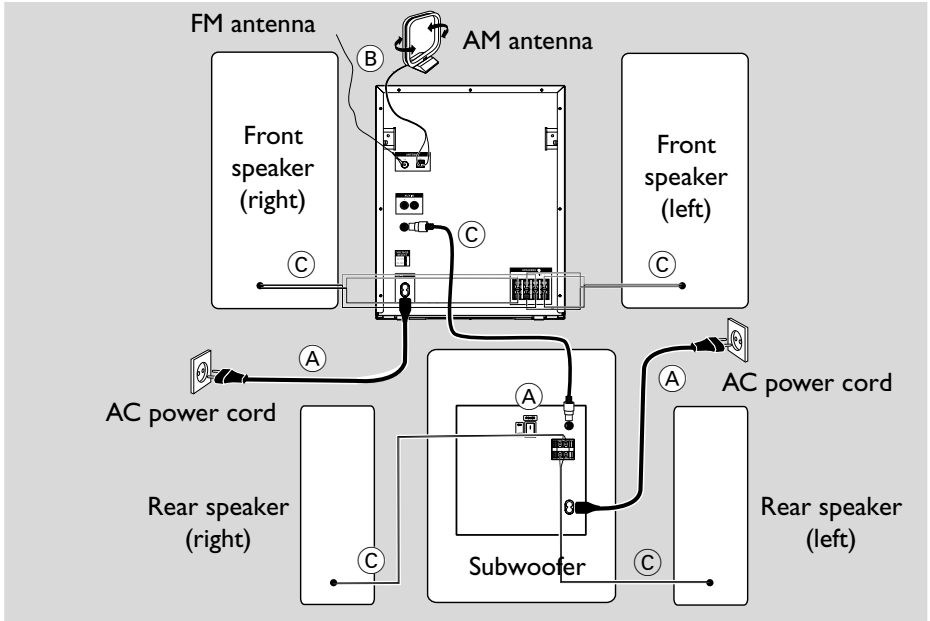

Rear connections

The type plate is located at the rear of the system.

(A) Power

- If your system is equipped with a Voltage Selector; set the VOLTAGE SELECTOR to the local power line voltage.
- Before connecting the AC power cords of the main unit and the subwoofer to the wall outlet, ensure that all other connections have been made.
- To turn on or off the subwoofer; press POWER switch located on the back of the subwoofer.

WARNING!

 
- For optimal performance, use only the original power cable.
- Never make or change any connections with the power switched on.
- High voltage! Do not open. You run the risk of getting an electric shock.
- The machine does not contain any user-serviceable parts.
- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

(B) Antennas Connection


Connect the supplied AM loop antenna to the AM ANTENNA terminal. Adjust the position of the antenna for optimal reception.

AM Antenna

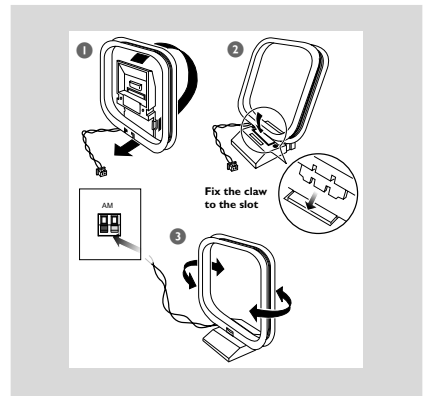

- Position the antenna as far as possible from a TV, VCR or other radiation source.

 FM Antenna

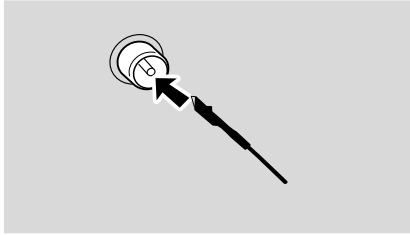

- For better FM stereo reception, connect an outdoor FM antenna to the FM ANTENNA terminal.

Speakers Connection

Front Speakers

 
- Connect the speaker wires to the SPEAKERS terminals on the main unit, right speaker to "R" and left speaker to "L", white wires to "+" and black wires to "-" of the woofer connection terminals, blue wires to "+" and black wires to "-" of the tweeter connection terminals.

Subwoofer

- Connect the supplied DIN cable to SUBWOOFER jack on the main unit and to FROM MAIN jack on the subwoofer.

Rear Speakers

- Connect the speaker wires to the SPEAKERS terminals on the subwoofer; right speaker to "R" and left speaker to "L", purple wires to "+" and black wires to "-" .

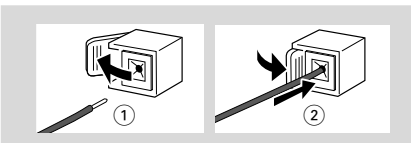

- Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

 
- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of + / - speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Optional connection

The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.


Connecting a USB device or memory card

By connecting a USB mass storage device (including USB flash memory, USB flash players or memory cards) to the Hi-Fi system, you can enjoy the device's stored music through the powerful speakers of Hi-Fi system.

- Insert the USB device's USB plug into the  socket on the set.


OR

 for the devices with USB cables:

- 1 Insert one plug of the USB cable (not supplied) to the  socket on the set.
- 2 Insert the other plug of the USB cable to the USB output terminal of the USB device.

OR

for the memory card:

- 1 Insert the memory card into a card reader (not supplied).
- 2 Use a USB cable (not supplied) to connect the card reader into the  socket on the set.

Connecting a non-USB device

Using AUX IN (white/red jacks)

- Use the audio cables (white/red, not supplied) to connect **AUX IN (L/R)** jacks of the main unit (located on the back panel) to the corresponding AUDIO OUT jacks on an external device (such as TV or VCR).

Note:

- If you are connecting equipment with a mono output (a single audio out terminal), connect it to the AUX left terminal. Alternatively, you can use a "single to double" cinch cable (the output sound still remain mono).

 
Preparations

Using MP3 LINK (3.5 mm jack)

- Use a MP3 link cable (supplied) to connect **MP3 LINK** jack of the main unit (3.5 mm, located on the front panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, or VCR).

Inserting batteries into the remote control

Insert two batteries (Type R03 or AAA, supplied) into the remote control with the correct polarity as indicated by the "+" and "-" symbols inside the battery compartment.

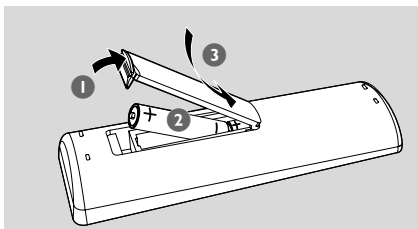

CAUTION!

- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Controls on the system

① Disc tray

② Display screen

- to view the current status of the system.

③ Mode Selection

ALBUM/PRESET +/-

- for MP3-CD to select previous/next album.
- for Tuner to select a preset radio station for Clock/Timer to set the hour.
- for Clock to switch between 12 hour and 24 hour display.



- for CD/ MP3-CD .. to stop playback or to clear a programme.

- for Clock to exit clock setting.

▶ II

- for CD/ MP3-CD .. to start or interrupt playback.



- for MP3-CD to select previous/next title.
- for CD to skip to the beginning of the current, previous, or next track.

for CD/MP3-CD/USB/WMA

- (press and hold) to search backward/forward.

- for Tuner to tune to a lower or higher radio frequency.

- for Clock/Timer to set the minute.

④ MODE

- to select various repeat modes or the shuffle play mode for a disc.

⑤ IS (Incredible Surround)

- to activate or deactivate the surround sound effect.

⑥

- to switch the system on or to standby mode.

⑦ Source selection – to select the following:

DISC

- to select disc tray 1, 2 or 3.

TUNER

- to select waveband: FM or AM.

USB

- to select USB source.

AUX/MP3 LINK

- to select the input for an additional appliance: AUX.

- to select the input for an additional appliance: MP3 LINK.

⑧ LIGHT

- to select different lighting effects for some buttons on the main unit (Light 1/2/3/4/Off).

⑨ USB RECORD

- to copy music to an external portable USB storage device.

⑩ USB DELETE

- to delete music stored on the external USB device.

⑪ USB DIRECT

- jack for the external USB mass storage device.

⑫ MP3 LINK jack

- to connect an external device.

⑬ MAX SOUND

- to activate or deactivate the optimal mix of various sound features.

⑭ KARAOKE ECHO VOL

- to adjust the echo level.

⑮ MIC 1/2

- to connect microphone

⑯ DSC

- to select different types of preset sound equaliser settings (OPTIMAL, TECHNO, ROCK or JAZZ).

⑰ MCIVOL

- to adjust the mixing level for Karaoke

⑱ DISPLAY

- to select disc information display mode.

⑲ VOLUME

- to increase or decrease the volume.

⑳ iR

- infrared sensor for remote control.

㉑ DBB

- to select the desired bass boost level. (DBB 1, DBB 2, DBB 3 or DBB OFF).

㉒ PROG/CLOCK

- for CD/ MP3-CD .. to programme disc tracks.
- for Tuner to programme preset radio stations.
- for Clock to view or set the clock.

㉓ VAC

- to select different type of ambience-based equaliser settings (HALL, CONCERT or CINEMA).

㉔ DISC 1/2/3

- to select a disc tray for playback.

㉕ OPEN•CLOSE


- to open or close the disc tray.


㉖ DISC CHANGE

- to change disc (s).

Controls


Controls on remote control

- ①  – to switch the system on or to standby mode.
- ② **Source selection** – to select the following:
CD 1/2/3
 – to select disc tray 1, 2 or 3.
TUNER
 – to select waveband: FM or AM.
AUX
 – to select the input for an additional appliance: AUX or MP3 LINK.
USB
 – to select USB source.
- ③ **CLOCK**
 – to view or set the clock.
- ④ **MODE**
 – to select different play modes: e.g. REPEAT or SHUFFLE (random order).
- ⑤ **USB DELETE**
 – to delete music stored on the external USB device.
- ⑥ **Mode Selection**
ALBUM - / + (◀|▶)
 for MP3-CD/USB/WMA
 to select previous/next album.
 for CD/MP3-CD/USB/WMA
 (press and hold) to search backward/forward.
 for Tuner to tune to a lower or higher radio frequency.
 for Clock/Timer to set the hour.
 for Clock to switch between 12 hour and 24 hour display.
- TITLE - / + (◀|▶)**
 for MP3-CD/WMA
 to select previous/next title.
 for CD to skip to the beginning of the current, previous, or next track.
 for Tuner to select a preset radio station.
 for Clock to set the minute.
- ⑦ **DSC**
 – to select different types of preset sound equaliser settings (OPTIMAL, TECHNO, ROCK or JAZZ).

- ⑧ **MAX**
 – to activate or deactivate the optimal mix of various sound features.
- ⑨ **VOL +/-**
 – to increase or decrease the volume.
- ⑩ **DBB/IS (Incredible Surround)**
 – to select the desired bass boost level. (DBB 1, DBB 2, DBB 3 or DBB OFF).
 – to activate or deactivate the surround sound effect.
- ⑪ **Numeric Keypad (0-9)**
 – to input a track number of the disc.
- ⑫ **PROGRAM**
 for CD/ MP3-CD ..to programme disc tracks.
 for Tuner to programme preset radio stations.
- ⑬ **DISPLAY**
 – to select disc information display mode.
- ⑭  **■**
 for CD/ MP3-CD/WMA
 to stop playback or to clear a programme.
 for Tuner to stop programming.
 for Clock to exit clock setting.
 for Plug&Play to exit plug&play mode.
- ▶ II**
 for CD/ MP3-CD/WMA
 to start or interrupt playback.
- ⑮ **VAC**
 – to select different type of ambience-based equaliser settings (HALL, CONCERT or CINEMA).
- ⑯ **USB RECORD**
 – to copy music to an external portable USB storage device.
- ⑰ **MUTE**
 – to mute or restore the volume.
- ⑱ **SLEEP (TIMER)**
 – to activate/deactivate or set the sleep/ wake-up timer.
- ⑲ **DIM**
 – to select different levels of display brightness (DIM 1/2/3/OFF).

Notes for remote control:

 - First, select the source you wish to control by pressing one of the source select keys on the remote control (CD 1/2/3 or TUNER, for example).
 – Then select the desired function (▶ II, ◀, ▶, for example).

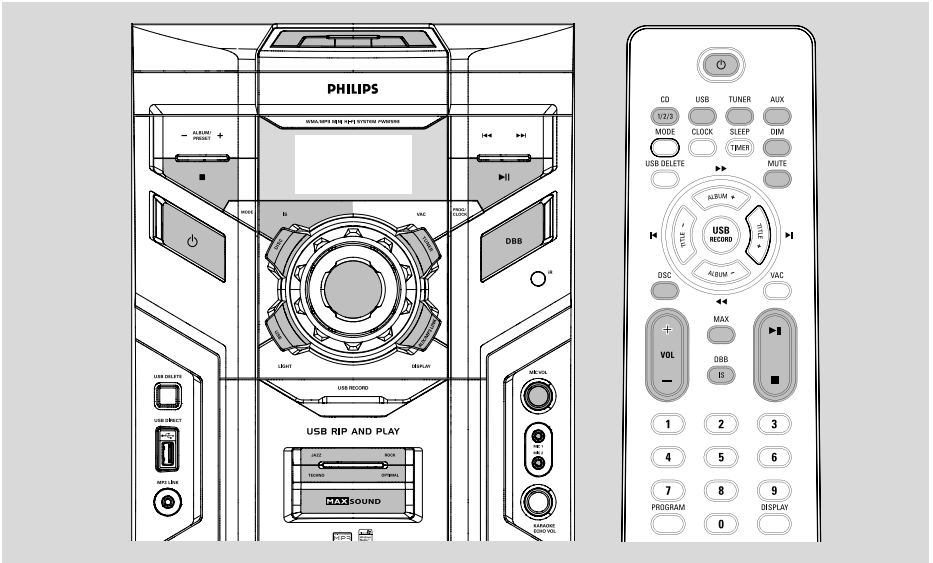

IMPORTANT!

Before you operate the system, complete the preparation procedures.

Plug and Play (for tuner installation)

Plug and Play allows you to store all available radio stations automatically.

First time setup/power up

- 1 When you turn on the main supply, "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►► to start installation.
 - "PLUG AND PLAY" "INSTALL" is displayed, followed by "AUTO".
 - All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by AM band.
 - When all the available radio stations are stored or the memory for 40 presets are used, the first preset radio station will be played.

To reinstall Plug and Play

- 1 In standby mode, press and hold ►► until "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press ►► again to start installation.
 - All previously stored radio stations will be replaced.

To exit without storing the Plug and Play

- Press ■.
- If you do not complete the Plug and Play installation, the function will be restarted when you next turn on the main supply again.

Notes:

- When the power is turned on, the disc tray may open and close to initialise the system.
- If no stereo frequency is detected during Plug and Play, "CHECK ANTENNA" will be displayed.
- During Plug and Play, if no button is pressed within 15 seconds, the system will exit Plug and Play mode.

Switching the system on

- Press ⏻.
- The system will switch to the last selected source.
- Press **DISC** (or **DISC 1/2/3**, **CD 1/2/3**), **TUNER**, **AUX/MP3 LINK** (or **AUX**) or **USB**.
 - The system will switch to the selected source.
- Press **OPEN-CLOSE** or **DISC CHANGE**.
 - The system will switch to the disc source and the disc tray will open.

Basic Functions

Switching the system to standby mode

In any other source mode

- Press **⏻**.
→ The clock will appear on the display when the system is in standby mode.

Power-saving automatic standby

As a power-saving feature, the system will automatically switch to Standby mode if you do not press any buttons within 15 minutes after a disc/USB has stopped playing.

Dim mode

You may select three levels of display brightness.

- Press **DIM** on the remote control to select : DIM 1, DIM 2, DIM 3 or DIM OFF.

Volume control

Adjust **VOLUME** to increase (turn knob clockwise or press **VOL +** on the remote control) or decrease (turn knob anti-clockwise or press **VOL -** on the remote control) the sound level.

To switch off the volume temporarily

- Press **MUTE** on the remote control.
→ Playback will continue without sound and the **MUTE** is displayed.
- To restore the volume, press **MUTE** again or increase/decrease the volume level.

Karaoke

Connect a microphone (not supplied) to the system allowing you to sing along with the music source.

- 1 Connect a microphone to the **MIC 1/2** jack.
- Before connecting the microphone, set the microphone **MIC VOL** to the minimum level to prevent howling sound.
- 2 Press **DISC** (or **DISC 1/2/3**, **CD 1/2/3**), **TUNER**, **AUX/MP3 LINK** (or **AUX**) or **USB** to select the source to be mixed and start playback.
- 3 Adjust the volume level of the source with **VOLUME** control.
- 4 Adjust the microphone volume with the microphone **MIC VOL** control.
- 5 Adjust the echo level with the **KARAOKE ECHO VOL** control.

Note:

– *Keep the microphone away from the speakers to prevent howling.*

Light control

There are 6 button's LEDs on the front panel of the set. Different LEDs will turn on or flash in different styles when the set is in different situations.

Lighting in normal modes

As shown in the table below, by pressing (or rotating) the corresponding buttons, the respective LEDs light up or flash.

LED definition	SATNDBY Indicator	DBB Indicator	VOLUME Indicator	USB Indicator	USB Ripping Indicator	MAX Indicator
Normal Mode						
Standby mode	On					
POWER ON			On	Half lighted	On	
DBB ON		On				
MAX ON						On
VOLUME setting			Flashes			
USB Mode				On		
USB Ripping/deletion					Flashes	

Basic Functions

Light mode demonstration

- Press once or repeatedly LIGHT on the set to demonstrate different lighting styles.
- First press -> It flashes alternatively between the three LEDs (STANDBY, DBB and USB) and another three LEDs (VOLUME, USB Ripping and MAX). (Three LEDs are used as a group with simultaneous on and off.)
- Second press -> It flashes one LED by another LED in the sequence of STANDBY, DBB, USB, VOLUME, USB Ripping and MAX.
- Third press -> It flashes one LED by another LED in a random order among all the LEDs.
- Fourth press -> All the LEDs turn off.
- Fifth press -> It returns to the normal mode as stated in the aforementioned table.

Sound control

For optimal sound listening, select only one of the following navigation sound controls at a time: MAX or DSC.

MAX Sound

MAX sound provides the best mixture of various sound features (DSC, DBB, for example).

- Press **MAX SOUND** (or **MAX** on the remote control) repeatedly.
 - If activated, **MAX ON** is shown and MAX SOUND button lights up.
 - If deactivated, **MAX OFF** is displayed.

Note:

- When MAX sound is selected, DBB 3 will switch on.

DSC (Digital Sound Control)

The DSC feature enables you to enjoy special sound effects that have preset equaliser settings, providing the best music reproduction.

- Press **DSC** to select : OPTIMAL, TECHNO, ROCK or JAZZ.
 - The selected DSC is shown.

DBB (Dynamic Bass Boost)

There are three DBB settings to enhance the bass response.

- Press **DBB (DBB/IS** on the remote control) to select : DBB 1, DBB 2, DBB 3 or DBB OFF.
 - The selected **DBB** is shown and DBB button lights up, except for DBB OFF mode.

Note:

- Some discs might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.

Automatic DSC-DBB selection

The best DBB setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.


DSC	DBB
JAZZ	off
ROCK	on (2)
TECHNO	on (3)
OPTIMAL	on (1)

Incredible Surround

The Incredible Surround magnifies the virtual distance between the front speakers for an incredibly wide, enveloping stereo effect.

- Press **IS** on the set.
 - Or, press and hold **DBB/IS** on the remote control.
 - If activated, "INC SURR" is displayed.
 - If deactivated, "IS OFF" is displayed.

 CD/MP3-CD/WMA Operations

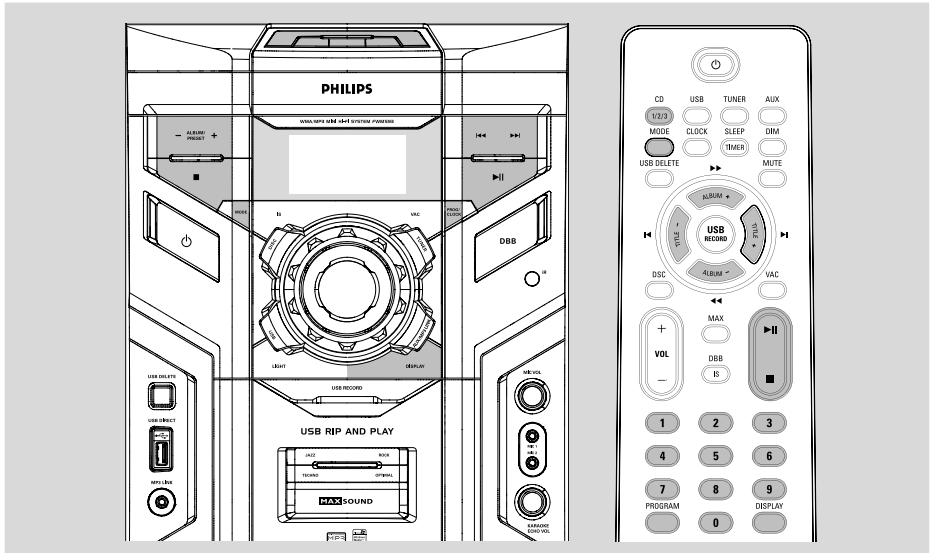

IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the changer mechanism.
- Do not load more than one disc into each tray.

Discs for playback

This system can playback all digital audio CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.

MP3-CDs/WMA (CD-ROMs with MP3/WMA tracks)

* DRM-protected WMA is not supported.



 
About MP3 disc

Supported formats

- ISO9660, Joliet, Multisession
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- The max. MP3 program track number is 40
- Supported VBR bit-rate
- Supported sampling frequencies for MP3 disc are: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps)

Loading discs

- 1 Press **OPEN•CLOSE** to open the disc tray.
- 2 Load up to two discs on the individual disc trays. To load the third disc, press **DISC CHANGE**.
➔ The disc tray will rotate until the empty tray is ready for loading.

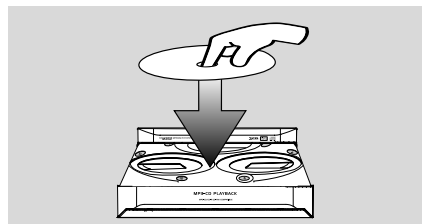

- Press **OPEN•CLOSE** to close the disc tray.
→ **READING** is displayed as the CD player scans the contents of a disc, and then the total number of tracks and playing time (or the total number of albums and tracks for MP3/WMA disc) are shown.

Notes:

- Load the discs with the label side facing up.
- To ensure good system performance, wait until the disc tray completely reads the disc(s) before proceeding.
- For MP3/WMA disc, the disc reading time may exceed 10 seconds due to the large number of songs compiled into one disc.

Playing discs

To play current disc on the disc tray

- Press **▶ II**.
 - All loaded discs will play once, then stop.
 - During playback, the selected disc tray, track number and elapsed playing time of the current track are displayed.
 - For mixed mode discs, only one mode will be selected for playback depending on the recording format.

Note:

- When playing a mixed mode disc, you may find a very short mute track inserted into the total number of tracks available in your disc.

To play the selected disc only

- In CD mode, press **DISC 1/2/3** (or **CD 1/2/3** on the remote control).
 - The current disc will play once, then stop.

To interrupt playback

- Press **▶ II**.
 - The display freezes and the elapsed playing time flashes when playback is interrupted.
- To resume playback, press **▶ II** again.

To stop playback

- Press **■**.

Text display during playback

In CD mode

- Press **DISPLAY** to show the current track number and remaining playback time.

In MP3-CD/WMA mode

- Press **DISPLAY** repeatedly to show the current album and track numbers followed by ID3 information (if available).

Replacing discs during playback

- Press **DISC CHANGE**.
 - The disc tray will open without interrupting current playback.
- To change the inner disc, press **DISC CHANGE** again.
 - "OPEN" is displayed and the disc will stop playing.
 - The disc tray will close to retrieve the inner disc, then reopen with the inner disc accessible.

Selecting a desired track/passage

To search for a particular passage during playback

- Press and hold **|◀◀ / ▶▶|** (or **ALBUM +/- (◀◀ / ▶▶)** on the remote control) and release it when the desired passage is located.
 - During searching, the volume will be muted.

To select a desired track

- Press **|◀◀ / ▶▶|** (or **TITLE +/- (|◀ / ▶|)** on the remote control) repeatedly until the desired track is displayed.
- If playback is stopped, press **▶ II** to start playback.

Selecting a desired Album/Title (MP3/WMA disc only)

To select a desired album

- Press **ALBUM/PRESET +/-** (or **ALBUM +/- (◀◀ / ▶▶)** on the remote control) repeatedly.






To select a desired title




 
- Press **|◀◀ / ▶▶|** (or **TITLE +/- (|◀ / ▶|)** on the remote control) repeatedly.

CD/MP3-CD/WMA Operations

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback. The REPEAT modes can also be combined with PROGRAM.



- plays the current track continuously
-  **ALL**repeats the entire disc/programme
-   **ALL**repeats the entire disc continuously in random order
- tracks of the entire disc are played in random order

- 1 To select your play mode, press the **MODE** button before or during playback until the display shows the desired function.
- 2 Press  to start playback if in the STOP position.
→ If you have selected SHUFFLE, playback starts automatically.
- 3 To return to normal playback, press the **MODE** button until  or  is no longer displayed.
- You can also press  to cancel your play mode.

Programming the disc tracks

Programming tracks is possible when playback is stopped. Up to 40 tracks can be stored in the memory in any order.



 
 

- 1 Load the desired discs on the disc tray (refer to "Loading discs").
- 2 Press **DISC 1/2/3** (or **CD 1/2/3** on the remote control) to select a disc.
- 3 In stop mode, press **PROG/CLOCK** (or **PROGRAM** on the remote control) to start programming.
→ **PROG** starts flashing.
- 4 Press  (or **TITLE +/-** (/ )) on the remote control) repeatedly to select the desired track.
- For MP3/WMA disc, press **ALBUM/PRESTE -/+** (or **ALBUM +/-** (/ )) on the remote control) and  (or **TITLE +/-** (/ )) on the remote control) to select the desired album and title for programming.

- 5 Press **PROG/CLOCK** (or **PROGRAM** on the remote control) to store the track.
- 6 To end programming, press  **once**.
→ **PROG** stays and the programme mode remains active.
- 7 To start programme play, press .


Notes:

- It is not possible to create a programme with MP3 tracks from multiple CDs, or combined with normal audio tracks.
- If you attempt to programme more than 40 tracks, "PROGRAM FULL" is displayed.
- During programming, if no button is pressed within 90 seconds, the system will exit the programme mode automatically.

To review the programme


- Stop playback and press   (or **TITLE +/-** (/ )) on the remote control) repeatedly.
- To exit review mode, press .

Erasing the programme

- Press  **once** when playback is stopped or **twice** during playback.
→ **PROG** disappears and "PROGRAMME CLEAR" is displayed.

Note:

 - The programme will be erased when the system is disconnected from the power supply or when the disc tray is opened.

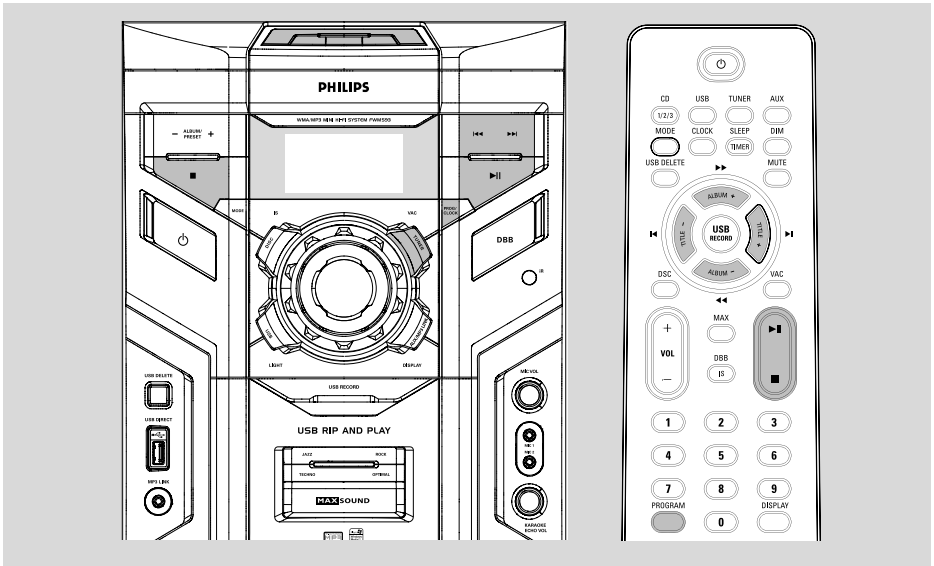

Tuning to radio stations

- 1 Press **TUNER**.
→ "FM" or "AM" is displayed. A few seconds later, the current radio frequency will appear on the display.
- 2 Press **TUNER** again to select the desired waveband : FM or AM.
- 3 Hold **◀◀ / ▶▶** (or **ALBUM +/- (◀◀ / ▶▶)** on the remote control) and then release the button.
→ The system will start searching for a radio station with sufficient signal strength.
- 4 Repeat step 3 if necessary until you find the desired station.
- To tune to a weak station, press **◀◀ / ▶▶** (or **ALBUM +/- (◀◀ / ▶▶)** on the remote control) briefly and repeatedly until you have found optimal reception.

Programming radio stations

You can store up to a total of 40 radio stations in the memory.

Automatic programming

- 1 Press **TUNER** to select TUNER mode.
- 2 Press and hold **PROG/CLOCK** (or **PROGRAM** on the remote control) until "AUTO" is displayed.
→ **PROG** starts flashing.
→ **AUTO** is displayed and available stations are programmed in order of waveband reception strength.
→ When all the available radio stations are stored or the memory for 40 presets are used, the first preset radio station will be played.
- **To stop storing the automatic preset**
 - Press **■**.

Radio Reception

Manual programming

- 1 Tune to your desired radio station (refer to "Tuning to radio stations").
- 2 Press **PROG/CLOCK** (or **PROGRAM** on the remote control).
 - **PROG** starts flashing.
 - The next available preset number is displayed for selection.

To store the radio station to another preset number

- Press **ALBUM/PRESET +/-** (or **TITLE +/-** (**◀** / **▶**)) on the remote control) to select the desired preset number.
- 3 Press **PROG/CLOCK** (or **PROGRAM** on the remote control) again to store the radio station.
 - **PROG** disappears.
- Repeat **steps 1–3** to store other radio stations.

To exit manual preset mode

- Press **■**.

Notes:

- If you attempt to store more than 40 preset radio stations, "PROGRAM FULL" is displayed.
- During programming, if no key is pressed within 90 seconds, the system will exit the programme mode automatically.

Tuning to preset radio stations

- Press **ALBUM/PRESET +/-** (or **TITLE +/-** (**◀** / **▶**)) on the remote control) until the desired preset station is displayed.

Changing tuning grid

In some countries, the frequency step between adjacent channels is 9 kHz (10 kHz in some areas). The preset frequency step in the factory is 10 kHz.

- 1 Select tuner mode.
- 2 Press and hold **■** on the set for more than 2 seconds .

Note:

– All preset stations will be lost and need to be reprogrammed.

Using a USB mass storage device

By connecting a USB mass storage device or SD/MMC memory card to the Hi-Fi system, you can enjoy the device's or card's stored music through the powerful speakers of Hi-Fi system.

Playing a USB mass storage device

Compatible mass storage devices/cards

With the Hi-Fi system, you can use:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this Hi-Fi system)

Notes:

– *In some USB flash players (or memory devices), the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as this Hi-Fi system).*

– *Compatibility of the USB connection on this product:*

a) This product supports most USB Mass storage devices (MSD) that are compliant to the USB MSD standards.

i) Most common Mass storage class devices are flash drives, memory sticks, jump drives and etc.

ii) If you see a "Disc Drive" show up on your computer after you plugged the mass storage device into your computer, most likely it is MSD compliant and it will work with this product.

b) If your Mass storage device required a battery/power source. Please make sure you have a fresh battery in it or charge the USB device first and then plug it into the product again.

– *Supported Music type:*

a) This device only supports unprotected music with the following file extension:

.mp3

.wma

b) Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).

c) File name extensions that end with the following are not supported:

.wav; .m4a; .m4p; .mp4; .aac and etc.

– *No Direct connection can be made from Computer USB port to the product even you have either or both mp3 or wma files in your computer.*

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

The system will not play or support the following:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.
- Non-supported file formats are skipped. This means that e.g.: Word documents .doc or MP3 files with extension .dlf are ignored and will not be played.
- AAC, WAV, PCM audio files
- DRM protected WMA files
- WMA files in Lossless format

How to transfer music files from PC to a USB mass storage device

By dragging and dropping music files, you can easily transfer your favorite music from PC to a USB mass storage device/SD/MMC memory card.

 
For a flash player, you can also use its music management software for the music transfer.

However, those WMA files may be unplayable for compatibility reasons.

How to organize your MP3/WMA files on the USB mass storage device/SD/MMC memory card

This Hi-Fi system will browse the MP3/WMA files in the folders/sub-folders/titles order.

Example:

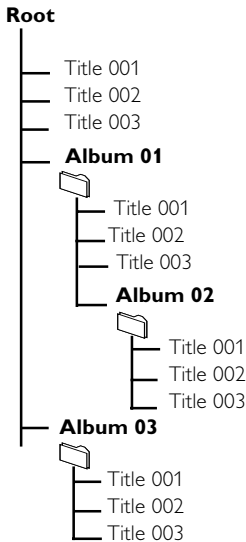

Organize your MP3/WMA files in different folders or subfolders as required.

Notes:

- If you have not organized MP3/WMA files into any albums on your disc, an album "01" will be automatically assigned for all those files.
- Make sure that the file names of MP3 files end with .mp3, and the file names of WMA files end with .wma.
- For DRM protected WMA files, use Windows Media Player 10 (or later) for conversion. Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).


- 1 Check the USB device has been properly connected. (See Installation: Connecting an additional appliance).
- 2 Press **USB** to select USB.
 - **NO SOUNDS** appears if no audio file is found in the USB device.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD (See CD/MP3 Operations).

Notes:

- For compatibility reasons, the album/track information may differ from what it is displayed through flash players' music management software.
- File names or ID3 tags will be displayed as — if they are not in English.

Ripping function

This function enables you to record music to a connected USB mass storage device from any other source (i.e., DISC, TUNER or AUX) without interrupting your enjoyment of the music.

- 1 Insert a USB mass device with sufficient free space to the **USB DIRECT**  socket on the set. (See "Installation: Connecting an additional appliance").
- 2 Prepare the source to record from.

DISC - load the disc(s). Select the disc to record from. Then, select a track where ripping will start (See "CD/MP3-CD Operations": "Selecting a desired track/passage" and "Selecting a desired Album/Title (MP3/WMA disc only)").

TUNER - tune to the desired radio station (See "Radio Reception": "Tuning to radio stations" and "Tuning to preset radio stations").

AUX - connect external equipment.
- 3 Press **USB RECORD** to start ripping.
 - "USB REC" will start flashing on the display.
 - In the DISC mode, "RIPPING ONE" will scroll once.
- In the DISC mode, to record all tracks starting from the one you selected, press USB RECORD again.
 - "RIPPING ALL" will scroll once. "ALL" and "USB REC" will start flashing on the display.
- 4 At any moment, simply press **■** to stop ripping.

Notes:

- This function can also be combined with the programme function. In this case, selection of "RIPPING ALL" in DISC mode will record all programmed tracks from the starting point to the USB mass storage device.
- It is impossible to rip from "MIC IN".
- Never unplug the USB mass storage device before pressing **■** to stop ripping.
- In the DISC mode, when you stop ripping or the free space is insufficient, the current track being ripped will not be recorded to your USB mass storage device and the playback will stop at the same time.
- During ripping, it is impossible to select any other source or track (radio station) or even switch the set to standby mode.

To delete a track/album from your USB mass storage device

- 1 Plug in the USB mass storage device.
- 2 Select the track to be deleted during playback.
- 3 Press **USB DELETE**.
 - "DELETE TRACK-- PRESS AGAIN TO DELETE " appears.
- 4 Press **USB DELETE** again before "DELETE TRACK-- PRESS AGAIN TO DELETE" disappears to confirm the deletion.

Tuner record timer setting

This function enables you to set a timer for starting and stopping ripping from the tuner source automatically.

IMPORTANT!


– **Before setting the timer, ensure that the clock is set correctly.**

- 1 Tune to the station you desire to record from. (See "Radio Reception": "Tuning to radio stations" and "Tuning to preset radio stations".)
- 2 Go to the standby mode. Then, press and hold **SLEEP/TIMER** on the remote control for more than two seconds to select timer mode.
 - The last timer setting starts flashing.
 - The selected source will be lighted.
- 3 Press **TUNER** to select TUNER mode.
- 4 Press **USB RECORD** to enable USB recording.
 - "ST" appears. "USB REC" and the hour and minute digits for the start timer start flashing.
- To cancel USB record setting, press **USB RECORD** again until "ST" and "USB REC" disappear.
 - In this case, you can only continue to set the system switch-on timer: (See "Clock/Timer": "Timer setting".)
- 5 Press **ALBUM/PRESET -/+** (or **ALBUM -/+** (◀ / ▶)) on the remote control) repeatedly to set the hour for the timer to start.
- 6 Press |◀◀ / ▶▶| (or **TITLE -/+** (|◀ / ▶|)) on the remote control) repeatedly to set the minute for the timer to start.
- 7 Press **SLEEP/TIMER** on the remote control to confirm.
 - "ET" appears. „z and the hour and minute digits for the sleep timer (12 hours later than the start timer by default) start flashing.
- 8 Press **ALBUM/PRESET -/+** (or **ALBUM -/+** (◀ / ▶)) on the remote control) repeatedly to set the hour for the timer to stop.
- 9 Press |◀◀ / ▶▶| (or **TITLE -/+** (|◀ / ▶|)) on the remote control) repeatedly to set the minute for the timer to stop.
- 10 Press **SLEEP/TIMER** on the remote control to store the set tuner record timer.
 - The ripping will start at the set start time and end at the set stop time.


Notes:

- It is impossible to set a sleep timer more than 12 hours later than the start timer.
- During timer setting, if no button is pressed within 60 seconds, the system will exit timer setting mode automatically.

To deactivate the TIMER

- In standby mode, press **SLEEP / TIMER** on the remote control.
 -  disappears from the display.

To activate the TIMER

- In standby mode, press **SLEEP / TIMER** on the remote control.
 -  appears on the display.

Listening to external sources

Using AUX IN (white/red jacks)

 
- 1 Use the audio cables (white/red, not supplied) to connect **AUX IN (L/R)** jacks of the main unit (located on the back panel) to the corresponding AUDIO OUT jacks on an external device (such as TV or VCR).
- 2 Press **AUX/MP3 LINK** (or **AUX** on the remote control) repeatedly until "AUX" is displayed.

Using MP3 LINK (3.5 mm jack)

- 1 Use a MP3 link cable (supplied) to connect **MP3 LINK** jack of the main unit (3.5 mm, located on the front panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player; or VCR).
- 2 Press **AUX/MP3 LINK** (or **AUX** on the remote control) repeatedly until "MP3 LINK" is displayed.

Note:

- All the sound control features (DSC or DBB, for example) are available for selection.
- Refer to the operating instructions for the connected equipment for details.

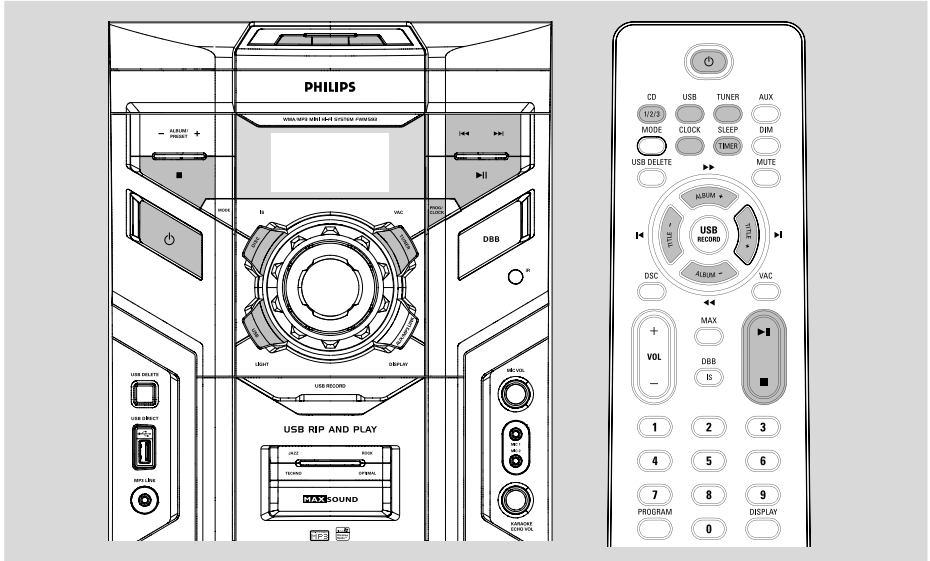

Clock setting

The clock can be set in either 12-hour or 24-hour mode ("PM 12:00" or "00:00" for example).

- 1 In standby or view clock mode, press **PROG/ CLOCK** (or **CLOCK** on the remote control).
- 2 Press **ALBUM/PRESET +/-** (or **ALBUM +/-** (◀◀ / ▶▶) on the remote control) to select clock mode.
- 3 Press **PROG/ CLOCK** (or **CLOCK** on the remote control) to activate to adjust clock time.
- 4 Press **ALBUM/PRESET +/-** (or **ALBUM +/-** (◀◀ / ▶▶) on the remote control) repeatedly to set the hour.
- 5 Press ◀◀◀ / ▶▶▶ (or **TITLE +/-** (◀ / ▶) on the remote control) repeatedly to set the minute.
- 6 Press **PROG/ CLOCK** (or **CLOCK** on the remote control) again to store the setting.
→ The clock starts working.

To exit without storing the setting

- Press ■.

Notes:

- The clock setting will be cancelled when the power cord is disconnected or if a power failure occurs.
- During clock setting, if no button is pressed within 30 seconds, the system will exit clock setting mode automatically.

Timer setting

The system can switch on to DISC, TUNER or USB mode automatically at a preset time, serving as an alarm to wake you up.

IMPORTANT!

– Before setting the timer, ensure that the clock is set correctly.

- 1 In standby or view clock mode, press and hold **SLEEP/TIMER** on the remote control for more than **two seconds** to select timer mode.
→ The last timer setting starts flashing.
→ The selected source will be lighted.
- 2 Press **DISC** (or **DISC 1/2/3**, **CD 1/2/3**), **TUNER** or **USB** to select the desired source.
 - Before setting timer, make sure the music source has been prepared.
 - CD** – Load the disc(s).
 - TUNER** – tune to the desired radio station.
- 3 Press **SLEEP/TIMER** on the remote control to activate to adjust time.
- 4 Press **ALBUM/PRESET +/-** (or **ALBUM +/-** (◀◀ / ▶▶) on the remote control) repeatedly to set the hour for the timer to start.

- 5 Press **|◀◀/▶▶|** (or **TITLE +/-** (**|◀ / ▶|**) on the remote control) repeatedly to set the minute for the timer to start.
- 6 Press **SLEEP/TIMER** on the remote control to store the start time.
- At the preset time, the selected source will play.


To exit without storing the setting

- Press **■** on the system.


Notes:

- When the preset time is reached and the selected disc tray is empty, the next available disc will be selected. If all the disc trays are not available, Tuner will be selected automatically.
- During timer setting, if no button is pressed within 60 seconds, the system will exit timer setting mode automatically.

To deactivate the TIMER

- In standby or view clock mode, press **SLEEP/TIMER** on the remote control.
 -  disappears from the display.

To activate the TIMER

- In standby or view clock mode, press **SLEEP/TIMER** on the remote control.
 -  appears on the display.

Sleep timer setting

The sleep timer enables the system to switch to standby mode automatically at a preset time.

- 1 In active mode, press **SLEEP/TIMER** on the remote control repeatedly to select a preset time.
 - The selections are as follows (time in minutes):
90 → 75 → 60 → 45 → 30 → 15 → OFF → 90...
- 2 When you reach the desired length of time, stop pressing the **SLEEP/TIMER** button.
 - **ZZZ** is shown, except for "OFF" mode.
 - The sleep timer is now set.

To check the remaining length of time after sleep timer is activated

- Press **SLEEP/TIMER** once.

To change the preset sleep timer

- Press **SLEEP/TIMER** again while the remaining sleep timer is shown.
 - The display will show the next sleep timer options.

To deactivate the sleep timer

- Press **SLEEP/TIMER** repeatedly until "OFF" is displayed, or press .

Note:

- **ZZZ** will start flashing when the remaining length of time after activation of the sleep timer is less than 1 minute.

 
Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

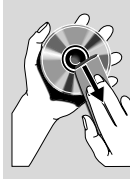

Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

AMPLIFIER

RMS output power

Total output power 800 W RMS

Signal-to-noise ratio 67 dB A (IEC)

Frequency response 60 – 16000 Hz

Input sensitivity

AUX 1500mV/2000mV

Output

Speakers 3 Ω

(1) (3 Ω , 1 kHz, 10%THD)

CD/MP3-CD PLAYER

Number of programmable tracks 40

Frequency response 60 – 16000 Hz -3dB

Signal-to-noise ratio 75 dB A

Channel separation 50 dB (1 kHz)

Total harmonic distortion < 1.5%

MPEG 1 Layer 3 (MP3-CD) MPEG AUDIO

MP3-CD bit rate 32-256 kbps

(128 kbps advised)

Sampling frequencies 32, 44.1, 48 kHz

TUNER

FM wave range 87.5 – 108 MHz

AM wave range (9 kHz) 531 – 1602 kHz

AM wave range (10 kHz) 530 – 1700 kHz

Tuning grid 9/10 kHz

Number of presets 40

Antenna

FM 75 Ω wire

AM Loop antenna

USB PLAYER

USB 12Mb/s, V1.1

..... support MP3 and WMA files

Number of albums/folders maximum 99

Number of tracks/titles maximum 999

FRONT SPEAKERS

System 4-way; double port bass reflex

Impedance 2 x 6 Ω

Woofer 2 x 5.25"

Tweeter 2 x 1.75"

Output power 2 x (100 W+ 100 W)

Dimensions (w x h x d) .. 225 x 430 x 275 (mm)

Weight 4.928 kg each

REAR SPEAKERS

System full range satellite

Impedance 3 Ω

Speaker driver 4" + 4" (fake)

Frequency response 150Hz-16KHz

Output power 2 x 100 W

Dimensions (w x h x d) 142.5 x 345 x 171.3

Weight 2.1 kg each

SUBWOOFER

AC Power 110 – 127 / 220 – 240 V;

..... 50/60 Hz, Switchable

Power Consumption

Active 100 W

Impedance 6 Ω

Subwoofer driver 8"

Output power 200 W

Dimensions (w x h x d)..... 274 x 430 x 342.3 (mm)

Weight 11.2 kg

GENERAL

Material/finish Polystyrene/Metal

AC Power (for the main unit)

..... 110 – 127 / 220 – 240 V;

..... 50/60 Hz, Switchable

Power Consumption

Active 90 W

Standby \leq 20 W

Dimensions (w x h x d) .. 265 x 345 x 382 (mm)

Weight (without speakers) 8.671 kg

Specifications and external appearance are subject to change without notice.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
“NO DISC” is displayed.	<ul style="list-style-type: none">✓ Insert a disc.✓ Check if the disc is inserted upside down.✓ Wait until the moisture condensation at the lens has cleared.✓ Replace or clean the disc, see “Maintenance”.✓ Use a finalized CD-RW or a correct MP3-CD format disc.
“DISC NOT FINALIZED” is displayed.	<ul style="list-style-type: none">✓ Use a finalised CD-RW or CD-R.
Radio reception is poor.	<ul style="list-style-type: none">✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.✓ Increase the distance between the Mini HiFi System and your TV or VCR.
The system does not react when buttons are pressed.	<ul style="list-style-type: none">✓ Remove and reconnect the AC power plug and switch on the system again.
Sound cannot be heard or is of poor quality.	<ul style="list-style-type: none">✓ Adjust the volume.✓ Check that the speakers are connected correctly.✓ Check if the stripped speaker wire is clamped.✓ Make sure the MP3-CD was recorded within 32-256 kbps bit rate with sampling frequencies at 48 kHz, 44.1 kHz or 32 kHz.
The left and right sound outputs are reversed.	<ul style="list-style-type: none">✓ Check the speaker connections and location.

Problem	Solution
<p>The remote control does not function properly.</p>	<ul style="list-style-type: none"> ✓ Select the source (DISC or TUNER, for example) before pressing the function button (▶ , ◀, ▶). ✓ Reduce the distance between the remote control and the system. ✓ Insert the batteries with their polarities (+/- signs) aligned as indicated. ✓ Replace the batteries. ✓ Point the remote control directly towards the IR sensor.
<p>The time is not working.</p>	<ul style="list-style-type: none"> ✓ Set the clock correctly. ✓ In standby mode, press SLEEP/TIMER on the remote control to switch on the timer.
<p>The Clock/Timer setting is erased.</p>	<ul style="list-style-type: none"> ✓ Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.
<p>Some files on the USB device are not displayed.</p>	<ul style="list-style-type: none"> ✓ Check if the number of folders exceeds 99 or the number of titles exceeds 999.
<p>“DEVICE NOT SUPPORTED” scrolls on the display.</p>	<ul style="list-style-type: none"> ✓ Remove the USB mass storage device or select another source.

Validez de la garantía

Todos los productos de la línea de audio y video Philips, se registrarán por un año de garantía internacional (365 días), salvo para Chile donde los productos de las líneas CD Portable y RCR CD, los cuales se rigen por 6 meses de garantía (182 días)

Condiciones de la garantía

Esta garantía perderá su validez si:

- El defecto es causado por uso incorrecto o en desacuerdo con el manual de instrucciones
- El aparato sea modificado, violado por una persona no autorizada por Philips
- El producto esté funcionando con un suministro de energía (red eléctrica, batería, etc.) de características diferentes a las recomendadas en el manual de instrucciones
- El número de serie que identifica el producto se encuentre de forma adulterada.

Están excluidos de garantía,

- Los defectos que se generen debido al incumplimiento del manual de instrucciones del producto
- Los casos fortuitos o de la fuerza mayor, como aquellos causados por agentes de la naturaleza y accidentes, descargas eléctricas, señales de transmisión débiles.
- Los defectos que se generen debido al uso de los productos en servicios no doméstico/residencial regulares o en desacuerdo con el uso recomendado
- Daños ocasionados por fluctuaciones de voltajes, voltaje fuera de norma o por causas fuera de Philips, como cortocircuitos en los bafles o parlantes.
- En las ciudades en donde no existe el taller autorizado del servicio de Philips, los costos del transporte del aparato y/o el técnico autorizado, corren por cuenta del cliente.
- La garantía no será válida si el producto necesita modificaciones o adaptaciones para que funcione en otro país que no es aquél para el cual fue mercadeado.

El único documento válido para hacer efectiva la garantía de los productos, es la Factura o Boleta de compra del consumidor final.

Aquellos productos que hayan sido adquiridos en otros países y que no estén en el rango normal del país donde se efectuará la reparación, dicha prestación de servicio tomará mas tiempo de lo normal ya que es necesario pedir las partes/piezas al centro de producción correspondiente.

Centros de información

Líneas de atención al consumidor

Chile: 600-7445477

Colombia: 01-800-700-7445

Costa Rica: 0800-506-7445

Ecuador: 1-800-10-1045

El Salvador: 800-6024

Guatemala: 1-800-299-0007

Panama: 800-8300

Peru: 0800-00100

Rep. Dominicana: 1-800-751-2673

Venezuela: 0800-100-4888

POLIZA DE GARANTIA PARA MEXICO

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles,** contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

-Cuando el aparato sea utilizado en condiciones distintas a las normales.

-Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.

-Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES.- Monitores para computadora.

12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, video proyectores (excepto la lámpara) , cámaras de video, radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, reproductores de audio digital MP3 (Internet), decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisistemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, equipos modulares, sintoamplificadores, facsimils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES.- radio relojes, radios A.M./F.M., auto estéreos, teléfonos inalámbricos, cámaras digitales.

3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, audífonos.

PHILIPS

Philips Mexicana, S.A. de C.V.

Producto Importado por:
Philips Mexicana, S.A. de C.V.
 Av. La Palma No.6
 Col. San Fernando La Herradura
 Huixquilucan, Edo. de México, C.P. 52784
 Tel. 52 69 90 00

Centro de Información al Cliente
Información General
 LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
 CORREO ELECTRONICO
philips@merkafon.com

MODELO _____ No. DE SERIE _____

La presente garantía contará a partir de: DIA _____ MES _____ AÑO _____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro **Centro de Información al Cliente**, en donde con gusto le atenderemos en todo lo relativo a:

- * Servicio de sus aparatos Philips
- * Información de productos y Talleres Autorizados Philips
- * Asesoría en el manejo e instalación de su producto Philips
- * Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTROMCO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-32-96	serproa@yahoo.com.mx	S	MEXICO, D. F. ZONA NORTE	55	55-67-19-82 55-67-22-56	chyv_electronica@yahoo.com.mx	S
AGUASCALIENTES, AGS	449	915-51-81	jimsaeje@hotmail.com	S	MEXICO, D. F. ZONA ORIENTE	55	57-56-89-37	cnoguedam@terra.com.mx	S
CAMPECHE, CAMP.	981	816 25 75	oreza@hotmail.com	S	MEXICO, D. F. ZONA PONIENTE	55	58 12 44 12	raulmtzm@avantel.net	S
CANCUN, Q. ROO.	998	984 18 74	gammacancun@webtelmex.net.mx	S	MONTERREY, N.L.	818	375-16-17 400-54-03	mcesa@prodigy.net.mx	S
CD. JUAREZ, CHIH	656	618-21-28 623-46-20	teleservicio@prodigy.net.mx	S	MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamoraa@msn.com	S
CD. OBREGON, SON	644	412-41-81 416-20-93	mena747@prodigy.net.mx	S	NEZAHUALCOYOTL EDO. MEX	55	57-33-34-98	vicentegutierrez@prodigy.net.mx	S
CD. VICTORIA, TAMPS	834	315-66-03 312-51-93	eel_smiller@yahoo.com.mx	S	OAXACA, OAX	951	516-47-37	efranciort@prodigy.net.mx	S
COLIMA, COL	312	314-03-01	tv_antenaa@hotmail.com	S	ORIZABA, VER	272	724 38 53	barreda_electronicas@hotmail.com	S
CUERNAVACA, MOR	777	313-00-49 313-90-92	centroserviciohertz@hotmail.com	S	PACHUCA, HGO	771	714-15-81	zarateelco@hotmail.com	S
CULIACAN, SIN	667	716-15-10	stereovox@dn.megared.net.mx	S	POZA RICA, VER	782	824 47 82	sonydigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-59-30 421-63-61	comercialdomestica@hotmail.com	S	PUEBLA, PUE	222	248-77-44 231-83-77	rascon12@prodigy.net.mx	S
CHILPANCIINGO, GRO.	747	471 72 73	ingelec_gro@hotmail.com	S	QUERETARO, GRO	442	216-10-09		S
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com	S	SALTILLO, COAH	844	415 35 80	electronica digital_07@hotmail.com	S
GUADALAJARA, JAL	33	36-18-72-62 36-16-83-27	www.Lecom.com.mx	S	SAN LUIS POTOSI, S.L.P	444	815-34-07	centro_serviciopl@prodigy.net.mx	S
HERMOSILLO, SON	862	210-54-95 210-05-86	manuelw@prodigy.net.mx	S	SATELITE, EDO. MEX	55	55 62 59 73	missus_satellite@hotmail.com	S
IRAPUATO, GTO	462	626-51-10	tv_gase@hotmail.com	S	TAMPICO, TAMPS	833	214 13 60	electromovie@prodigy.net.mx	S
LA PAZ, B.C.S	612	122-95-99	cenafsa@prodigy.net.mx	S	TEPIC, NAY	311	212-66-93	spe_tr@hotmail.com	S
LEON, GTO	477	770-26-99	tecespecializados@hotmail.com	S	TUJUANA, B.C.N	664	621-22-15	www.wegi1@telcel.net	S
MATAMOROS, TAMPS	868	813-50-13	digitalelectronica@comunicable.net	S	TOLUCA, EDO. MEX	722	214-83-09		S
MAZATLAN, SIN	669	982-42-21	e_santel@hotmail.com	S	TOLUCA, EDO. MEX	722	213 62 94		S
MERIDA, YUC	999	928-59-05	evia2@prodigy.net.mx	S	TORREON, COAH	871	732-49-49	jomar02@prodigy.net.mx	S
MEXICALI, B.C.N	686	561-98-08 561-98-18	bajaelctronicas@aol.com	S	TUXTLA GUTIERREZ, CHIS	961	618-19-08	kcvideo@prodigy.net.mx	S
MEXICO D.F. ZONA ARAGON	55	57 94 06 34	philipservicio@hotmail.com	S	URUAPAN, MICH	452	524-08-38 524-37-76	rosalaa@mich11slmex.net.mx	S
MEXICO D.F. ZONA CENTRO	55	55 21 80 07	unitelemex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-19-23 932-44-44	antza@ver.megared.net.mx	S
MEXICO, D. F. ZONA SUR	55	55-36-71-03 55-36-25-75	centroservicioelectronico@hotmail.com	S	VILLAHERMOSA, TAB	993	314-31-36 314-61-67	villate@intrasur.net.mx	S
MEXICO, D. F. ZONA NORTE	55	53 68 30 21	tssaser@prodigy.net.mx	S	ZACATECAS, ZAC.	492	922 31 63	sertecmur@hotmail.com	S

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

LISTA DE SERVIÇO AUTORIZADO - BRASIL

ACRE		BARRA S FRANCISCO	27-37562245	BELO HORIZONTE	31-32257262	PORTO TROMBETAS	93-35491606
CRUZEIRO DO SUL	68-33224432	CASTELO	28-35420482	BELO HORIZONTE	31-32254066	SANTAREM	93-35235322
RIO BRANCO	68-32217442	COLATINA	27-37222288	BELO HORIZONTE	31-34420944		
RIO BRANCO	68-32429416	GUARAPARI	27-33614355	BELO HORIZONTE	31-34570700	PARAIBA	
		LINHARES	27-33710148	BELO HORIZONTE	31-32957700	CAMPINA GRANDE	83-32121238
ALAGOAS		S GABRIEL DA PALHA	27-37271153	BELO HORIZONTE	31-34490000	ESPERANCA	83-3612273
ARAPIRACA	82-52232367	SAO MATEUS	27-37633806	BELO HORIZONTE	31-21027373	GUARABIRA	83-2711159
MACEIO	82-32417237	VILA VELHA	27-32891233	BELO HORIZONTE	31-35322088	JOAO PESSOA	83-24669689
PALMEIRA DOS INDIOS	82-32143452	VITORIA	27-32233899	BOM DESPACHO	37-35212906	JOAO PESSOA	83-2464044
UNIAO DOS PALMARES	82-32811305			BOM DESPACHO	37-35222511	JOAO PESSOA	83-24210640
				CARANGOLA	32-37412071	NOVA FLORESTA	44-37410214
				CASSIA	35-35412293	SAPE	83-2832479
AMAPA		GOIAS		CONGONHAS	31-37311638	SOLANEA	83-3631241
MACAPA	96-2175934	ANAPOLIS	62-32435642	CONS LAFAIETE	31-37637784		
SANTANA	96-2811080	CAJU	64-6568161	CONGONHAS	31-33912994	PARANA	
		CALDAS NOVAS	64-4532878	CORONEL FABRICIANO	35-3553461	APEREPE	46-5471605
		CATALAO	64-4412786	CURVELO	31-38411804	ANTONINA	41-34231782
AMAZONAS		FORMOSA	61-6318166	DIVINOPOLIS	38-37213003	APUCARANA	43-3425306
MANAUS	92-36233035	GOIANIA	62-32219995	FORMIGA	37-33214177	ARAPONGAS	43-2753723
MANAUS	92-36633366	GOIATUBA	64-34952272	FRUTAL	34-34235279	ASSIS CHATEAUBRIAND	44-5285181
MANAUS	92-32324252	INHUMAS	61-6511840	GOV. VALADARES	35-35716650	BANDERANTES	41-5421711
		IPAMERI	62-4511184	GUAXUPÉ	33-3271422	CAMPO HOURAO	44-35238970
BAHIA		ITAPURANGA	62-3551484	ITAJUBA	35-3621135	CAJACÉ	43-3425306
ALAGONINHAS	75-4211128	ITUMBARA	64-34310837	ITAPERICIA	37-3341126	CIANORTE	41-3224100
BARREIRAS	77-36117592	JUSSARA	62-3711806	ITALVA	37-3242468	CURITIBA	41-33334764
BOM JESUS DA LAPA	77-4814335	LUZIANIA	61-6228519	ITABIRA	31-38316218	CURITIBA	41-32648791
BRUMADO	77-4412181	MINEIROS	64-46119259	ITAJUBA	35-3621135	CURITIBA	41-32534391
CAETITE	77-34541183	PIRES DO RIO	64-4611133	ITAPERICIA	37-3341126	FOZ DO IGUAÇU	45-3523029
CAMACARI	71-36218288	RIALMA	62-3971320	ITAPERICIA	37-3341126	FOZ DO IGUAÇU	45-35234115
CICERO DANTAS	75-32782767	RIO VERDE	64-3621073	ITALVA	37-3242468	FRANCISCO BELTRAO	46-3523230
CRUZ DAS ALMAS	75-6212839	TRINDADE	62-5051505	ITUUBERA	34-32682131	GUARUARAPA	42-36235325
ESPLANADA	75-4271454	URUÇU	62-3571285	JOAO MONLEVADE	31-38521909	IBAITI	43-5461162
EUNAPOLIS	73-2851181			JOAO MONLEVADE	31-38521112	IBIPORA	43-2581863
FEIRA DE SANTANA	75-32232882	MARANHAO		JOAO PINHEIRO	38-3561327	IRATI	42-2421337
FEIRA DE SANTANA	75-2213427	ACAILANDIA	99-35381889	JUIZ DE FORA	32-30842584	LAPA	41-36222410
GANDU	73-32541664	BACABAL	99-36212794	JUIZ DE FORA	32-3215514	LOANDIA	44-4253053
ILHEUS	73-2315995	BALSAS	99-5410913	LAGOA DA PRATA	37-3261493	LONDRIA	43-3241002
IRECE	74-36410202	CAROLINA	98-711335	LAVRAS	35-38219188	MANGUAGUARI	44-2331135
ITABERABA	75-32512358	CAXIAS	99-35212377	MANHUAÇU	33-33314735	MARINGA	44-3264620
ITABUNA	73-36137777	CODO	99-36611277	MONTA CARMELO	33-33314735	MEDIANEIRA	45-32641580
ITAPETINGA	77-2613003	CODO	99-36612942	MONTA SANTO DE MINAS	35-35911888	PALMEIRA	42-2523006
JACOBINA	74-36211323	COELHO NETO	99-3524969	MONTES CLAROS	38-32218925	PARANAGUA	41-34235804
JEQUIE	73-35254141	IMPERATRIZ	99-3524969	MURIAE	32-37224324	PORTO BRANCO	46-35232876
JUAZEIRO	74-3611002	PEDREIRAS	99-36423142	MUZAMBINO	35-5712419	PONTA GROSSA	42-2226590
JUAZEIRO	74-3611002	PRESIDENTE DUTRA	96-36357553	NAQUÉ	33-36212165	RIO NEGRO	47-36450251
LAURO DE FREITAS	71-3784021	SANTA INES	96-36357553	NOVA LIMA	31-35412026	RONDANIA	43-2561947
MURITIBA	75-4241908	SAO JOSE DE RIBAMAR	98-2241581	OLIVEIRA	37-33314444	S J DOSS PINHAIS	41-32822522
PAULO AFONSO	75-32811349	SÃO LUIS	98-32232326	PARA DE MINAS	37-32216369	S MIGUEL DO IGUAÇU	45-5651429
POCOES	75-3211794	SÃO LUIS	98-32232326	PARACATU	37-32221975	SANTA FE	44-2471147
RIBEIRA DO POMBAL	75-2761853	MATO GROSSO		PASSOS	35-35214342	STO ANTONIO PLATINA	46-5341305
SALVADOR	71-32473659	ALTA FLORESTA	66-35212460	PATOS DE MINAS	34-38222588	TELEMACHO BORBA	43-37344009
SALVADOR	71-32072070	ALTO ARAGUAIM	66-4811726	PITANGUI	34-38311531	TOLEDO	45-2522471
SALVADOR	71-33356233	BARRA DO GARGAS	66-4011394	PITANGUI	37-32716232	UMUARAMA	44-36231233
SANTO AMARO	75-32413171	CUJABA	65-36230421	PURUIHI	37-33714632		
SENHOR DO BONFIM	74-5413143	LUCAS DO RIO VERDE	65-5491333	POCOS DE CALDAS	35-37121866	PERNAMBUCO	
SERINHA	75-32611794	MOENTES E LACERDA	65-2662326	POCOS DE CALDAS	37-37224448	BELO JARDIM	81-37261918
STO ANTONIO JESUS	75-36314470	PONTE NOVA	66-4981682	PONTE NOVA	31-38172466	CABO STO AGOSTINHO	81-35211823
TEIXEIRA DE FREITAS	73-30111606	RONDONOPOLIS	66-4233888	POUSO ALEGRE	35-34212120	CAMARAGIBE	81-34581246
VALENCA	75-6413170	SINOPE	66-5314592	S SEBASTIAO PARAISO	35-35313094	CARIJURU	81-37220235
VITORIA DA CONQUISTA	77-34241183	TANGARA DA SERRA	65-3261431	SANTOS DUMONT	35-35312054	FLORESTA	81-8771274
		VARZEA GRANDE	65-4826202	SÃO JOAO DEL REI	32-32516369	GRANHUNHS	87-27611090
				STO ANTONIO MONTE	32-33718306	GRANHUNHS	87-3610085
CEARA		MATO GROSSO DO SUL		TEOFILO OTONI	37-3811258	PAULISTA	81-34931142
BREJO SANTO	88-5310133	AMAMBAI	67-4811543	TIMOTEO	31-38482728	RECIFE	81-32313399
CRATEOS	88-6910019	CAMPO GRANDE	67-33242804	UBA	32-35232626	RECIFE	81-21262111
CRATO	88-5212501	CAMPO GRANDE	67-3831540	UBERABA	34-3332530	RECIFE	81-34654042
FORTALEZA	85-32875506	CAMPO GRANDE	67-3213898	UBERLANDIA	34-32123636	SALGUEIRO	87-38716309
FORTALEZA	85-40088555	DOURADOS	67-4217117	UBERLANDIA	34-32360764	SERRA TALHADA	87-38911401
IBAPINA	88-36531223	IVINHEIRA	67-4421244	VARGINHA	35-32227889		
IGUATU	88-35805512	NAVIRAÍ	67-4612486	VARZEA DA PALMA	38-37311548	PIAUÍ	
ITAIPOCA	88-3112030	NOVA ANDRADINA	67-4413851	VAZANTE	34-38131420	CAMPO MAIOR	86-23251376
JUAZEIRO DO NORTE	88-35112667	PONTA PORA	67-4314313	VICOSA	31-38991800	FLORESTA	89-5225155
JUAZEIRO DO NORTE	88-4231938	RIO BRILHANTE	67-4527950			QERAS	89-4621066
OROS	88-5841271	TRES LAGOAS	67-5212007	PARÁ		PARNAIBA	86-3222877
SOBRAL	88-36110605	MINAS GERAIS		ABAETETUBA	91-37512272	PICOS	89-4214444
TANGUÁ	88-3617336	ALFENAS	35-32927104	BELEM	91-3269040	PICOS	89-34155135
UBAJARA	88-6341233	ALMENARA	33-7211234	BELEM	91-32421090	TERESINA	86-32213535
		ANDARAÍ	35-37312970	CAPANEMA	91-34621100	TERESINA	86-32328825
		ARAXÁ	34-36611132	CANTANHAL	91-37215052	TERESINA	86-3224618
		ARAXÁ	34-36691869	ITAITUBA	93-5181545		
ESPÍRITO SANTO		ARCOS	37-33315455	MARABA	94-3211891	RIO DE JANEIRO	
ALEGRE	28-3526349	BAMBUI	37-34311473	OBIDOS	93-5472116	B JESUS ITABOANA	22-38312216
ARACRUZ	27-32361251	BARCENENA	32-33310283	PARAGOMINAS	91-30110778	BELFORD ROXO	21-27616060
BAIXO GUANDU	27-37321142						

CERTIFICADO DE GARANTIA NO BRASIL

Este aparelho é garantido pela Philips da Amazônia Indústria Eletrônica Ltda., por um período superior ao estabelecido por lei. Porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

A Philips da Amazônia Indústria Eletrônica Ltda. assegura ao proprietário consumidor deste aparelho as seguintes garantias, a partir da data de entrega do produto, conforme expresso na nota fiscal de compra, que passa a fazer parte deste certificado:

Garantia para rádios e reprodutores de CD portáteis (sem caixa acústica destacável): 180 dias

Garantia para os demais produtos da marca Philips: 365 dias.

Esta garantia perderá sua validade se:

- O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
- O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
- O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferentes das recomendadas no manual de instruções e/ou no produto.
- O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior, bem como aqueles causados por agentes da natureza e acidentes. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado. **ESTÃO EXCLUÍDAS DA GARANTIA ADICIONAL AS PILHAS OU BATERIAS FORNECIDAS JUNTO COM O CONTROLE REMOTO.**

Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. Consumidor requerente do serviço.

A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Philips da Amazônia Indústria Eletrônica Ltda.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o Centro de Informações ao Consumidor (CIC). Em São Paulo - Capital e demais localidades com DDD 011 - tel. 2121-0203, nas demais localidades e estados - tel. 0800 701 02 03 (discagem direta gratuita), ou escreva para Caixa Postal: nº 21.315 - CEP04602-970 - São Paulo - SP, ou envie um e-mail para: cic@philips.com.br
Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00 h; aos sábados das 08:00às13:00h.

*Para atendimento fora do Brasil, contate a Philips local ou a:
Philips Consumer Service
Beukenlaan 2
5651 CD Eindhoven
The Netherlands*

Certificado de Garantía en Argentina

Artefacto:

**Fabricante/Importador: Philips Argentina S.A.
y/o Fábrica Austral de Productos Eléctricos S.A.**

Dirección: Vedia 3892 - Buenos Aires

Fecha de Venta:

Modelo:

--

Nro. de serie

Firma y sello de la casa vendedora.

PHILIPS ARGENTINA S.A. en adelante denominada “la empresa”, garantiza al comprador de este artefacto por el término de (6) meses a partir de la fecha de adquisición, el normal funcionamiento contra cualquier defecto de fabricación y/o vicio de material, y se compromete a reparar el mismo —sin cargo alguno para el adquirente— cuando el mismo fallare en situaciones normales de uso y bajo las condiciones que a continuación se detallan:

1. Este certificado de garantía es válido únicamente en la Republica Argentina. El certificado debe ser completado por la casa vendedora y ser presentado por el usuario conjuntamente con la factura original de compra.
2. Serán causas de anulación de esta garantía en los casos que corresponda:
 - 2.1. Uso impropio o distinto del uso doméstico.
 - 2.2. Exceso o caídas de tensión eléctrica que impliquen uso en condiciones anormales.
 - 2.3. Instalación y/o uso en condiciones distintas a las marcadas en el “Manual de instalación y uso” que se adjunta a esta garantía.
 - 2.4. Cualquier intervención al artefacto por terceros no autorizados por la empresa.
3. La garantía carecerá de validez si se observare lo siguiente:
 - 3.1. Enmiendas o raspaduras en los datos del certificado de garantía o factura.
 - 3.2. Falta de factura original de compra que detalle tipo de artefacto, modelo, número de serie y fecha que coincida con los del encabezamiento del presente certificado.
4. No están cubiertos por esta garantía los siguientes casos:
 - 4.1. Los daños ocasionados al exterior del gabinete.
 - 4.2. Las roturas, golpes, caídas o rayaduras causadas por traslados.
 - 4.3. Los daños o fallas ocasionados por deficiencias, sobretensiones, descargas o interrupciones del circuito de alimentación eléctrica o rayos, deficiencias en la instalación eléctrica del domicilio del usuario o conexión del artefacto a redes que no sean las especificadas en el Manual de Uso del mismo.
 - 4.4. Las fallas, daños, roturas o desgastes producidos por el maltrato o uso indebido del artefacto y/o causadas por inundaciones, incendios, terremotos, tormentas eléctricas, golpes o accidentes de cualquier naturaleza.
 - 4.5. Las fallas o daños ocasionados en desperfectos en la línea telefónica.
 - 4.6. Las fallas producidas por una mala recepción ocasionada en el uso de una antena deficiente o en señales de transmisión débiles.
5. Las condiciones de instalación y uso del artefacto se encuentran detalladas en el Manual de Uso del mismo.
6. La empresa no asume responsabilidad alguna por los daños personales o a la propiedad al usuario o a terceros que pudieran causar la mala instalación o uso indebido del artefacto, incluyendo en este último caso a la falta de mantenimiento.
7. En caso de falla, el usuario deberá requerir la reparación a la empresa a través del Service Oficial y/o Talleres Autorizados más próximos a su domicilio y cuyo listado se acompaña al presente. La empresa a segura al usuario la reparación y/o reposición de piezas para su correcto funcionamiento en un plazo no mayor a 30 días contados a partir de la fecha de solicitud de reparación, salvo caso fortuito o fuerza mayor.

8. Toda intervención del servicio técnico realizada a pedido del usuario dentro del plazo de garantía, que no fuera originada por falla o defecto alguno cubierto por este certificado, deberá ser abonado por el interesado de acuerdo a la tarifa vigente.
9. El presente certificado anula cualquier otra garantía implícita o explícita, por la cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad con respecto a nuestros productos.
10. En caso de que durante el período de vigencia de esta garantía el artefacto deba ser trasladado a las Delegaciones Oficiales y/o Talleres Autorizados de Service para su reparación, el transporte será realizado por la empresa y serán a su cargo los gastos de flete y seguros y cualquier otro que deba realizarse para su ejecución.



PHILIPS

Red de Talleres Autorizados en Argentina

CAPITAL FEDERAL

ATTENDANCE S.A.

- Av. Monroe 3351 (C1430BKA) Cap. Fed.
- Tel.: 4545-5574/0704 ó 6775-1300
- Ventas de Repuestos y Accesorios
- Tel.: 4545-0854

DIG TRONIC

- Av. San Martín 1762 (C1416CRS) Cap. Fed.
- Tel.: 4583-1501

ELECTARG S.R.L.

- Av. Córdoba 1357 (C1055AAD) Cap. Fed.
- Ventas de Repuestos y Accesorios
- Tel.: 4811-1050

Caballito Electarg J. M. Moreno 287 4903-6967/6854/8983

BUENOS AIRES

Azul	Herlén Raúl Horacio	Av. 25 de Mayo 1227	(02281) 428719
Bahía Blanca	Neutron	Soler 535	(0291) 4535329
Bragado	Yacovino Juan J.	San Martín 2141	(02342) 424147
Campana	Electricidad Krautor	Lavalle 415	(03489) 432919
Chivilcoy	Fama	Coronel Suárez 110	(02346) 424129
Junín	Junín Service	Alsina 537	(02362) 442754
La Plata	Da Tos e Hijos	Calle 68 N° 1532	(0221) 4516021
La Plata	Service Técnico La Plata	Av. 51 N° 1051 esq. 16	(0221) 4108155
Mar de Ajó	Tauro Electrónica	Catamarca 14	(02257) 421750
Mar del Plata	Central Service	Olazábal 2249	(0223) 4721639/4729367
Mar del Plata	Service Integral	Diag. Pueyrredón 3229	(0223) 4945633
Necochea	Electrónica Camejo	Calle 63 N° 1745	(02262) 426134
Pehuajó	Calcañi Carlos Alberto	Zubiría 794	(02396) 472665
Pergamino	ACV Sistemas	Dr. Alem 758	(02477) 421177
Pergamino	El Service	Juan B. Justo 1931	(02477) 418000

San Nicolás	Servitec	Bv. Alvarez 148	(03461) 454729/429578
San Pedro	Electrónica Menisale	Mitre 1695	(03329) 425523
Tandil	Lazzarini Oscar Rafael	Pellegrini 524	(02293) 442167
Trenque Lauquen	Labrone Electrónica	Av. San Martín 426	(02392) 432348
Tres Arroyos	Saini Fabián y Sergio	Av. Belgrano 562	(02983) 427369
Zárate	Electrónica Spinuzzi	Ruzaingó 1030	(03487) 427353

GRAN BUENOS AIRES

Avellaneda	Casa Torres S.A.	Av. Mitre 2559	4255-5854
Florencio Varela	Casa Torres S.A.	San Martín 2574	4255-5854
Gregorio de Laferrere	Electrónica Álvarez	Honorio Luque 6084	4626-1322
Lomas de Zamora	Attendance S.A. Lomas	Laprida 485	4292-8900
Merlo	Argentronica S.H.	Pte. Cámpora 2175	(0220) 4637177/4829934
Moreno	Argentronica S.H.	Bmé, Mitre 2977 loc.2	(0237) 4639500
Morón	Servotronic	Ntra. Sra. del Buen Viaje 1222	4627-5656
Olivos	Appliance	Av. Libertador 2684	4794-7700
Quilmes	Casa Torres S.A.	E. Rios esq. Gran Canaria	4255-5854
Ramos Mejía	Electarg S.R.L. Suc.	Belgrano 224	4656-0619
San Miguel	Servotronic San Miguel	Belgrano 999	4664-4131
Villa Ballester	Servotronic	J. Hernández 3101	4767-2515/4768-5249

CATAMARCA

Catamarca	Omicron Central de Serv.	San Martín 225	(03833) 427235
-----------	--------------------------	----------------	----------------

CHACO

Resistencia	Freschi Jorge Oscar	Av. Avalos 320	(03722) 426030
-------------	---------------------	----------------	----------------

CHUBUT

Comodoro Rivadavia	C.A.S. S.R.L.L.	Alem 145	(0297) 4442629
Trelew	Fagtron Electrónica	Brasil 253	(02965) 427073

CORDOBA


Córdoba Capital	Servelco S.R.L.	Pje. E. Marsilla 635	(0351) 4724008/4732024
Río Cuarto	Maurutto Victor G.	Bv. Almafuerie 487	(0358) 4660204
Río Cuarto	Capaldi Abel	Paunero 832	(0358) 4623003
Río Tercero	Service Omega	Homero Manzi 149	(03571) 423330
San Francisco	Acuña Walter Electrónica	M. Moreno 360	(03564) 425367
Villa María	Grasso Electrónica	Bv. Alvear 541	(0353) 4521366
Villa María	Vanguard Sist. Electrónicos	México 421	(0353) 4532951

Meet Philips at the Internet
<http://www.philips.com>

English

Español

 Português

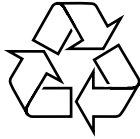

FWM996



Printed in China

PDCC-ZYL-0823