


3 Enjoy

Start disc playback

- 1 Press **OPEN/CLOSE**  to open the disc tray.

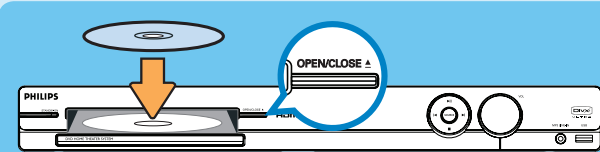


- 2 Place a disc with the disc label facing up.
- 3 Press **OPEN/CLOSE**  to close the disc tray.
- 4 Playback starts automatically.

- 5 If the disc menu appears on the TV, use     keys or the numeric keypad to select an option in the menu and press **OK** to start playback.


- To enjoy the powerful surround sound from the speakers, press **SURROUND** on the remote control to turn on the multi-channel surround mode.

- 6 Press  to stop playback.

Note When you press  button, playback resumes from where it last stopped. To start playback from the beginning, you have to press .

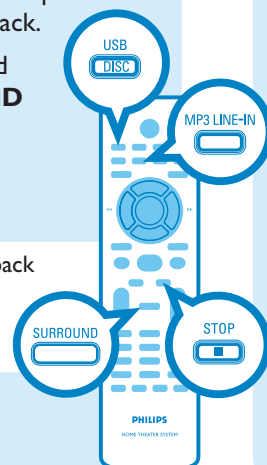

Playback other supported devices

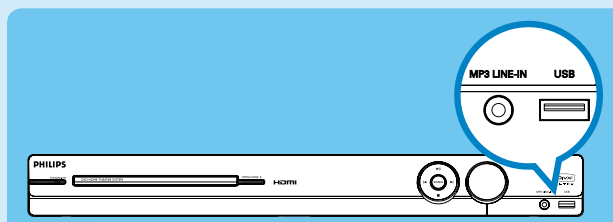

USB device

- 1 Insert your USB device to the USB jack.
- 2 Press **DISC/USB** to switch to 'USB' mode.
- 3 Press  to start playback.
- 4 To stop playback, press **DISC/USB** to switch to 'DISC' mode. You can unplug your USB device now.

Other portable audio player

- 1 Use the supplied MP3 LINE-IN cable to connect the headphone output jack on your portable audio player to MP3 LINE-IN jack.
- 2 Press **PLAY** on your portable audio player.
- 3 Press **MP3 LINE-IN** to listen to the playback.

Troubleshooting

For more troubleshooting tips, see the user manual.

No picture.

- Press **DISC/USB** button on the remote control.
- Check the connection to the TV and ensure the plugs are firmly in place.

No sound.

- Check the speaker connections and settings.
- Check the audio connections and press **SOURCE** button to select the correct input source.
- Press **SURROUND** button to turn on the multi-channel surround output.

The main unit does not work.

- Disconnect the power cord from the power outlet for a few minutes. Reconnect the power cord and try again.

Need help?

User Manual

See the user manual that came with your Philips DVD Home Theatre System.

Online

Go to www.philips.com/support



2007 © Koninklijke Philips N.V.
All rights reserved.

www.philips.com

DVD HOMETHEATER SYSTEM

HTS3355
HTS3345
HTS3545

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy


What's in the box?




Main Unit

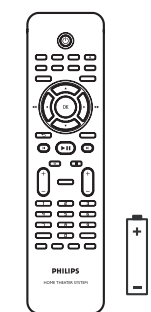


Remote Control
and 2 batteries

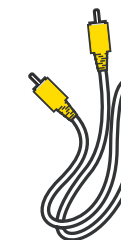

Composite
video cable

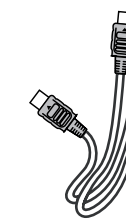

HDMI cable

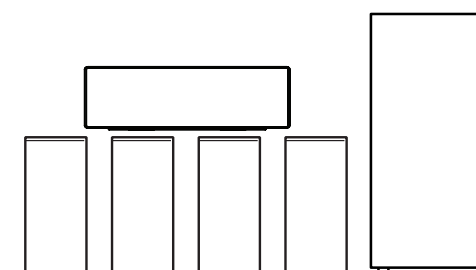

1 center, 2 front, 2 rear speakers
and subwoofer



MP3 LINE-IN cable



FM wire
antenna



AM/MW
loop antenna




User
Manual

PHILIPS

1 Connect


A Placement

Proper speakers system placement is important to ensure optimum sound performance.

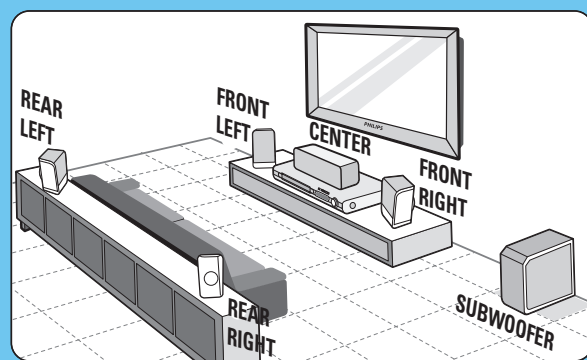

- 1 Place the center speaker above or close to the TV.
- 2 Place the subwoofer on the floor, at least one meter away from the TV.
- 3 Place the front speakers at equal distances from the TV.
- 4 Place the rear speakers at normal listening ear level.

B Connect the main unit to TV

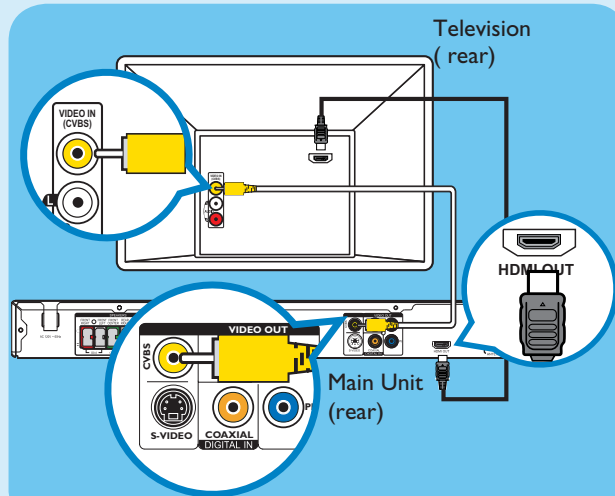


- Connect a composite video cable (supplied) from the CVBS jack on main unit to the VIDEO IN jack on your TV.
- If your TV supports HDMI, connect the HDMI cable (supplied) from the HDMI OUT to the HDMI IN jack on your TV.

Note It is important to connect the main unit directly to your TV.


C Connect the speakers and subwoofer

Connect the various colored plugs from the speakers and subwoofer to the same colored jacks at the rear of the main unit.

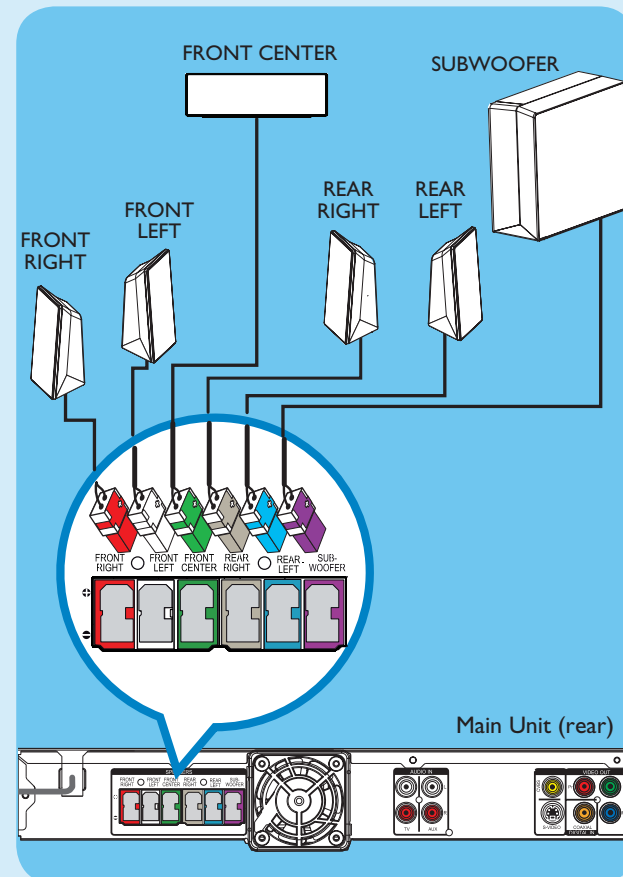

D Connect the radio antennas


Keep the antennas away from the electronic devices to prevent unwanted interference.

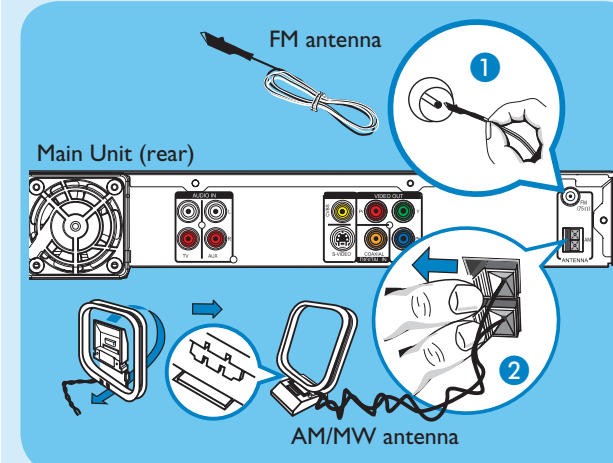

- 1 Connect the FM antenna to the inner pin of the FM 75 Ω jack. For optimum reception, extend the wire and fix its end to the wall.
- 2 Unfold the AM/MW loop antenna and fix the claw into the slot. Push the tabs and insert the wires into the AM/MW jacks.
- 3 Connect the power cable from the main unit to the AC power outlet.

E Connect audio output from TV (optional)

To hear the TV audio through this home theater system, use a red and white audio cables (not supplied) to connect the AUDIO IN-TV jacks on the main unit to the AUDIO OUT jacks on your TV.

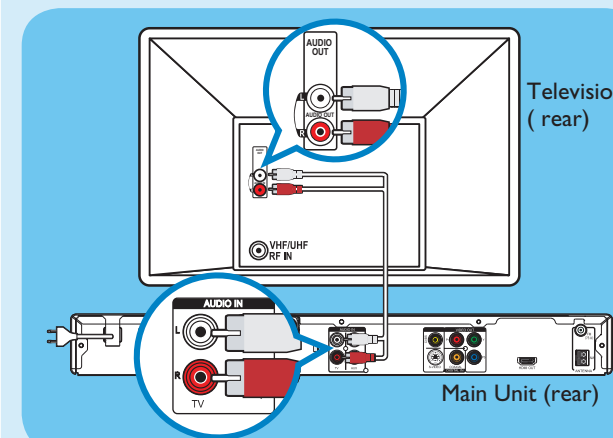


Note When watching the TV programs, you can press **TV** on the remote control to get the sound output from the speakers.

2 Set up

A Finding the viewing channel


- 1 Press **⏻** (STANDBY ON) on the main unit to turn it on.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

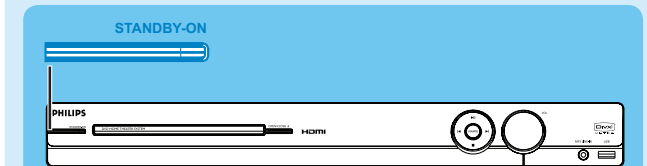

Note To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the Video In channel.

B Select the display language on the screen

- 1 Press **SETUP**. The { General Setup Page } appears.

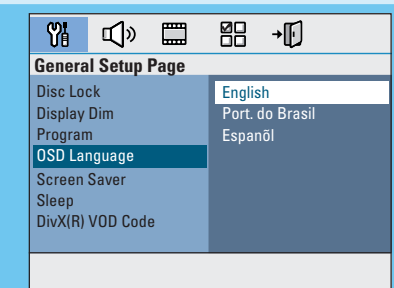

- 2 Press **▼** to select { OSD Language } and press **▶**.
- 3 Use **▼▲** keys to select a language option in the menu and press **OK** to confirm.
- 4 Press **SETUP** to exit.

Note The language set here is only for the menus that are shown on the TV while operating this Home Theater system, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preference Setup) available on this Home Theater System. Refer to the user manual for more information.